

User Guide



Transform™ Ultra

www.boostmobile.com



Consejo: Para encontrar esta guía para usuarios en español, por favor visita a www.boostmobile.com/espanol y haz clic en **ASISTENCIA**.

To find this user guide in Spanish, please visit www.boostmobile.com/espanol and click **ASISTENCIA**.

Table of Contents

Tip: Looking for something? If you don't see it in the headings listed here, try the Index on page 170.

Introduction	i
Your Device's Menu	i
Section 1: Getting Started	1
1A. Setting Up Service	2
Setting Up Your Device	2
Activating Your Device	5
Setting Up Your Voicemail	7
Getting Help	7
Section 2: Your Device	9
2A. Device Basics	10
Your Device	10
Viewing the Display Screen	14
Turning Your Device On and Off	17
Battery and Charger	17
Device Function Keys	20
Navigation and Customization	24
Displaying Your Phone Number	39

Entering Text Using the Android Keyboard	39
Entering Text Using the Samsung QWERTY Keyboard	42
Entering Text Using Swype	45
Creating a Google Account	50
2B. Making and Answering Calls	52
Making Calls	52
Dialing Options	52
Answering Calls	53
Missed Call Notification	54
Calling Emergency Numbers	54
In-Call Options	55
End-of-Call Options	56
Additional Calling Options	56
Saving a Phone Number	56
Finding a Phone Number	57
Dialing From the Contacts List	57
Using Favorites	58
Plus (+) Code Dialing	59
2C. Settings	60
Call Settings	60
Airplane Mode	62

TTY Use With Boost Service	62
Sound Settings	63
Display Settings	66
Language Settings	69
Location Settings	69
Security Settings	70
Android Development	77
Synchronizing Accounts	77
Accessibility Settings	81
Voice Input and Output Settings	81
Search Settings	81
2D. Call Log	83
Viewing Call Log	83
Call Log Options	84
Making a Call From Call Log	86
Saving a Number From Call Log	86
Altering a Number From Call Log	86
Erasing the Call Log	87
2E. Contacts	88
Creating a New Contacts Entry	88
Confirming Contact Synchronization	90

Contacts Menu Options	91
Contacts Entry Options	92
Editing a Contacts Entry	92
Adding a Number to a Contacts Entry	93
Editing a Contacts Entry's Number	93
Sending Contacts	94
Assigning a Picture to an Entry	94
Deleting Entries	95
Adding Entries to Your Favorites	95
2F. Calendar & Tools	96
Before You Begin	96
Calendar	96
Clock	102
My Files	104
Calculator	105
Updating Your Device Firmware	105
Updating Your Profile	107
Updating Your Samsung Software	108
2G. Services	109
Voice Dialer	109
Opening Menus With Voice Dialer	111

Text-to-Speech	111	Multimedia Messaging (MMS)	138
Search	112	Caller ID	143
2H. microSD Card	113	Call Waiting	143
Your Device's microSD Card and Adapter ...	113	Making a 3-Way Call	144
Connecting Your Device to Your Computer ..	115	Call Forwarding	145
microSD Card Settings	118	3B. Web and Data Services	146
Important Connection Information	118	Getting Started With Data Services	146
2I. Camera	120	Navigating the Web	147
Taking Pictures	120	Wi-Fi	154
Recording Videos	125	Email	157
2J. Bluetooth	129	Books	169
Turning Bluetooth On and Off	129	Using the Android Market	170
Using the Bluetooth Settings Menu	130	Boost Applications	172
Pairing Bluetooth Devices	131	3C. Entertainment: Mobile ID & Music ...	173
Sending Contacts via Bluetooth	132	Getting Started with Mobile ID and Music ...	173
Disconnecting Bluetooth Connection		Music	173
During an Active Call	133	YouTube	175
Section 3: Boost Service	135	3D. GPS Navigation	176
3A. Boost Service: The Basics	136	GPS Services	176
Voicemail	136	Google Maps	177
Text Messaging (SMS)	137	TeleNav GPS Navigator	178

Getting Driving Directions	179
Navigation	182
Section 4: Safety and Warranty Information	184
4A. Important Safety Information	185
General Precautions	185
Maintaining Safe Use of and Access to Your Phone	186
Using Your Phone With a Hearing Aid Device	187
Caring for the Battery	189
Radio Frequency (RF) Energy	190
Samsung Mobile Products and Recycling ..	192
Owner's Record	193
User Guide Proprietary Notice	193
4B. Manufacturer's Warranty	194
Standard Limited Warranty	194
Index.....	203

Introduction

This **User Guide** introduces you to Boost Mobile® service and all the features of your new device. It's divided into four sections:

- ◆ Section 1: Getting Started
- ◆ Section 2: Your Device
- ◆ Section 3: Boost Mobile Service Features
- ◆ Section 4: Safety and Warranty Information

Note: Because of updates in phone software, this printed guide may not be the most current version for your phone. Visit www.boostmobile.com/userguides to access the most recent version of the user guide.

WARNING: Please refer to the **Important Safety Information** section on page 185 to learn about information that will help you safely use your phone. Failure to read and follow the Important Safety Information in this phone guide may result in serious bodily injury, death or property damage.

Your Device's Menu

The following table outlines your device's main menu structure. For more information about using your device's menus, see "Navigation and Customization" on page 24.

From the Home screen, press  to open the menu:

- Add ()
- Wallpaper ()
- Settings ()
- Mobile ID ()
- Search ()
- More ()

Device menus with additional options ("sub-options") appear with  adjacent to the list entry.

Tap this onscreen button to reveal these additional options and features.

 > Add	
1: Shortcuts	
1: Applications 3: Contact 5: Direct message 7: Latitude 9: Settings	2: Bookmark 4: Direct dial 6: Directions & Navigation 8: Music playlist
2: Widgets	
1: Analog clock 3: Google Search 5: Latitude 7: Music 9: Power Control 11: Traffic 13: Tutorial #2 15: Tutorial #4 17: YouTube	2: Calendar 4: Home screen tips 6: Market 8: Picture frame 10: Rate Places 12: Tutorial #1 14: Tutorial #3 16: Tutorial #5
3: Folders	
1: New folder 3: Bluetooth received 4: Contacts with phone numbers 5: Google Contacts 6: Recent documents	2: All contacts 7: Starred contacts

4: Wallpapers	
1: Gallery 3: Live wallpapers	2: ID wallpapers 4: Wallpapers
 > Wallpapers	
1: Gallery	
2: ID wallpapers	
3: Live wallpapers	
4: Wallpapers	
 > Settings	
Wireless & networks	
1: Airplane mode	
2: Wi-Fi	
3: Wi-Fi settings	
1: Wi-Fi (On/Off 3: WPS button connection 4: Add Wi-Fi network	2: Network notification
4: Wi-Fi Direct settings	

1: Wi-Fi Direct (On/Off)	2: Configure Wi-Fi Direct
3: Status	4: Disconnect Wi-Fi Direct
5: Bluetooth (On/Off)	
6: Bluetooth settings	
1: Bluetooth (On/Off)	2: Device name
3: Discoverable (On/Off)	4: Scan for devices
5: <Bluetooth devices>	
7: USB connection	
1: Charging	2: Mass storage
3: Ask on connection	
8: VPN settings	
1: Add VPN	2: VPNs
9: Mobile networks	
1: 3G Data (On/Off)	
Call settings	
1: North American dialing (On/Off)	
2: International dialing	
3: DDTM (On/Off)	
4: TTY	

1: TTY Off	2: TTY HCO
3: TTY VCO	4: TTY Full
5: DTMF Tones	
1: Normal	2: Long
Sound	
1: Silent mode (On/Off)	
2: Vibrate	
1: Always	2: Never
3: Only in Silent mode	4: Only when not in Silent mode
3: Volume	
1: Ringtones	2: Media
3: Alarm	4: Notification
4: Phone ringtone	
5: Notification ringtone	
6: Audible touch tones (On/Off)	
7: Audible selection (On/Off)	
8: Screen lock sounds (On/Off)	
9: Haptic feedback (On/Off)	

Display	
1: Brightness	
2: Auto-rotate screen (On/Off)	
3: Animation	
1: No animations 3: All animations	2: Some animations
4: Screen timeout	
1: 30 seconds 3: 2 minutes 5: 30 minutes	2: 1 minute 4: 10 minutes
5: Keyboard timeout	
1: 3 seconds 3: 15 seconds	2: 6 seconds 4: Same as Screen timeout
6: Notification flash (On/Off)	
Location & security	
1: Use wireless networks (On/Off)	
2: Use GPS satellites (On/Off)	

3: Set up screen lock	
1: None 3: PIN	2: Pattern 4: Password
4: Visible passwords (On/Off)	
5: Select device administrators	
6: Use secure credentials (On/Off)	
7: Install from SD card	
8: Set password	
9: Clear storage	
Applications	
1: Unknown sources (On/Off)	
2: Quick launch	
3: Manage applications	
4: Running services	
5: Storage use	
6: Battery use	
7: Development	

- 1: USB debugging (On/Off)
- 2: Stay awake (On/Off)
- 3: Allow mock locations (On/Off)

Accounts & sync

- 1: Background data (On/Off)
- 2: Auto-sync (On/Off)

Privacy

- 1: Factory data reset

Storage

- 1: Total space
- 2: Available space
- 3: Mount/Unmount SD card
- 4: Erase SD card
- 5: Available space

Language & keyboard

- 1: Select language

1: English 2: Español

2: User dictionary

3: Swype (On/Off)

4: Swype

- 1: Language 2: Audio feedback (On/Off)
- 3: Vibrate on keypress (On/Off)
- 4: Enable tip indicator (On/Off)
- 5: Word suggestion 6: Auto-spacing (On/Off)
- 7: Auto-capitalization (On/Off)
- 8: Show complete trace (On/Off)
- 9: Speed vs. accuracy 10: Word choice window
- 11: Swype help 12: Tutorial
- 13: Version

5: Android keyboard (On/Off)

6: Android keyboard settings

- 1: Vibrate on keypress (On/Off)
- 2: Sound on keypress (On/Off)
- 3: Popup on keypress (On/Off)
- 4: Touch to correct words (On/Off)
- 5: Auto-capitalization (On/Off)
- 6: Show settings key
- 7: Voice input 8: Input languages
- 9: Quick fixes (On/Off) 10: Show suggestions (On/Off)
- 11: Auto-complete (On/Off)

7: Built-in keyboard settings

- 1: Auto-replace (On/Off)
- 2: Auto-cap (On/Off)
- 3: Auto-punctuate (On/Off)

Voice input & output

1: Voice recognizer settings

- 1: Language
- 2: SafeSearch
- 3: Block offensive words (On/Off)
- 4: Personalized recognition (On/Off)
- 5: Google Account dashboard

2: Text-to-speech settings

- 1: Listen to an example
- 2: Always use my settings (On/Off)
- 3: Default Engine
- 4: Install voice data
- 5: Speech rate
- 6: Language
- 7: Pico TTS

Accessibility

1: Accessibility

2: Talk Back

3: Power button ends call (On/Off)

Date & time

1: Automatic (On/Off)

2: Set date

3: Select time zone

4: Set time

5: Use 24-hour format (On/Off)

6: Select date format

About phone

1: System Updates

- 1: Update Firmware
- 2: Update Profile
- 3: Update PRL
- 4: Update Samsung Software

2: Status

- 1: Battery status
- 2: Battery level
- 3: My phone number
- 4: MSID
- 5: PRL Version
- 6: MEID
- 7: Network
- 8: Signal strength
- 9: Mobile network type
- 10: Service state
- 11: User name
- 12: Mobile network state
- 13: Wi-Fi MAC address
- 14: Bluetooth address
- 15: Up time

3: Battery use

4: Legal information

- 1: Open source licenses
- 2: Google legal
- 3: Privacy Alert from Boost Mobile

5: System tutorial

6: Model number
7: Android version
8: Baseband version
9: Kernel version
10: Build number
11: Hardware version
 > Switch ID
 > Search
 > More > Manage apps
 > More > Notifications
In Use Menu
1: Add call/Merge
2: End
3: Dialpad
4: Bluetooth
5: Mute/Unmute
6: Speaker
Quick Search Box
When the Quick Search Box is active, press  > Search settings to display the following options:
1: Google search

- 1: Show web suggestions (On/Off)
- 2: Use My Location (On/Off)
- 3: Search history (On/Off)
- 4: Manage search history (On/Off)

2: Searchable items

- | | |
|----------------------|--------------------------|
| 1: Web (On/Off) | 2: Apps (On/Off) |
| 3: Contacts (On/Off) | 4: Messaging (On/Off) |
| 5: Music (On/Off) | 6: Voice Search (On/Off) |

3: Clear shortcuts

WARNING: Device has a touchscreen display, please note that a touchscreen responds best to a light touch from the pad of your finger. Using excessive force or a metallic object when pressing on the touchscreen may damage the tempered glass surface and void the warranty. See “4B. Manufacturer’s Warranty” on page 194.

Section 1
Getting Started



1A. Setting Up Service

- ◆ Setting Up Your Device (page 2)
- ◆ Activating Your Device (page 5)
- ◆ Setting Up Your Voicemail (page 7)
- ◆ Getting Help (page 7)

Setting Up Your Device

1. Install the battery.

- Remove the battery from its packaging.
- Grasp the device firmly and locate the cover release latch.
- Place your fingernail in the opening and firmly “pop” the cover off the device (similar to a soda can).



- Insert the battery into the opening in the back of the device, making sure the connectors align. Gently press down to secure the battery.



- Position the battery cover over the battery compartment and press down until you hear a click.



2. Install the (optional) memory card.




3. Press and hold  to turn on the device.
- If your device is activated, it will turn on, search for Boost service and enter standby mode.



Unlocking Your Device Screen

- ▶ To unlock your phone from this screen, touch and drag the lock icon across the screen or slide the QWERTY keyboard out.

Unlock
Screen

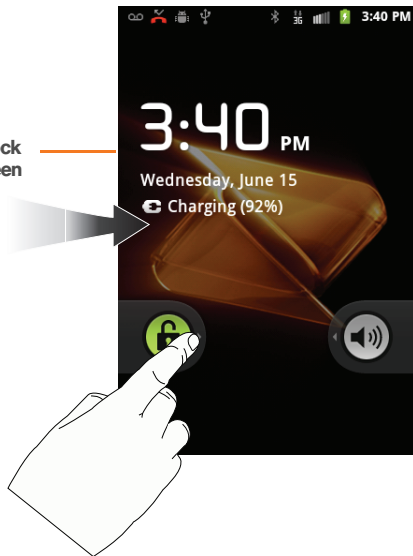

Activating Your Device

To activate your new phone, please refer to the “Activation Kit” documentation included in your original device packaging.

For additional support information visit us at:
www.boostmobile.com

– or –

Call Boost Customer Care at **1-888-BOOST-4U**
(1-888-266-7848).

Mobile ID

ID Packs are bundles of applications, ringtones, wallpapers, settings, and more. ID Packs are installed using an application called Mobile ID.

You can install as many as six ID packs including MyID at any one time, and you can easily switch from one ID Pack to another without losing any applications already installed.

The Boost Mobile ID Pack brings the best Boost applications and services in an easy to use experience. Manage your Boost Mobile Account; Keep up with email and text messages; Connect with friends on Facebook, MySpace and Hookt; and access popular applications and services like Telenav GPS Navigator, SCVNGR; Poynt; and popular websites like MTV, E!, Univision, CNN and many more.

It is not necessary to install a Mobile ID Pack in order to move forward with the activation process.

The screens you see are your MyID basic Android screens. These are the screens you will use unless you decide to install a Mobile ID at a later time.

For more information about installing a Boost ID pack at a later time, see “Switching ID Packs” on page 6. To view an example of My ID screens, see “Your Device” on page 10.

Installing Your First ID Pack

Note: Your device must be activated, your battery should be fully charged, and you should be in a network coverage area before you install an ID Pack.

1. Press  and tap  (**Mobile ID**).

2. On the **Choose Your ID** screen, tap **Get New**.
 - If the lock screen displays, unlock it by dragging the **Unlock** icon  to the right side of the screen.)
3. Touch an ID Pack on the **Mobile ID** screen.
4. Read the information screen for a description of the ID Pack and touch **Install**.
5. Touch **Agree** to accept the Terms & Conditions of the ID Pack.
6. If prompted, touch **Continue** on any following screens until you see the Downloading... progress icon in the upper-left corner of your screen.

Switching ID Packs

1. Press  and tap  (**Mobile ID**).
2. Tap an ID Pack to replace your current pack.
 - or –Tap **Get New** to install a new ID Pack and follow steps 4-8 of “Installing Your First ID Pack” on page 5.

Note: Your device must be activated, your battery should be fully charged, and you should be in a network coverage area before you install an ID Pack.

The **Boost ID** pack comes with wallpapers, ringtones, and applications such as Telenav GPS Navigator, SCVNGR, and Poynt.

Certain features of Mobile ID are subject to change. For the most up-to-date information about using Mobile ID, please visit www.boostmobile.com/id.

Making Your First Call

1. If the device is locked, touch and drag the lock icon to the right to unlock the device.
 - Press  to access the Home screen and touch  to access the onscreen keypad.
 - Use the onscreen dialpad to enter a phone number and touch .

WARNING: Device has a touchscreen display, please note that a touchscreen responds best to a light touch from the pad of your finger. Using excessive force or a metallic object when pressing on the touchscreen may damage the tempered glass surface and void the warranty.
(See “4B. Manufacturer’s Warranty” on page 194.)

Setting Up Your Voicemail

Your device automatically transfers all unanswered calls to your voicemail, even if your device is in use or turned off. You should set up your Voicemail and personal greeting as soon as your device is activated. Always use a password to protect against unauthorized access.

Note: Your device’s battery should have enough charge for your device to turn on and find a signal, set up your voicemail and make a call. You should fully charge your battery as soon as possible.

1. Tap  and then touch and hold **1**.
2. Follow the system prompts to:

- Create your password.
- Record your name announcement.
- Record your greeting.

Note: Voicemail Password

Boost strongly recommends that you create a password when setting up your voicemail to protect against unauthorized access. Without a password, anyone who has access to your device is able to access your voicemail messages.

Getting Help

Managing Your Account

Online: www.boostmobile.com

- Access your account information.
- Check your minutes used (depending on your Boost service plan).
- View and add money to your account.
- Enroll in Auto Re-Boost to make automatic payments.
- Purchase accessories.

- Shop for the latest Boost phones.
- View available Boost service plans and options.
- Learn more about data services and other products like games, ringtones, wallpapers, and more.

From Any Other Phone

- 1-888-BOOST-4U (1-888-266-7848).

Boost 411

Boost 411 gives you access to a variety of services and information, including residential, business and government listings, movie listings or showtimes, driving directions, restaurant reservations and major local event information. You can get up to three pieces of information per call, and the operator can automatically connect your call at no additional charge.

A per-call charge and standard airtime fee may apply depending on your plan.

1. Press  and then tap  >    .

Boost Accessories

To purchase accessories, go to www.boostmobile.com/accessories.

Section 2
Your Device



2A. Device Basics

- ◆ Your Device (page 10)
- ◆ Viewing the Display Screen (page 14)
- ◆ Turning Your Device On and Off (page 17)
- ◆ Battery and Charger (page 17)
- ◆ Device Function Keys (page 20)
- ◆ Navigation and Customization (page 24)
- ◆ Displaying Your Phone Number (page 39)
- ◆ Entering Text Using the Android Keyboard (page 39)
- ◆ Entering Text Using the Samsung QWERTY Keyboard (page 42)
- ◆ Entering Text Using Swype (page 45)
- ◆ Creating a Google Account (page 50)

Your Device



Key Functions

1. **Earpiece** lets you hear the caller and automated prompts.
2. **Front Camera** functions as the front facing camera lens.
3. **Status Bar Icons** provide information about your device's status and options, such as signal strength, ringer setting, messaging, signal strength, and battery charge.
4. **Display Screen** displays all the information needed to operate your device, such as the call status, the Contacts list, and the date and time.
5. **HOME Key** returns you to the Home screen. Press and hold to open the recently-used applications window.
6. **MENU Key** allows you to access your device's main functions menu: Add, Wallpaper, Settings, Switch ID, Search, and More(Manage apps, Notifications). While in a menu, touch to open a list of actions available from the current screen or onscreen option.
7. **SEARCH Key** displays the Quick Search box that can be used to search for a key term both on the phone or online. It's the ultimate search field (page 21).
 - During an active call, press to open additional call options such as: Contacts or Send msg.
 - For example, entering the word "Pa," will display any matching entries from your device's Contacts list, current device applications, online Android/Google apps, or from any online Web page via Google search.
 - Press and hold to launch **Voice Search** where you can initiate a Google™ search by verbally entering a text string. The device recognizes your spoken words and initiates a Web search.
8. **BACK Key** deletes characters from the display in text entry mode. When in a menu, pressing the Back key returns you to the previous menu, closes a dialog box, or exits an onscreen menu/option.
9. **Proximity/Light Sensor** This is typically used to detect when your face is pressed up against the LCD, such as during a phone call. Blinks red when

you receive a new voice message, prompting you to call your voicemail.

10. **Front Indicator Light (LED)** displays a device notification, charging status, or alert.
11. **Lock/POWER Key** lets you turn the device on or off, end a call, or turn off the LCD.
 - When the screen is turned off, press once to return to Screen lock mode.
 - While the device is unlocked and not on an active call, press and hold to display the Phone options menu (Silent mode, Airplane mode, Power off).

Landscape Phone Features

1. **QWERTY Keyboard** provides an alphanumeric character keyboard layout. Lets you enter numbers, letters, and characters, as well as navigate within menus.
2. **Shift Key** lets you toggle alphabet characters between mixed case, uppercase and lowercase. Character case remains as selected until the Shift key is pressed again.

3. **Fn Key** (Function) key , toggles to access the numbers/symbols atop each key on the QWERTY keyboard.




Landscape Mode

4. **Smiley Key** (when used with the  key) lets you access Smiley icons (Emoticons).
5. **Space/Search Key** lets you add spaces between words and characters when in text mode. Press and hold to display Google Search.
6. **Enter Key** lets you enter additional lines of text.

7. **Delete Key** deletes characters from the display in text entry mode.

Side View Phone Features

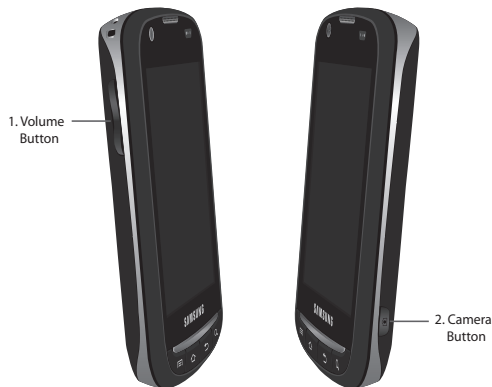

1. **Volume Button** adjusts the ringer volume in standby mode, the voice volume during a call, and media playback volume.

2. **Camera Button** activates the camera and camcorder and takes pictures and videos.

External Phone Views



1. **Earpiece** lets you hear the caller and automated prompts.

2. **microSD Card Slot** lets you use a microSD card to expand the memory of your phone. (A 2GB microSD card comes pre-installed in your Samsung Transform™ Ultra.)
3. **Microphone** allows other callers to hear you clearly when you are speaking to them.
4. **Charger/Accessory Jack** allows you to connect the phone charger or a USB cable (included).
CAUTION! Inserting an accessory into the incorrect jack may damage the device.
5. **Power Button** lets you turn the device on or off, or turn off the touchscreen display.
 - When the screen is turned off, press once to return to Screen lock mode.
 - While the device is unlocked and not on an active call, press and hold to display the Phone options menu (Silent mode, Airplane mode, Power off).
6. **Headset Jack** allows you to plug in an optional headset for convenient, hands-free conversations.
CAUTION! Inserting an accessory into the incorrect jack may damage the device.

Viewing the Display Screen

Your device's display screen provides information about the device's status and options. This list identifies the symbols you'll see on your device's display screen:

<i>Status Bar – Service Icons</i>	
	Activation Not Completed – Your automatic device activation process failed, please retry.
	Signal Strength – Shows your current signal strength. (More bars = stronger signal.)
	No Service – Your device cannot find a usable signal.
	Airplane Mode On – Your device will not make or receive calls or provide data access. Local applications are still available.
	3G Available – Boost 3G data service is available.
	3G Communicating – Boost 3G data service is active and communicating.

Status Bar – Status Icons

	Call in Progress – A voice call is in progress. Audio is routed through either the earpiece or external speaker.
	Bluetooth Call in Progress – A voice call is being routed through a Bluetooth headset.
	Missed Call – You have missed an incoming call.
	Call Muted – The device microphone has been muted.
	Speaker – Speakerphone feature is enabled.
	Battery Strength – Shows your current battery charge level. (Icon shown is fully charged.)
	Battery Charging – Shows your current battery charge level and indicates it is charging.
	Battery Low – Shows your current battery charge level is very low.
	Device Power Critical – Shows your current battery only has three percent power remaining and will immediately shut down.
	Bluetooth Active – Bluetooth technology is active and enabled.

Status Bar – Status Icons

	Bluetooth Connected – Bluetooth technology is active and communicating with an external device.
	GPS Location On – Device location feature is on and available for location-based services such as GPS Navigation.
	GPS Communicating – Device location feature is on and communicating.
	Wi-Fi Connected – Wi-Fi is connected, active and communicating with a Wireless Access Point (WAP).
	Wi-Fi Connection Issue – Wi-Fi is active but there is a communication issue with the target Wireless Access Point (WAP).
	microSD Unmounted – The internal microSD card has been disconnected from the device and is now ready for either removal or formatting.
	USB Connection – The device has detected an active USB connection.

Status Bar – Status Icons	
	Sign-in/Sync Error – There has been an issue with your connection to the Google server or you were not properly signed into your account. In order to use Google application or sync features, you must set up and sign into an active Google account.
	Alarm Event – Shows you have an upcoming alarm event.
	Silent Mode – All incoming sounds are turned off.
	Vibrate Only – The ringer is set to vibrate during Silent Mode.
	Data Synchronization – Application sync is active and synchronization is in progress for Gmail, Calendar and Contacts.
	Android OS Update Available – A new Android operating system update is available for download.
	System Updates Available – A new system update is available for download.
	Files Downloading – The device is downloading selected files.

Status Bar – Status Icons	
	Download Successful – A recent software download was successfully downloaded.
	Calendar Reminder – Shows you have a reminder of an upcoming Calendar event.

Status Bar – Messaging Icons	
	Text Message – You have new text (SMS) or multimedia (MMS) messages.
	Voicemail Message – You have new voicemail messages.
	New Email Message – Shows you have received either a new Internet email message or Microsoft® Outlook® email message via an Exchange server.
	New Gmail Message – Shows you have received a new Gmail Message.

Turning Your Device On and Off

Turning Your Device On

- ▶ Press and hold .

Once your device is on, it enters standby mode – the device's idle state. At this point, you are ready to begin making and receiving calls.

Turning Your Device Off

1. Press and hold  for two seconds until you see the powering-down animation on the display screen.
2. At the prompt, touch **Power off** > **OK**.

Your screen remains blank while your device is off (unless the battery is charging).

Battery and Charger

WARNING: Use only Samsung-approved batteries and chargers with your device. The failure to use a Samsung-approved battery and charger may increase the risk that your device will overheat, catch fire or explode, resulting in serious bodily injury, death or property damage.

Battery Capacity

Your device is equipped with a Lithium Ion (Li-Ion) battery. It allows you to recharge your battery before it is fully drained. The battery provides up to 7 hours of continuous talk time.

Tip: Watch your device's battery level indicator and charge the battery before it runs out of power.

At 10% of charge capacity, the battery icon blinks. At 3% of charge capacity, there are only a few minutes of talk time left, the device sounds an audible alert, displays a critical charge icon () , then turns off.

Important: Long backlight settings, searching for service, vibrate mode, browser use and other variables may reduce the battery's talk and standby times.

Installing the Battery

- See “Setting Up Your Device” on page 2.

Removing the Battery

1. Make sure the power is off so that you don't lose any stored numbers or messages.
2. Grasp the device firmly, locate the cover release latch, and then place your fingernail in the opening and firmly “pop” the cover off the device.
3. Carefully remove the battery from the device.




Charging the Battery

Keeping track of your battery's charge is important. If your battery level becomes too low, your device automatically turns off and you will lose any information you were just working on.

Note: Although the battery comes partially charged, it is recommended you fully charge the battery before using your device for the first time.

1. Connect the USB cable to the charging head.
2. Insert the USB cable into the device's Charger/Accessory jack.
3. Plug the charging head into a standard AC power outlet.

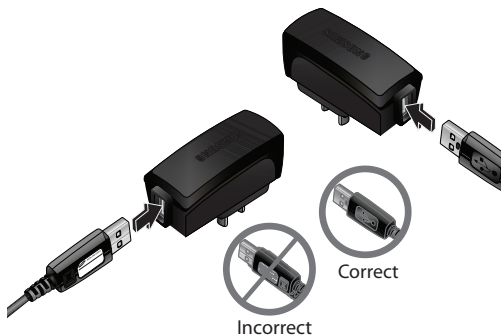

Always use a Samsung-approved desktop charger, travel charger, or vehicle power adapter to charge your battery.

- Plug the flat end of the charger into the device's charger jack and the other end into an electrical outlet. The device turns on with the screen locked and indicates both its charge state and percent of charge.

Your device is equipped with a Lithium Ion (Li-Ion) battery. The charger allows you to recharge your battery before it is fully drained.



Extending Your Battery Life

Active applications, light levels, Bluetooth usage and GPS functionality all act to drain your battery. The following is a list of helpful tips that can help conserve your battery power:

- Reduce your backlight on time. (See “Changing the Backlight Time Length” on page 67.)
- Turn Bluetooth off when not in use. (See “Turning Bluetooth On and Off” on page 129.)
- Turn Wi-Fi off when not in use. (See “Turning Wi-Fi On and Off” on page 154.)
- Deactivate the GPS when not needed. Most applications using this function will periodically query the GPS satellites for your current location; each query drains your battery. (See “Activating Location Mode” on page 176.)
- When taking pictures, do not use a flash unless you have to. (See “Camera Settings” on page 121.)
- When your device seems to slow down due to background applications (not properly closed or shutdown), the Task Manager lets you view the running applications and choose which to close to conserve the battery. (See “Manage Running Services” on page 75.)
- Do not wait until your battery is completely depleted before charging your device. Repeating this process of a complete discharge and recharge can over time reduce the storage capacity of any battery.

Device Function Keys

The Samsung Transform™ Ultra comes equipped with four main function keys that can be used on any screen.

Menu Key

The **Menu** key () activates an available menu function for the current screen or application. When on the Home screen, the following menu options are available:

- **Add** () adds one of the following functions to a selected screen: Shortcuts, Widgets, Folders, and Wallpapers. (See “Customizing Your Home Screen” on page 31.)
- **Wallpaper** () lets you to customize the current screen's wallpaper image. You can obtain this image from your installed ID wallpapers, your Pictures folder, or from any of the available images within the device's Wallpaper gallery. (See “Changing the Display Screen” on page 68.)

- **Settings** () provides quick access to the device's settings menu. (See “2C. Settings” on page 60.)
- **Mobile ID** () lets you quickly change the ID packet you're currently using. Touch an installed pack and the screens will automatically switch to the pack you choose. Touch **Get New** to download and install a new ID. (See “Mobile ID” on page 5.)

Tip: Press  and tap  to access the settings menu.

- **Search** () displays the Quick Search box that you can use to search for a key term both on the phone and online. (See “Search Key” on page 21.)
 - For example, entering the word “Pa,” will display any matching entries from your device's Contacts list, current device applications, or from any online Web page via Google search.
- **More** accesses the following:
 - **Manage apps** allows you to manage the downloaded applications, All applications,

applications on the SD card, or Running applications.

- **Notifications** () Allows you to open the notifications panel to provide more detailed information about the current onscreen notification icons. (See “Using the Notifications Panel” on page 38.)

Home Key


The **Home** key () takes you back to your Home screen.

Back Key

The **Back** key () returns you to the previously active screen. If the onscreen keyboard is currently open, this key closes the keyboard.

Search Key

The **Search** key () displays the Google Search box that can be used to search for a key term both on the device and online. In some instances, this key opens a search box specific only to the current application.

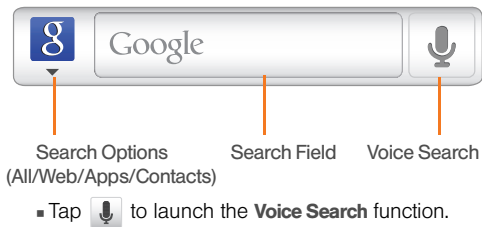

Using Your Device to Search

Use the **Google Search** box to manually search for a term on both your device and on the Web.

1. Press  to launch the **Google Search** box.
2. Tap  to select a search area.

- **All** searches your device, the Web, and the Android Market for your search term.
- **Web** searches for your term only on the Web using the Google search engine.
- **Apps** searches for your term only within the Android Market.
- **Contacts** searches for your term only within your current Contacts entries.



- Search preferences and settings can be configured to display suggestions in a different manner.

Note: To hide the onscreen keyboard and see more of your search matches, press .

3. Tap a match from the list of suggestions, phone search results, or previously chosen search matches. Once touched, the item opens in the appropriate application.

– or –

Touching **Voice Search** () lets you speak into your device's microphone to enter a search term.

To search the phone and Web by entering text:

1. Press  to launch the **Google Search** box.

Note: There might be instances within an application where pressing  reveals only an application-specific search. Press  twice to open the Quick Search box.

2. Use either the QWERTY or onscreen keyboard to enter your search term. (See either “Entering Text Using the Android Keyboard” on page 39 or

“Entering Text Using the Samsung QWERTY Keyboard” on page 42.)

- As you type, matching items on your device and matches from Google's Web search are added to the onscreen list of previously chosen search results.
- Search preferences and settings can be configured to display suggestions in a different manner. (See “Search Settings” on page 81.)

Note: To hide the onscreen keyboard and see more of your search matches, press .

3. Tap a match from the list of suggestions, phone search results, or previously chosen search matches. Once touched, the item opens in the appropriate application.

To search the phone and Web using Voice Search:

1. Press  and tap  (microphone icon on the side of the **Google Search** box).

Note: Tapping  in an application's search box searches the application by voice, not the Web.

2. From the open dialog, say what you want to search for.

3. Once complete, the Voice Search application analyzes your spoken words and displays a list of matching keyword terms.

Note: It is recommended that you use this feature in a quiet room. Loud ambient or background noises can confuse the application and result in inaccurate search results.

To use additional Voice Search functions:

- ▶ From an open Voice Search dialog, speak the following words to access additional features:
 - **Voice actions** allows you to search the web by speaking the search parameters.
 - **Send text** allows you to open the Messaging screen.
 - **Navigate to** allows you to receive directions via Google™ Maps. Use either an Address name, Business name, business type, or other navigation information to get the desired directions.
 - **Call** allows you to automatically dial the number of a business or location.
 - For example, say, “johnny’s pizzeria.”

- **Send email** allows you to open your email account and compose a new email message.
- **Map of** allows you to view a map of an area via Google™ Maps. Use either an Address name, Business name, zip code, or other navigation information.
- **Go to** allows you to navigate to any component of your device.
- **Note to self** allows you to send a message to yourself.
- **Directions to** allows you to receive a list of websites that contain the spoken address via Google™. Use an Address name for the desired result list.

Navigation and Customization

The Samsung Transform™ Ultra is a touch-sensitive device which allows you to not only select an onscreen option with a single tap, but also scroll through long menu lists. Simply slide up and down through the display with your fingertip.

Tip: Some menu options are also accessed by pressing and holding an onscreen item, such as a Contact entry from the Contacts tab.

Home Screen Overview

The Home screen is the starting point for many applications and functions, and it allows you to add items like application icons, shortcuts, folders, or widgets to give you instant access to information and applications.

This is the default page and accessible from any menu by pressing .

- **Status bar**, located at the top of the screen, displays both Notification and Status icons.



- **Notification area** displays icons associated with end-user notifications such as: email messages, calls (missed, call in progress), new voicemail, upcoming events, a USB connection, and text/MMS

messages. (See “Using the Notifications Panel” on page 38.)

- These notifications appear at the top-left of the screen (within the Status bar) and display important user information.
- This information can be accessed by either swiping down from the Status bar (page 38) or by accessing the Notifications panel  > **More>** **Notifications** ().
- **Status area** displays icons associated with the status of the device such as communication, coverage, Bluetooth and Wi-Fi communication, battery levels, GPS, etc.
- **Home Screen** is a customizable screen (#3) that provides information about notifications and device status, and allows access to application widgets.
- **Extended Home Screens** extend beyond the current visible screen width to provide more space for adding icons, widgets, and other customization features.
 - There are five available screens, each of which may be populated with its own shortcuts or widgets.

- Press  to access the main Home screen which appears as the default “page” on the device and then slide your finger horizontally across the screen to go to the left or right extended screens. There are four additional screens on either side of the main Home screen.
- Think of it as having a desktop so wide that your screen can only display a portion at a time.

Tip: While on an extended Home screen, press  to return to the main Home screen.

Note: Both the status bar and primary shortcuts are visible across all screens (Home and Extended).

Screen #3 is the Home screen.

- **Google search** is an onscreen Internet search engine powered by Google™. Touch  to access the Voice Search feature where you can verbally enter a search term and initiate an online search.
- **Widgets** are self-contained onscreen applications (not shortcuts). These can be placed onto any of the available screens (Home or Extended). (See “Adding and Removing Widgets” on page 33.)

- **Shortcuts** are icons that launch available device applications such as Voicemail, Contacts, Phone, Email, Alarm Clock, etc. These function the same as shortcuts on your computer.

- Although some are already found on the Extended Home screens, the majority can also be found within the Applications tab.
- Shortcuts can be pulled out from this tab or pulled into it (removed from an Extended Home screen). (See “Creating Shortcuts” on page 31.)

- **Page Navigation** are a visual indication of the currently active page. The onscreen dots (located at the bottom left and right of the screens) indicate your current page location.

- When on the Home screen, two dots display at both locations (this indicates there are two pages at either side of the current page).
- Touch and hold  to reveal the Quick Screen Access. Tap a preview to launch the selected screen.



Pages on left Quick Screen Access (touch and hold) Pages on right

- **Application tab** () houses all of your available applications. Some of these applications also exist as Widgets. Some Widgets are placed onto an available screen. Some sample widgets are:
 - **Phone** () launches the phone-related screen functions (Phone, Call log, Contacts, and Favorites.)
 - **Contacts** () launches the Contacts-related screens (Phone, Call log, Contacts, and Favorites).

- **Email** () launches the email application that manages both Internet-based and Microsoft® Outlook® (Exchange Server-based) email accounts.

Using the Applications Tab

All of your device's applications are located within the Applications tab. This tab houses shortcuts to your currently available applications.

Note: This tab houses all default and downloaded applications (installed from Android Market or from the Web).

1. Press  and tap  to open the tab loaded with every available local application.
 - Press  to close the Applications screen.
2. Scroll through the list and tap an icon to launch the associated application.
 - The screen contains device applications such as **Browser, Calculator, Camera, Email, Gallery, Market, Navigation, Phone, Settings, Voice Search, YouTube**, and much more.



Applications

The following is a listing of some sample applications available via the Applications tab.

Note: Applications that appear on the Home Screens will depend on which ID Pack you choose to install.

<i>Application Icons</i>	
	Books – Allows you to purchase and download ebooks from the Google ebooks Website.
	Browser – Launches the Web browser (page 148). The browser is fully optimized and comes with advanced features to enhance Internet browsing on your device.
	Calculator – Launches the onscreen calculator application (page 105).
	Calendar – Launches the Calendar applications that syncs itself to either your Google or Exchange Server (Microsoft® Outlook®*) calendar (page 96). Events can only be synced to a managed account (page 77).
	Camera – Launches the built-in camera (page 120).

<i>Application Icons</i>	
	Clock – Accesses the alarm and media application screen (page 102).
	Contacts – Displays the Contacts tab listing current contacts, synced from either your Google or Microsoft® Outlook® account (page 88). Contacts can only be synced to a managed account (page 88).
	Downloads – Allows you to view your downloaded applications.
	Email – Provides access to both your Microsoft® Outlook® (Exchange Server-based) email and Internet email accounts (such as Google, Yahoo, etc). (page 161).
	Gallery – Displays a Gallery of camera images and video stored in the microSD card (page 122).
	Gmail – Provides access to your Gmail account (page 158).
	Google Search – Provides an onscreen Internet search engine powered by Google™.

<i>Application Icons</i>	
	Latitude – Lets you see your friends' locations and share yours with them. The application also lets you See your friends' locations on a map or in a list.
	Maps – Launches a Web-based dynamic map that helps you find local businesses, locate friends, view maps and get driving directions (page 177).
	Market – Browse and search for applications on Android Market (page 170).
	Messaging – Provides access to your text messaging application (SMS) (page 137).
	Mobile ID – Mobile ID delivers the very best applications for your phone, hand-picked by major ID partners, in one easy-to-use pack. Mobile IDs are free to download and install.
	Music – Launches the built-in Music Player (page 173).
	My Files – Lets you view supported image files and text files on your microSD card (page 104).

<i>Application Icons</i>	
	Navigation – Launches a built-in GPS feature, giving you access to a number of location-based services (page 176).
	Phone – Access the phone dialpad (page 52).
	Places – Allows others to find your business on local search results using either Google Search or Google™ Maps.
	Settings – Access the device's built-in Settings menu (page 60).
	Talk – Launches a Web-based Google Talk application that lets you chat with family and friends over the Internet for free.
	ThinkFree Office – A Microsoft® Office compatible office suite that provides a central place for managing your documents online or offline.
	Voice Dialer – Launches your device's built-in automatic speech recognition (ASR) software, called Voice Control, to dial a phone number in your Contacts or to launch phone functions (page 109).

Application Icons

	Voice Search – Launches your device's built-in automatic speech recognition (ASR) software and initiates a Google search based on the recognized text (page 112).
	Voicemail – Allows you to access voicemail messages (page 136).
	YouTube – Launches the YouTube webpage via the Browser (page 175).

Note: The Email application includes access to both Exchange Server-based email (Microsoft® Outlook®) and other Internet-based email providers such as Yahoo! Mail.

Customizing Your Home Screen

You can customize your Home screen by doing the following:

- **Creating Shortcuts**
- **Adding and Removing Widgets**
- **Repositioning Widgets**
- **Creating Folders**
- **Changing the Background (Wallpaper)**

Creating Shortcuts

Shortcuts are different than the current Home screen Widgets that only launch an application. Shortcuts activate a feature, action, or launch an application.

Note: To move a shortcut from one screen to another, delete it from its current screen, activate the new screen, and then add the shortcut. Or touch and hold the shortcut and drag it to the new screen.

To add a shortcut from the Applications tab:

1. Press  to activate the Home screen.
2. Select a location (screen) for your new shortcut by scrolling across your available screens until you reach the desired one.
(See “Home Screen Overview” on page 25.)
3. Tap the **Applications** () tab to reveal all your current applications. By default, the applications are listed in a Grid view.
4. Scroll down through the list and locate your desired application.




5. Touch and hold the onscreen icon. This creates an immediate shortcut of the selected icon and closes the Applications tab. The new shortcut then appears to hover over the currently active screen.

Note: The same shortcut can be added to any of the available screens (Home or Extended). The application you add to the screen will still appear within the **Applications** tab.

6. While still holding the onscreen icon, position it on the current screen. Once complete, release the screen to lock the shortcut into its new position.

To add a shortcut using the Add to Home screen:

1. Press  to activate the Home screen.
2. Touch and hold on an empty area of the screen.
3. From the **Add to Home screen** window tap **Shortcuts**.
4. Tap a selection from the available list:
 - **Applications**
 - **Bookmark**
 - **Contact**
 - **Direct dial**
 - **Direct message**
 - **Directions & Navigation**
 - **Latitude**
 - **Music playlist**
 - **Settings**

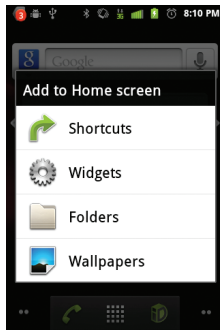

5. Follow the onscreen instructions to add the new shortcut to your current Home screen.

To delete a shortcut:

1. Press  to activate the Home screen.
2. Touch and hold the desired shortcut. This unlocks it from its location on the current screen.
3. Drag the icon over the Delete tab () and release it.



Adding and Removing Widgets

Widgets are self-contained applications that reside in either your Applications tab or on the Home or Extended screens. Unlike a shortcut, this widget appears as an onscreen application.

Note: To move a widget from one screen to another, it must first be deleted from its current screen. Activate the new screen, and then add the widget.

To add a Widget:

1. Press  to activate the Home screen.
2. Touch and hold on an empty area of the screen.
3. From the **Add to Home screen** window tap **Widgets**.
4. Tap an available widget to place it on your current screen.
 - Choices include: **Analog clock, Calendar, Google Search, Home screen tips, Latitude, Market, Music, Picture frame, Power Control, Rate Places, Traffic, Tutorial #1, Tutorial #2, Tutorial #3, Tutorial #4, Tutorial #5, and YouTube.**

To remove a Widget:

1. Touch and hold a widget until you can move it around on the screen.
2. Drag the widget over the **Delete** tab () and release it.
 - As you place the widget into the Trash, both items turn red.

- This action **does not** delete the widget, just removes it from the current screen.

To place a widget onto a different screen:

1. Touch and hold the widget until it becomes transparent.
2. Drag it to the edge of your screen.
3. Slowly drag it past the edge of the screen until it turns light blue.
4. Add the widget to the new screen.
5. Repeat these steps to continue moving it to other adjacent screens.

Creating and Managing Folders

Folders are located on any of the three available screens and contain both files (such as data and images) and Contact or entries.

To create a folder onscreen:

1. Press  to activate the Home screen.
2. Touch and hold on an empty area of the screen.
3. From the **Add to Home screen** window tap **Folders**.

4. Tap an available folder type to place it on your current screen.
 - Choices include **New folder**, **All contacts**, **Bluetooth received**, **Contacts with phone numbers**, **Google Contacts**, **Recent documents**, or **Starred contacts**.

Note: Starred contacts are those Contact entries tagged as very important.

Accessing Recently-Used Applications

Your device keeps a running list of your six most recently used applications.


1. Press and hold  to open the recently-used applications window.
2. Tap an icon to open an application.

Changing the Screen Orientation

The Samsung Transform™ Ultra is capable of automatically changing the orientation

of some onscreen content. The device's built-in accelerometer senses movement and changes its angle/orientation.

This allows the device to change the onscreen content (images, video, Web pages) to properly display based on the current angle (some screens may not automatically change).

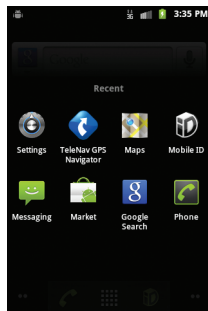

manually enabled to change the orientation for all applicable screens when rotation is detected.

Note: An example of a screen that does not automatically re-orient is the Home screen. This screens requires you slide out the QWERTY keyboard.

An example of a screen that automatically re-orients by moving the device is the Contacts screen. This only requires you to turn the device on its side.

To manually activate the auto-rotate feature:

1. Press  >  and tap  > **Display**.
2. Scroll down and tap **Auto-rotate screen**. A checkmark indicates the feature is enabled.
 - Clear the **Auto-rotate screen** checkmark to disable this automatic orientation adjustment.

Menu Navigation

There are two ways to navigate through a menu:

- Using your finger (page 37)
- Using the keyboard's navigation/arrow keys (page 37)



Although most screens will change orientation once the QWERTY keyboard is opened, this feature can be


Selecting Menu Items

As you navigate through the menu, you activate menu options by tapping the onscreen entry. Select any option by tapping it.

1. Tap an onscreen icon to launch a menu or feature.
2. Scroll your finger across the screen to navigate through a menu list (bottom up or top down).
3. Tap a menu item to make a selection or activate a field.

To launch the dialpad:

- Tap  from the Home screen.

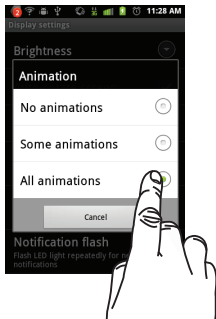

Selecting Menu Items Using Your Keyboard

Access the QWERTY keyboard and locate the navigation keys, located at the right of the keyboard.

As you navigate through a menu with these navigation keys, options are highlighted. Select any option by pressing a directional arrow from the QWERTY keyboard and moving the onscreen selection, highlighting it and pressing **OK**.

- If the option is numbered, you can select it by pressing the corresponding number on the phone's dialpad.

Viewing the Previous Menu

To go to the previous menu:

- Press .


To return to Home screen:

- Press .

Using Context Menus

Context menus (also called popup menus) contain tools that apply to a specific item on the screen. They function similar to those menu options available on your computer when you use a right-mouse click.

You open a context menu by touching and holding an onscreen item.

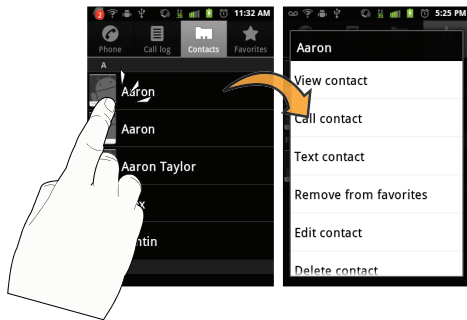

Note: Not all items have context menus. If you touch and hold an item that has no context menu, nothing happens.

Using the Notifications Panel

The Notification area indicates new message events (data sync status, new messages, calendar events, call status, etc). You can expand this area to provide more detailed information about the current onscreen notification icons.

1. Touch and hold the Status bar, and then slide your finger down the screen.
2. Tap a notification entry to open the associated application.

Note: The Notifications panel can also be opened on the Home screen by pressing  >  > **More** > **Notifications**.



Displaying Your Phone Number

- ▶ Press  >  and tap **Settings** > **About phone** > **Status**. (Your phone number and other information about your device and account is displayed.)

Entering Text Using the Android Keyboard

Selecting a Text Input Mode

Note: Some characters and types, such as some symbols and emoticons, are not accessible from the onscreen keyboard.


1. From a screen where you can enter text, tap the input field to reveal the onscreen keyboard.
2. Select one of the following Text mode options:
 - **ABC** to use alphabetic characters from the onscreen keyboard (See page 41.)
 - **?123** to enter numbers by pressing the numbers on the onscreen keyboard. (See page 41.)

Tip: When entering text, tap  to change letter capitalization.

- **Voice Input**  allows the device to use its built-in voice recognition software to hear your voice and transcript it directly into text.

Android Keyboard Overview

- **Entry field:** a field where text, numbers, or other characters can be entered.
- **Suggested Word choices:** a row of selectable word choices based on the current set of entered text. Tap an onscreen choice to insert the selection into your text entry field at the current cursor position. Tap the gray left and right arrows on this field to reveal additional word choices.
- **Delete:** deletes characters from the entry field.
- **CAPS/ALT:** When in **ABC** mode, this key changes the capitalization of the subsequent entered characters. When in **?123** mode, this key can show additional symbol characters.
 - Capitalization in **Abc** mode can be altered by using the Caps button.
 - Symbols used in **?123** mode can be enhanced by accessing additional symbol characters.

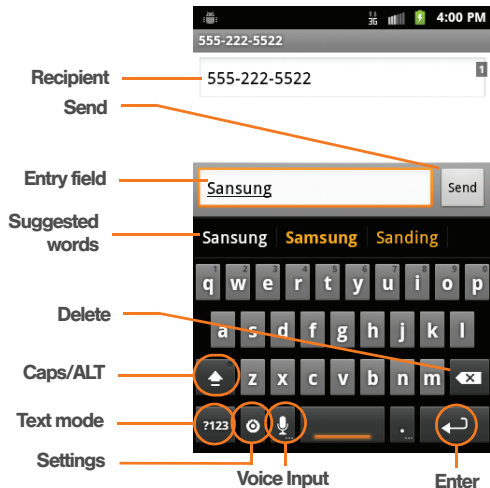

- **Text mode:** There are two available modes: **ABC** and **?123**.

- **ABC** mode contains only letters. Text mode button indicates .
- **?123** mode contains only numbers and symbols. Text mode button indicates .
- **Voice Input mode:** Tapping this button activates the built-in microphone and voice recognition software.
 - Speak clearly into the microphone. When complete, your spoken words are recognized, converted to text, and inserted into your current cursor position.

Note: It is recommended that to avoid incorrect conversion, you use this feature in an area relatively free from background noises.

ABC Mode

In ABC mode, you can enter only letters from the on-screen keyboard. The text mode key shows .

1. Select the **ABC** mode (). See “Selecting a Text Input Mode” on page 39.
 - Capitalization in **ABC** mode can be altered by using the Caps button.
 -  next character is lowercase.

-  only the next character is uppercase.
-  all subsequent characters are uppercase.

Note: A green dot on the shift key above indicates the keyboard is set to “Shift-Lock” where all characters are entered in uppercase.

2. Tap the corresponding onscreen keys to begin typing your word.
 - If you make a mistake, tap  to erase a single character. Touch and hold  to erase all text.

By default, the first letter of an entry is capitalized and the following letters are lower case. After a character is entered, the cursor automatically advances to the next space after two seconds or when you enter a character on a different key.

Entering Numbers and Symbols

By using the onscreen keyboard in Portrait mode, some symbols are not available (such as Emoticons or Smileys). In **?123** mode, you can only enter numbers and symbols from the onscreen keyboard. The text mode key shows .

To enter numbers:

1. Tap  to enter the ?123 mode.
2. Tap the appropriate numeric key.

To enter symbols:

1. Tap  to enter the ?123 mode.
2. Tap the appropriate symbol key.
– or –

Tap  to select from additional symbol characters. The key shows  when the additional character set is active.

Entering Text Using the Samsung QWERTY Keyboard

Accessing the QWERTY Keyboard

The Samsung Transform™ Ultra has a full, slide-out QWERTY keyboard. The keyboard is located beneath the display screen and is accessed by sliding it open. This orients the device's display to Landscape (widescreen) mode.

With the QWERTY keyboard, you can type letters, numbers, punctuation, and other special characters into text entry fields or other applications as easily as with your computer.

To open the device and access the keyboard:

1. Rotate the device 90 degrees counter-clockwise.
2. Slide the top section of the device up to open, as shown in the illustration. When you slide the device open, the display rotates from a vertical viewing mode (Portrait) to a horizontal viewing mode (Landscape).



To reveal additional QWERTY text editing options:

1. Touch and hold an active text entry field.
2. From the **Edit text** context menu, tap an available function:
 - **Select word** highlights the characters of the last entered word in the text message field.
 - **Select all** highlights all characters in the text message field.
 - **Input method** provides additional text input methods, if available. The default is the **Swype keyboard**.
 - **Add “device” to dictionary** adds the currently highlighted word to your device’s dictionary.

Using the Keyboard

In this section we’ll cover the steps necessary to enter text using the QWERTY keyboard. Using your device’s QWERTY keyboard is just like using any standard computer keyboard.

The following keys perform special functions when entering text:

	FN: Allows you to use alternate characters displayed at the top of the QWERTY keys. Examples: \$, @, #, !
	Shift: Changes the text input mode among Upper/Lower/Mixed case mode.
	Smiley: Launches the Smileys page. Scroll down and tap an entry from the extensive list of emoticons.
	Space: Inserts an empty space.
	OK/Enter: Selects or accepts a currently highlighted option.
	Delete: Deletes the previous character, similar to the backspace key on a computer keyboard.
	Return: Inserts a new line into the text field.

From a text entry screen, use the keyboard to enter different character types. Select one of the following character types:

- **Letters** to enter the alphabetic characters associated with each key. (See page 44.)

- **Numbers** to enter numbers by pressing the numbers on the keyboard. (See page 44.)
- **Symbols** to enter symbols. (See page 44.)
- **Smileys** to enter smileys or “emoticons.” (See page 44.)

Tip: When entering text, press  to change letter capitalization (Abc > ABC > abc).

The keyboard provides dual-use keys labeled with alphabetic characters on the lower half and numbers and symbols on the upper half. Press the key corresponding to the blue character you want to enter.

Entering Letters

The first letter entered (of a field or new sentence) is always an initial uppercase letter. By default, text is entered in lowercase characters unless altered by pressing .

To enter uppercase and lowercase characters:

1. Press  to make the next character uppercase. Characters revert back to lowercase after the next character is typed.
 - or –

Press  twice to make all subsequent characters uppercase (all new characters are in uppercase).

- Pressing  cycles through the capitalization modes (all lowercase, initial uppercase, and all uppercase).

2. Press the corresponding keys.

Entering Numbers

The keyboard's number keys are alternate characters located along the top on the QWERTY keyboard.

- Press  and then press the key corresponding to your desired number choice. (Press  twice to enter consecutive numbers or alternate characters.)

Entering Symbols and Smileys

Most symbols and punctuation marks appear as alternate characters above the primary letters and numbers on the QWERTY keyboard. To access these symbols, press  and then press the appropriate key.

Smileys (emoticons) are accessed by pressing  and then selecting an image from the **Insert smiley** page that is then inserted at your current cursor position.

To enter symbols:

1. Position the cursor where you want the symbol to display within your message.
2. Press  and then press the key corresponding to the symbol you want to insert.
– or –
Press  and tap an onscreen symbol.

To enter “smileys” (emoticons):

1. Position the cursor where you want the symbol to display within your message.
2. Press  to open the onscreen smiley page.
3. Select a smiley by tapping the onscreen icon.

Entering Text Using Swype

Swype™ is a unique text input method that allows a user to enter a word by sliding a finger from letter to letter, lifting only between words. It uses error-correcting algorithms and a language model to guess the word intended. It also includes a tapping predictive text system in the same interface.

The onscreen keyboard options are different between the Android keyboard and Swype onscreen input methods.

Enabling and Configuring Swype

The onscreen Android keyboard is the default touchscreen input method on the Samsung Transform™ Ultra. This method of text input is similar to a normal keyboard.

You must enable Swype as the Text Input method before you can use it.

To enable Swype:

- Press  >  and tap  > **Language & keyboard** > **Swype**.

To configure Swype settings:

1. Press  >  and tap  > **Language & keyboard**.
2. Tap **Swype settings**.
3. Scroll down the list of available options and touch a corresponding entry to either activate or configure the settings.
 - **Preferences** allows configuration of the Swype text input and feedback parameters:
 - **Language:** allows you to select the current text input language. Default language is **US English**.
 - **Audio feedback:** turns on/off sounds generated by the Swype application during use.
 - **Vibrate on keypress:** activates a vibratory sensation as you enter text via the onscreen keypad.
 - **Enable tip indicator:** turns on an onscreen flashing indicator that provides helpful usage information.

■ **Swype Advanced Settings** provides access to Swype advanced options:

- **Word suggestion** uses a built-in word database to predict and suggest words while entering text in Swype.
- **Auto-spacing:** automatically inserts spaces between words. When you finish a word, just lift your finger to start the next word.
- **Auto-capitalization:** automatically capitalizes the first letter of the first word in a sentence.
- **Show complete trace:** determines whether to show the entire path formed by the letters you are sliding over to form a given word.
- **Speed vs. accuracy:** sets how quickly Swype responds to your onscreen input. Do you prefer more accurate text entry or is your desire for speed? Move the slider between **Fast Response** (speed) or **Error Tolerance** (accuracy) and touch **OK**.
- **Word choice window:** sets how often the word choice selection window appears onscreen. Move the slider between **Never** or **Always** and touch **OK**.

- **Help** provides access to Swype help.
 - **Swype help:** to access Swype Help information and user manual.
 - **Tutorial:** provides access to onscreen Swype tutorials.
- **About** displays the current software version.

Text Entry tips:

- To create double letters like **pp** in "apple," draw a "squiggle" on the P key.
- To enter punctuation, touch and hold a key to view a punctuation menu and make a selection.
- To enter contractions, move your finger over the apostrophe.
- To correct a misspelled word, double-tap on the word you want to change and then tap  to erase a single character. Touch and hold  to erase an entire word.

Selecting a Text Input Mode in Swype

Note: Certain characters and types, such as some symbols and emoticons, are not accessible from the onscreen keyboard.

1. From a screen where you can enter text, tap the input field to display the onscreen keyboard.
2. With Swype as your text input method, select one of the following text mode options:
 - **123 ABC** to use Swype with alphanumeric characters from the onscreen keyboard.


Tip: When entering text, tap  to toggle capitalization.

- **SYM** (Symbol) to enter symbols from the onscreen keyboard.

Important: Even if Swype is enabled from within the Language & keyboard menu, you must enable Swype from the Select Input Method context menu.

Swype Keyboard Overview

- **Entry field** a screen area where text, numbers, or other characters are entered.
- **Delete** deletes characters from the entry field.

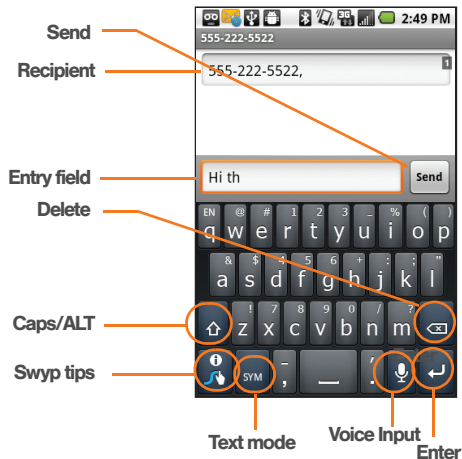

- **CAPS/ALT**: When in **ABC** mode, this key changes the capitalization of the subsequent entered characters. When in **SYM** mode, this key displays additional symbol characters.
- **Text Input mode**: There are two available modes: **123 ABC** and **SYM**.
 - **123 ABC** mode contains only letters. In this mode, the text mode button displays **SYM**.
 - **SYM** mode contains only numbers and symbols. In this mode, the text mode button displays **123 ABC**.
- **Swype tips**  Tapping this button displays the Swype tips and tutorial screen.
- **Voice Input mode**: Tapping this button activates the built-in microphone and voice recognition software.
 - Speak clearly into the microphone. When complete, your spoken words are recognized, converted to text, and inserted into your current cursor position.

123 ABC Mode

In **123 ABC** mode, you can enter only letters and a few common punctuation marks from the on-screen keyboard. The text mode key shows .

While in this mode, the text mode key displays .

1. Select the **123 ABC** mode (showing letters and numbers on the onscreen keys).
 - Capitalization in this mode can be altered by using the Caps button.
 -  first character is uppercase
 -  all characters are uppercase
 -  next character is lowercase
2. Swipe your finger continuous (without lifting your finger) over the letters to form a word.
 - If you make a mistake, tap  to erase a single character.
 - Touch and hold  to erase an entire word.

By default, the first letter of an entry is capitalized and the following letters are lower case. After a word is entered and you lift your finger, the cursor automatically adds a space after the word.

Entering Numbers and Symbols

By using the onscreen keyboard in Portrait mode, some symbols are not available (such as Emoticons or Smileys). In SYM mode using Swype, you can only enter symbols and numbers from the onscreen keyboard. The text mode key shows .

While in this mode, the text mode key displays .

To enter numbers and symbols:

1. Tap  to enter the SYM (symbol) mode.
2. Touch the key for the number or symbol you want to enter.
3. Tap  to enter alternate symbols displayed at the top of the key.

To enter text:

This example shows a user entering the word “there”. Put your finger down on the “t”, and without lifting, glide it to the “h”, and then to the “e”, and then over to the “r”, and back to the “e”. When complete, lift your finger off the screen to allow the device to determine the closest word match.

Note: If multiple word choices exist for your Swype entry, an onscreen popup appears to provide additional word choices.

1. Touch an onscreen character, and without lifting your finger, drag your fingertip to the next character in the word.
2. Repeat this process until the desired characters are traced.
 - If prompted, select from an onscreen list of possible word matches. This occurs when the keystrokes generates more than one possible word match.

Touch  for Swype tips and follow the onscreen information.

Creating a Google Account

You will need a Google account to access several device features such as Gmail, Google Talk, and the Android Market applications. Before you are able to access Google applications, you must enter your account information. These applications sync between your device and your online Google account.

Note: A Google account can be created from either your device or from a computer.

1. From a computer, launch a Web browser and navigate to www.google.com.
2. On the main page, click **Sign-in > Create an account now**.
3. Follow the onscreen prompts to create your free account.
4. Look for an email from Google, and respond to the new email to both confirm and activate your new account.

Signing In to Your Google Account

1. Launch an application that requires a Google account (such as Android Market or Gmail).
2. Click **Next > Sign in**.

Note: If you do not already have a Google account, tap **Create** and follow the onscreen prompts to create your new account.

3. Tap the **Username** and **Password** fields and enter your information.

4. Create a new Gmail username by entering a prefix for your **@gmail.com** email address.

– or –

Tap **Sign in**. Your device then communicates with the Google servers to confirm your information.

For additional information about synchronizing accounts, see “Synchronizing Accounts” on page 77.

2B. Making and Answering Calls

- ◆ Making Calls (page 52)
- ◆ Dialing Options (page 52)
- ◆ Answering Calls (page 53)
- ◆ Missed Call Notification (page 54)
- ◆ Calling Emergency Numbers (page 54)
- ◆ In-Call Options (page 55)
- ◆ End-of-Call Options (page 56)
- ◆ Additional Calling Options (page 56)
- ◆ Saving a Phone Number (page 56)
- ◆ Finding a Phone Number (page 57)
- ◆ Dialing From the Contacts List (page 57)
- ◆ Using Favorites (page 58)
- ◆ Plus (+) Code Dialing (page 59)

Making Calls

1. Press  and then tap .
2. Enter a phone number using the onscreen dialpad and tap .
 - If you make a mistake while dialing, tap  to erase the numbers.
3. Select  to end a call.

Tip: To redial your last outgoing call, tap  from the Call log list.

You can also place calls from your device by speed dialing numbers from your Contacts (page 58) and using your Call log listings (page 83).

Dialing Options


When you enter numbers within the dialpad, you will see three onscreen options.

- **Voicemail** () to place a call to your voicemail.
- **Call** () to place a new call to the current number.

- **Delete** () to delete the digits from the current number.

To see additional options, tap .

- **Add to contacts** to add the current number to a new or existing Contacts entry.
- **Add 2 sec pause:** to insert a two-second pause to enter a 2-second delay within a number string (the phone continues dialing after 2 seconds without any additional keys being pressed).
- **Add wait** to insert a hard pause within the number string (the phone waits for your input). A wait requires that any consecutive numbers be manually sent by tapping **Yes**.

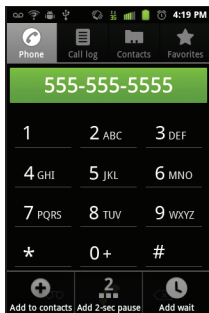

Answering Calls

- ▶ Touch and drag  to the right to answer an incoming call.

Note: All incoming call options listed below require you to touch and hold the button to activate the function.

When unlocked, some functions can be activated by tapping the onscreen button.

Tip: To silence the ringer on an incoming call, press either the up or down Volume button.

Your device notifies you of incoming calls in the following ways:

- The phone rings or vibrates.
- The backlight illuminates.
- The screen displays an incoming call message.

If the incoming call is from a number stored in your Contacts, the entry's name is displayed. You may also see the caller's phone number, if available.

Ending a Call

- Select  to end a call.
 - or –
- Press  and then tap **End call**.

Missed Call Notification

When you do not answer an incoming call, the Status bar indicates .

To display a Missed Call entry from the Home screen:

1. Touch and hold the Status bar, and then slide your finger down the screen.
2. Tap the Missed call entry (). This opens the **Call log** screen.
3. Tap  next to the entry to make the call.
 - or –

Touch and hold an entry from the Call Log list and from the context menu, select **Call** [number]. (See “Using Context Menus” on page 38.)

Calling Emergency Numbers

You can place calls to 911 (from the dialpad, enter    ), even if your device is locked or your account is restricted.

Note: When you place an emergency call, your device automatically enters Emergency mode.

During an emergency call, press  to display your options. Select an option.

- **Speaker On** to activate speakerphone mode. (If you are in speakerphone mode, the option is displayed as **Speaker Off** to deactivate.)
- **Dialpad/Hide dialpad** to show or hide the onscreen dialpad.
- **End call** to end the current call.

To exit Emergency mode:

1. Touch and drag  across the screen to end a 911 call.
2. Tap **Exit** on the Emergency Call Back mode.

Note: When you end the 911 call, you are returned to the Emergency Call Back mode.

Within the Emergency Call Back mode, press the **Home** key to use another menu.

Enhanced 911 (E911) Information

This device features an embedded Global Positioning System (GPS) chip necessary for utilizing E911 emergency location services where available.

When you place an emergency 911 call, the GPS feature of your device seeks information to calculate your approximate location.


Note: Depending on several variables, including availability and access to satellite signals, it may take up to 30 seconds or more to determine and report your approximate location.

Important: Always report your location to the 911 operator when placing an emergency call. Some designated emergency call takers, known as Public Safety Answering Points (PSAPs) may not be equipped to receive GPS location information from your device.

In-Call Options

Once you initiate a call, you will see six onscreen options. Tap an option to select it.

- **Add call** touch and hold to initiate a 3-way call.
- **End** to end the current call.
- **Dialpad/Hide** to toggle the appearance of the onscreen dialpad.
- **Bluetooth** to route the device's audio through a connected Bluetooth headset (On) or through the speaker (Off).
- **Mute** to mute the microphone during an active call. Tap again to unmute the microphone.
- **Speaker** to route the device's audio through the speaker (On) or through the earpiece (Off).

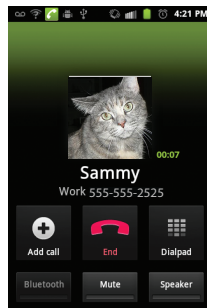

End-of-Call Options

1. After you receive a call from or make a call to a phone number that is not in your Contacts, locate the number in your Call log list.
2. Tap the number to view options, or tap  to redial the entry.

Additional Calling Options

To obtain additional options such as phone number and the duration of the call, you must access the Call log screen. (See “2D. Call Log” on page 83.)

1. Press  and then tap  >  (**Call log**).
2. Touch and hold the entry to reveal an onscreen context menu where you can choose from the following options:
 - **Call [Number]** to redial the current phone number.
 - **View contact** to view contact information.

- **Edit number before call** to make alterations to the current phone number prior to redial. (See “Altering a Number From Call Log” on page 86.)
- **Send text message** allows you to create a new text message to the selected entry.
- **Add to contacts** adds this number to the Contacts list (if the contact is not already added).
- **Remove from call log** to delete the entry from the Call Log list.

Note: The End-of-Call options are not displayed for calls identified as No ID, Restricted, or Unknown.

Saving a Phone Number


The number of Contacts entries you can store in your device is limited only by available memory space. Your device automatically sorts the Contacts entries alphabetically. Each entry's name can contain an unlimited number of characters. (For more information, see “2E. Contacts” on page 88.)

To save a new number from the Home screen:

1. Press  and then tap .

2. Enter the new number.
3. Press  and tap **Add to contacts**.
4. Tap **Create new contact**.

5. If prompted, tap a destination for your new contact to synchronize.
 - The new contact can be created under either your **Google** (Gmail) account, or Microsoft® Outlook®-Exchange Server account).

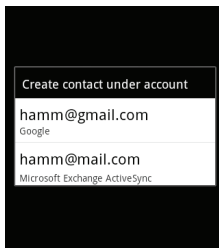

Note: You will not see the above option to select a destination unless you have previously established a Google or Exchange Server-based accounts on the device. (See “Synchronizing Accounts” on page 77.)

6. Tap the **First name** and **Last name** fields and use the onscreen or QWERTY keyboard to enter the new contact name.
7. Populate any of the other fields.
8. Tap **Done** to store and update the new entry.

Finding a Phone Number

You can search Contacts for entries by name.

1. Press  and then tap  (**Contacts**).
2. Touch and scroll the screen to locate the contact.

Dialing From the Contacts List

1. Press  and tap  >  (**Contacts**).

Shortcut: From Phone screen, tap **Contacts** () to list entries.

2. Scroll through the list and tap the entry you want to call.
3. Tap a phone number.

Using Favorites

Dialing From Favorites

You can quickly dial contacts you call frequently by adding them to your Favorites list. Although not assigned to a speed dial number, this is a quick and easy way to dial your favorite Contacts. (See “Adding Entries to Your Favorites” on page 95.)

To dial a contact from Favorites:

1. Press  and then tap  > **Favorites** ().

2. Scroll through the list and tap the contact.
3. Tap  to place a call,  to send a text to the contact, or  to send an email.

Dialing a number from the **Favorites** tab is similar to dialing one from the **Contacts** tab. (See “Dialing From the Contacts List” on page 57.)

Assigning Favorites

Only an existing Contacts entry can be assigned as a Favorite contact.

To assign a Contacts entry as a Favorite:

1. Press  and tap  > .
– or –
Press  and then tap  > **Contacts** ().

2. Tap and hold a Contacts entry to display its onscreen context menu (page 38).
3. Tap the star to add this contact to the Favorites list.
4. Tap the **Favorites** tab () to confirm your entry was added.


Plus (+) Code Dialing

When placing international calls, Plus Code Dialing automatically enters the international access code for your location (for example, 011 for international calls made from the U.S.). (See “Activating Plus Code Dialing” on page 60.)

1. Press  and then tap .
2. Touch and hold  until you see a “+” on the display screen.
3. Dial the country code and phone number, and then tap . (The device automatically prepends the access code for international dialing, followed by the country code and phone number.)

2C. Settings

- ◆ Call Settings (page 60)
- ◆ Airplane Mode (page 62)
- ◆ TTY Use With Boost Service (page 62)
- ◆ Display Settings (page 66)
- ◆ Language Settings (page 69)
- ◆ Location Settings (page 69)
- ◆ Security Settings (page 70)
- ◆ Synchronizing Accounts (page 77)
- ◆ Search Settings (page 81)

The Settings menu can be accessed by one of two ways on the Samsung Transform™ Ultra.

► Press  >  and tap .

– or –

Press  and tap  > .

Call Settings

Your device allows you to configure call settings such as Plus code dialing usage, other international dialing options, and TTY configuration.

Activating Plus Code Dialing

Plus Code dialing allows you to have the phone automatically dial the international access code for your location once you touch and hold . (See “Plus (+) Code Dialing” on page 59.)

1. Press  >  and tap  > **Call settings**.
2. Tap **North American dialing** to activate the feature (a green checkmark displays in the adjacent field).

Changing the International Dialing Code

By default, the international dialing prefix (code) is set to 011. This code can not be changed until the feature is temporarily disabled. Once disabled, the field becomes accessible and can be altered.

1. Press  >  and tap  > **Call settings**.
2. Tap **North American dialing** to deactivate the feature. This enables the **International Dialing** field.
3. Tap **International Dialing**.
4. Tap the entry field and press  from the onscreen keyboard to delete the previous value.
– or –
Press and hold  on the QWERTY keyboard to delete the current prefix.
5. Enter a new value and tap **OK**.
6. Tap **North American dialing** to reactivate the feature. This disables the **International Dialing** field.

Device Administration

This Device Administration feature allows you to select one or more administration applications that control your device for security purposes (for example, if your phone is lost or stolen). These applications enforce remote or local device security policies.

Some of the features a device administration application might control are:

- Setting the number of failed password attempts before the device is restored to factory settings.
- Automatically locking the device.
- Restoring factory settings on the device.

Note: If a device uses multiple enabled administration applications, the strictest policy is enforced.

To uninstall an existing device administration application, you must first unregister the application as an administrator.

1. Press  >  and tap  > **Location & security**.
2. Tap **Select device administrators**.

3. Select a device administrator and follow the prompts.

Airplane Mode

Airplane Mode (Flight mode) allows you to use many of your device's features, such as Games, Camera, and Music, when you are in an airplane or in any other area where making or receiving calls or data is prohibited. When you set your device to Airplane Mode, it cannot send or receive any calls or access online information.

1. Press and hold  to reveal the Phone options.
– or –
Press  >  and tap  > **Wireless & networks**.
2. Tap **Airplane mode** to place a checkmark in the adjacent field.

While in Airplane Mode, your device's Status area displays ().

To deactivate Airplane Mode:

1. Press and hold  to reveal the Phone options.
2. Tap **Airplane mode (Airplane mode is ON)**.
– or –
Press  >  and tap  > **Wireless & networks**.
3. Tap **Airplane mode** to remove the checkmark.

TTY Use With Boost Service

A TTY (also known as a TDD or Text Telephone) is a telecommunications device that allows people who are deaf, hard of hearing, or who have speech or language disabilities, to communicate by telephone.

Your device is compatible with select TTY devices. Please check with the manufacturer of your TTY device to ensure that it is compatible with digital cell phones. Your device and TTY device will connect via a special cable that plugs into your phone's headset jack.

If this cable was not provided with your TTY device, contact your TTY device manufacturer to purchase the connector cable.

To turn TTY Mode on or off:

1. Press  >  and tap  > **Call settings** > **TTY**. (An informational message displays.)

Note: If TTY mode is enabled, the audio quality of non-TTY devices connected to the headset jack may be impaired.

2. Read the onscreen disclaimer and tap **Yes**.
3. Tap **TTY Off** to turn TTY mode off.
 - or –

Tap any of the following to enable the feature:

■ **TTY HCO**, **TTY VCO**, or **TTY Full**.

Note: In TTY Mode, your device will display the TTY access icon.

If TTY mode is enabled, the audio quality of non-TTY devices connected to the headset jack may be impaired.

WARNING: 911 Emergency Calling

Boost recommends that TTY users make emergency calls by other means, including Telecommunications Relay Services (TRS), analog cellular, and landline communications. Wireless TTY calls to 911 may be corrupted when received by public safety answering points (PSAPs), rendering some communications unintelligible. The problem encountered appears related to software used by PSAPs. This matter has been brought to the attention of the FCC, and the wireless industry and the PSAP community are currently working to resolve this.

Sound Settings

Ringtones

Ringtones help you identify incoming calls and messages. You can assign ringtones to individual Contacts entries, types of calls, and types of messages.

Selecting Ringtones for Voice Calls

Your device provides a variety of ringer options that allow you to customize your ring and volume settings.

1. Press  >  and tap  > **Sound** > **Phone ringtone**.
2. Tap a ringtone from the available list. The ringtone briefly plays when selected.
3. Tap **OK** to assign a ringtone.

Selecting Ringtones for Notifications

The notification area displays icons associated with user notifications such as: email messages, missed calls, new voicemail, upcoming event, USB connections, SMS (text)/MMS messages. You can select the ringtone that plays when your device receives new notifications.

1. Press  >  and tap  > **Sound** > **Notification ringtone**.
2. Tap a notification ringtone from the available list. The ringtone then briefly plays when selected.
3. Tap **OK** to assign a ringtone.

Activating Feature Sounds

You can select whether your device plays a sound when using the dialpad, when making an onscreen selection, and when an SD card notification occurs.

1. Press  >  and tap  > **Sound**.
2. Tap a feature to enable it. (If a green checkmark displays to the right of the feature, it is already enabled.)
 - **Audible touch tones** plays a tone while using the dialpad.
 - **Audible selection** plays a sound when making any onscreen selection.
 - **Screen lock sounds** plays a sound when locking or unlocking the screen.
 - **Haptic feedback** causes the device to vibrate when pressing onscreen keys or with certain UI interactions.

Adjusting the Volume Settings

Adjust the volume settings to suit your needs and your environment.

1. Press  >  and tap  > **Sound** > **Sound**.
2. Touch and drag the onscreen slider to assign the volume settings for any of the following volume levels and tap **OK**.
 - **Ringtone, Media, Alarm, or Notification volume.**

Note: By default, the **Use incoming call volume for notifications** field is active, in this case, the **Notification** slider is not accessible until it is disabled.

3. Tap **OK** to assign the volume levels.

Vibrate

To set your device to vibrate for incoming calls and silent for notifications:

- Press the volume button down in standby mode until you see  on the screen.

To set your device to always vibrate for incoming calls:

1. Press  >  and tap  > **Sound** > **Vibrate**.
2. Tap a feature to enable or disable it. A checkmark indicates the feature is enabled:
 - **Always:** your device vibrates for all incoming calls and notifications.
 - **Never:** your device uses sound only for all notifications and alerts.
 - **Only in silent mode:** your device vibrates for notifications and alerts when Silent mode is active.
 - **Only when not in Silent mode:** your device only vibrates for notifications and alerts when Silent mode is not active.

To set your device to vibrate while using the dialpad:

1. Press  >  and tap  > **Sound**.
2. Tap **Haptic feedback**. (If you have already checked the option, tapping it again deselects the option.)

Silent Mode

The Silent Mode option allows you to mute all sounds without turning your device off (except for Media volume).

To activate Silent Mode:

- ▶ Press and hold the volume button down in standby mode until you see  on the screen.

To deactivate Silent Mode:

- ▶ Press the volume button up repeatedly to select a volume level.

To set your device to Silent mode:

1. Press  >  and tap  > **Sound**.
2. Tap **Silent mode**. This option silences all audio on the device except for media and alarms. (If you have already checked the option, tapping it again deselects this option.)

Display Settings

Changing the Screen Orientation

Although most screens will change orientation once the QWERTY keyboard is opened, this feature can be manually enabled to change the orientation for all screens when rotation is detected.

1. Press  >  and tap  > **Display**.
2. Tap **Auto-rotate screen** (enabled by default). A green checkmark indicates the feature is enabled.
 - Clear the **Auto-rotate screen** checkmark to disable this automatic orientation adjustment.

Window Animation

This feature provides the use of animation when onscreen windows are opened and closed. If deactivated, windows pop on and off and no transitions are applied.

1. Press  >  and tap  > **Display**.
2. Tap **Animation** and select **No animations**, **Some animations**, or **All animations**.

Changing the Backlight Time Length

Select how long the display screen remains lit after you press any key.

1. Press  >  and tap  > **Display** > **Screen timeout**.
2. Tap a time setting (15 seconds - 30 minutes).

Note: Long screen backlight settings reduce the battery's talk and standby times.

Changing the Keyboard Backlight Time Length

Select how long the keyboard stays lit after you press any key.

1. Press  >  and tap  > **Display** > **Keyboard timeout**.
2. Tap a time setting (3 seconds - 15 seconds or Same as Screen Timeout).

Note: Long keyboard backlight settings reduce the battery's talk and standby times.

Changing the Brightness

Adjust your screen's brightness to suit your surroundings.

1. Press  >  and tap  > **Display**.
2. Scroll down and tap **Brightness**.
3. Touch and drag **Brightness** slider left or right to adjust the screen contrast and tap **OK**.

Note: Not available when the **Automatic brightness** is enabled.

Changing the Automatic Brightness

Automatically adjusts your screen's brightness to provide the best display within the current lighting condition.

1. Press  >  and tap  > **Display** > **Brightness**.
2. Tap **Automatic brightness**. A green checkmark indicates the feature is enabled.
 - Enabling this feature disables the manual **Brightness** option.

Changing the Display Screen

Choose what you see on the Home screen (behind your shortcuts and Widgets) while powering on or off the device, and when in standby mode.

1. Press  >  and tap  (**Wallpaper**).
2. Tap **Gallery**, **ID wallpapers**, **Live Wallpapers**, or **Wallpapers**.
 - **Gallery** lets you choose from images available in the Gallery.
 - **ID wallpapers** lets you choose from wallpapers available from any of the installed ID packs.
 - **Live Wallpapers** choose from pre-loaded interactive animated wallpapers.
 - **Wallpapers** provides a selection of pre-loaded wallpaper images.
3. Scroll through available images and tap a selection to preview it.
4. Tap **Set wallpaper** to assign an preset image.
 - or –
 - Tap **Save** to assign a picture as a wallpaper.

Adjusting the Date and Time

Your device obtains its time and date information by using the network-provided date, time, and time zone. These values can be manually altered.

1. Press  >  and tap  > **Date & time**.
2. Tap **Automatic** to disable the feature.

Note: If enabled, you can not alter the date, time zone or time values.

3. Tap **Set date**. Adjust the date, month, and year by tapping  or . Tap **Set** when finished.
4. Tap **Select time zone**, and then select a time zone from the onscreen list. Scroll down the list to view additional time zones.
5. Tap **Set time**. Adjust the hour and minute by tapping  or . Tap the **AM** or **PM** icon to change the value. Tap **Set** when finished.
6. Tap **Use 24-hour format** to toggle between using a 12-hour or a 24-hour format.
7. Tap **Select date format** to select how the date information is displayed on your device. The

selected date format is also applied to the date displayed within the device's Alarm Clock.

Language Settings

To assign the default language used by the Android operating system.

1. Press  >  and tap  > **Language & keyboard** > **Select language**.
2. Tap either **English** or **Español**. All menus are then updated to the new language.

Location Settings

Your device is equipped with a Location feature for use in connection with location-based services.

The Location feature allows the network to detect your position. Turning Location off will hide your location from everyone except 911.

Note: Turning Location on will allow the network to detect your position using GPS technology, making some Boost applications and services easier to use. Turning Location off will disable the GPS location function for all purposes except 911, but will not hide your general location based on the cell site serving your call. No application or service may use your location without your request or permission. GPS-enhanced 911 is not available in all areas.

To enable your device's GPS Location feature:

1. Press  >  and tap  > **Location & security**.
2. Tap **Use GPS satellites**. A green checkmark indicates the GPS location feature is enabled.

To enable Location via wireless networks:

1. Press  >  and tap  > **Location & security**.
2. Tap **Use wireless networks**. A green checkmark indicates the feature is enabled.
 - This service uses available wireless networks to pinpoint your location within certain applications such as Google™ Maps (page 177).

3. Tap **Agree**. Enabling this feature allows Google to collect anonymous location data whether or not any location application or other related feature is active or in use.
 - Tap **Use wireless networks** > **disagree** to disable the collection of data. Enabling this feature can utilize more resources and slow performance.

Security Settings

Unblocking Unknown Installations

There may be instances where you choose to install applications or packs from sources other than the Android Market.

Before these applications can be installed, you must allow the installation of "non-Market applications".

1. Press  >  and tap  > **Applications**.
2. Tap **Unknown sources** to enable it. (If a green checkmark displays to the right of the feature, it is already enabled.)

3. Tap **OK** to acknowledge the change in setting.

Accessing the Security Menu

All of your device's security settings are available through the Security menu. You can secure your data and limit phone access by requiring a screen unlock pattern every time your device is turned on or every time it wakes up from sleep mode (screen where the screen turns off).

1. Press  >  and tap  > **Location & security**.
2. Tap **Set up screen lock** to set the method by which you unlock your phone. Select one of the following options:
 - **None** to disable the screen unlock security feature.
 - **Pattern** to create a dynamic pattern by moving your finger in specific directions across the screen.
 - **PIN** to use a 4-digit, numeric PIN code (up to 16 characters).
 - **Password** to use a 4-digit, alphanumeric password (up to 16 characters).

Your Device's Screen Lock Feature

Locking Your Device Screen

When your device is locked, you can only receive incoming calls or make calls to 911.

- ▶ Press . Locking the screen prevents accidental screen touches from activating phone functions.

Unlocking Your Device

1. Press  to awaken the device.
2. Touch and drag the lock icon across the screen or slide the QWERTY keyboard out.

Your Device's Unlock Pattern Feature


You can increase your device's security by creating a screen unlock pattern (disabled by default). When enabled, you must draw the correct unlock pattern on the screen to unlock and regain access to the device.

Creating an Unlock Pattern

1. Press  >  and tap  > **Location & security**.

2. Scroll down to the menu list and tap **Set up screen lock > Pattern**.
3. Read the information on the screen, and then tap **Next**.
4. Review the onscreen tutorial on pattern creation, and then tap **Next**.
5. Draw your pattern by touching your first onscreen point. Then, **without removing your finger from the screen**, drag your finger over adjacent points until the grey trace line overlaps each point and they are highlighted with a green circle.

Important: You must slide your finger on the screen to create the pattern and not touch individual dots. If you make a mistake or a point is not properly selected, a red circle displays.

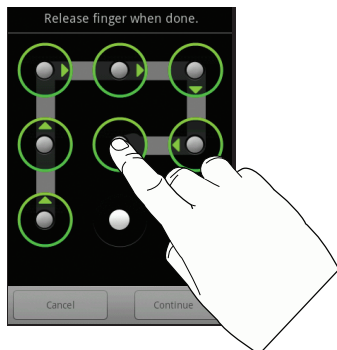

6. When you have connected at least four dots in a vertical, horizontal or diagonal direction, lift your finger from the screen.

7. Tap **Continue** to record the pattern.

8. Confirm the new pattern by redrawing it and then tap **Confirm**.

Once the feature is enabled, additional unlock pattern options are then enabled from within the **Security & location** menu list.

Configuring the Unlock Pattern Settings

To require the pattern for access:

1. Press > and tap > **Location & security**.

2. Place a checkmark adjacent to the **Use visible pattern** field.

To remove the visible unlock pattern from the Lock screen:

1. Press > and tap > **Location & security**.

2. Remove the checkmark adjacent to the **Use visible pattern** field.

- Removing this checkmark prevents the unlock pattern from displaying on the unlock screen when drawn to unlock the screen.

What to do if you have forgotten your pattern:

If you fail to draw the correct unlock pattern on the screen after five attempts, you are prompted to wait for 30 seconds before you can try again.

- If you have forgotten your screen unlock pattern, tap **Forgot pattern**.

- Sign in using your Google account name and password, and create a new screen unlock pattern before regaining access to the Home screen.

Changing the Unlock Pattern

1. Press  >  and tap  > **Location & security** > **Change screen lock**.
2. Draw the current pattern on the screen.
3. Draw a new pattern. (See “Creating an Unlock Pattern” on page 71.)

Calling in Lock Mode

When your device is locked, you can only receive incoming calls or make calls to 911 or Boost Customer Service.

1. Press  to reveal the lock screen.

Note: The Unlock Pattern applies if the **Require Pattern** setting is enabled.

2. Tap **Emergency call** to reveal the Emergency dialpad to place your emergency call.

- Draw your unlock pattern to regain access to the full dialer and unlock the device.

Using Visible Passwords

When enabled, this feature allows you to view the text being entered into a password field as you type it. So many times there are other applications that insert an asterisk (*) as your type. This can be confusing and can cause issues. What if you mistyped the password or used the wrong case? When enabled, you can see what you are entering. This feature is enabled by default.

To disable visible passwords:

1. Press  >  and tap  > **Location & security**.
2. Tap **Visible passwords** (to remove the checkmark on the option).

Disabling Screen Lock Settings

1. Press  >  and tap  > **Location & security**.
2. Tap **Change screen lock**.

3. Touch **None**. All screen lock settings clear.

Device Administration

Activating this feature allows Google to administrate your device in a way similar to IT security settings on a corporate PC. This feature is beneficial in case your device is lost or stolen.

The device could be “deactivated” or “restricted” (through administration) from a remote location.

1. Press  >  and tap  > **Location & security**.

2. Tap **Select device administrators**.

3. Select a device administrator and follow the prompts.

Credential Storage

This option allows certain applications to access secure certificates and other credentials. Certificates and credentials can be installed to the SD card and password protected.

1. Press  >  and tap  > **Location & security**.

Note: You must set a credential password the first time you use this feature. After password creation this field is used to change the credential password.

2. Tap **Use secure credentials**.
3. Tap **Install from SD card** to install encrypted certificates from the memory card.
4. Tap **Set password** to set a credential storage password.
5. Touch **Clear storage** to clear the storage (SD card memory) of all contents and reset the credentials password.

Managing Your Available Memory

You can manage the information and configuration related to both your microSD card and built-in device storage memory. The available device memory provided by these two locations is called **Internal phone storage**.

To view your device's total available memory:

1. Press  >  and tap  > **Storage**.

2. Review the two memory sections for available space information:
 - **SD card** displays the memory information specific to an installed microSD card. This amount of space can be altered by replacing the current microSD card.
 - **Internal phone storage** displays the memory information specific to the built-in device memory. This memory amount can not be altered because it is part of the device hardware.

To view your microSD card storage information:

1. Press  >  and tap  > **Storage**.
2. Locate the **SD card** section.
3. Review both the **Total space** and **Available space** fields:
 - **Total space** indicates the total size of the currently inserted microSD card. This includes both available and used space information.
 - To determine the amount of memory currently used on the card, take the total space and subtract the remaining available space.

Note: Not all of the microSD card is registered in the available space, as a small percentage of the storage is unread.

- **Available space** indicates the amount of remaining free memory space available on the microSD card.

To view your device's storage information:

1. Press  >  and tap  > **Storage**.
2. Locate the **Internal phone storage** section.
3. Review the **Available space** field:
 - **Available space** indicates the total size of the internal memory.

Manage Running Services

This service is an efficient method for managing power consumption and processor/memory resources. Processes can be stopped until the device is restarted.

To stop a currently running service:

1. Press  >  and tap  > **Applications** > **Running services**.

2. Select a process you want and select **Stop**.

Note: These stopped processes are restarted once the device is restarted (power cycled).

Third-party Task Manager applications are also available from the Google Marketplace.

Erasing Device Content

Use the Manage applications menu to quickly erase selected content and uninstall third-party applications stored in your device.

To clear an application's cache:

1. Press  >  and tap  > **Applications > Manage applications**.
2. Press  and tap **Sort by size**. This option sorts the current **Manage applications** listing to display those applications by amount of memory or cache usage.
3. Tap the application whose cache you wish to delete.
4. From the Application info screen, tap **Clear cache** and/or **Clear defaults**.

To uninstall third-party applications:

1. Press  >  and tap  > **Applications > Manage applications**.

Important: Only third-party applications can be uninstalled. Applications preinstalled on the device can not be removed.

2. Tap **Downloaded**, and from the **Application info** screen, tap **Uninstall**.

Resetting Your Device

Resetting the device restores all the factory defaults, including the ringtones and display settings. All data, including added applications are deleted.

Important: Back up your important data before you perform a factory reset of the device.

1. Press  >  and tap  > **Privacy > Factory data reset**. (You will see a disclaimer.)
2. Read the disclaimer and tap **Reset phone**.
3. If you are certain that you would like to restore all factory settings, tap **Erase everything**.

Quick Launch

Allows you to set keyboard shortcuts that launch assigned applications.

1. Press  >  and tap  > **Applications**
2. Tap **Quick launch** to activate the feature.
3. Tap an onscreen letter from the list.
4. Select an available application. This changes the selected hotkey to launch the new application.

Android Development

Android development features are used for development purposes only.

- ▶ Press  >  and tap  > **Applications** > **Development**.
 - **USB Debugging** is used for development purposes. When activated, this allows debugging tools on a computer to communicate with his device through a USB connection.

- **Stay awake** is used for development purposes. When you activate this feature, the screen does not dim or lock while the phone is charging.
- **Allow mock locations** is used by developers testing a GPS application. This feature allows the phone to “mock” the coordinates for a specific location.

Synchronizing Accounts

Your device provides the ability to synchronize data from a variety of different sources or sites. These accounts can range from Google, an Exchange Email Server, and other social sites such as Facebook, Twitter, and MySpace.

Exchange Email and Google accounts provide the ability to synchronize Calendar events and Contacts.

To enable the auto-sync feature:

1. Press  >  and tap  > **Accounts & sync**.
2. Tap **Background data**. A green checkmark indicates the feature is enabled.

3. Tap **Auto-sync**. A green checkmark indicates the feature is enabled.
 - This feature enables the synchronization of data between your device and external sites or servers.
 - The two main components are Contacts and Calendar Events. Before these can be synchronized, they must be added to the managed accounts list.

Synchronizing Your Google Account

By default, there are no accounts managed by the device. These must be manually added.

To add manage an existing Google account:

1. Press  >  and tap  > **Accounts & sync**.
2. Tap **Add account > Google**.
3. Click **Next > Sign in**.

Note: If you do not already have a Google account, tap **Create** and follow the onscreen prompts to create your new account.

4. Tap the **Username** (@gmail.com) and **Password** fields and enter your information.
5. Tap **Sign in**. Your device then communicates with the Google servers to confirm your information. Your existing Gmail account then appears within the **Managed accounts** area of the screen.
 - Any changes or updates to your Gmail account are then automatically updated to your device.

To configure the Google management settings:

1. Press  >  and tap  > **Accounts & sync**.
2. Tap  within the Google account field to reveal the account's synchronization settings screen.
3. Tap the parameters you wish to synchronize (**Sync Books**, **Sync Contacts**, **Sync Gmail**, **Sync Calendar**). A green checkmark indicates the feature is enabled.
4. Press  to return to the previous screen.

Synchronizing Your Microsoft Exchange ActiveSync Account

By default, there are no Calendar events managed by the device. These must be manually added. (See “Synchronizing Calendar Events Through Microsoft Exchange ActiveSync” on page 96.)

Note: Once an Exchange server email account is created, it is automatically added as a managed account.

To add a Microsoft Exchange account:

1. Press  >  and tap  > **Accounts & sync.**
2. Tap **Add account > Microsoft Exchange ActiveSync.**
3. Follow the onscreen prompts to create your new Microsoft® Exchange ActiveSync email account. See “Exchange Server Email (Outlook)” on page 164.
 - Any changes or updates to your Microsoft® Exchange ActiveSync/Microsoft® Outlook® account are then automatically updated to your device.

To configure the Microsoft Exchange ActiveSync management settings:

1. Press  >  and tap  > **Accounts & sync.**
 2. Tap  within the Microsoft® Exchange ActiveSync account field to reveal the account's synchronization settings screen.
 3. Tap the parameters you wish to synchronize.
- **Account settings** allows you to configure the current email account settings such as:
 - **General settings** allows you to configure:
 - **Account name** displays the name used by the device to track the account.
 - **Your name** displays the name used in the From field within your outgoing emails.
 - **Amount to synchronize** to assign the sync range for your incoming and outgoing emails between your device and your external exchange server. Choose how many days worth of emails should the device and server synchronize. Choose from: **One day, Three days, One week, Two weeks, or One month.**

- **Default account** assigns this account as the default used when sending out new emails.
 - **Out of office settings:** Configures your out of office notifications.
 - **Empty server trash:** Allows you to delete your email account's trash bin remotely.
 - **Sync schedule:** Allows you to configure your email sync schedule.
 - **Email size:** Configures the incoming email size allowed to pass through to your device automatically without user interaction. Larger emails will have to be retrieved manually.
- **Notification settings** allows you to configure:
- **Email notifications** enables the device to display a status bar icon  when new emails have been received.
 - **Select ringtone** assigns an audible ringtone when a new or upcoming event is pending.
 - **Vibrate** assigns a vibration when a new or upcoming event is pending.
- **Server settings** allows you to configure:
- **Incoming settings** provides access to the Domain, password, and exchange server parameter fields.
 - **Sync contacts** synchronizes the contacts between your device and the remote exchange server. A green checkmark indicates the feature is enabled.
 - **Sync calendar** synchronizes your exchange calendar entries between your device and the remote exchange server. A green checkmark indicates the feature is enabled.
 - **Sync calendar history** assigns the calendar sync period.
- **Common settings** allows you to configure:
- **Forward with files** causes any outgoing email replay to include any currently attached files. A green checkmark indicates the feature is enabled.
 - **Add signature:** Activates the email signature feature.

- **Signature** allows you to create an outgoing email signature attached to new emails sent from your device.

4. Press  to return to the previous screen.

For more detailed Microsoft® Exchange ActiveSync email information, see “Exchange Server Email (Outlook)” on page 164.

For more information on Calendar synchronizing, see “Synchronizing Calendar Events Through Microsoft Exchange ActiveSync” on page 96.

Accessibility Settings

This service collects all the text you type, including personal data credit card numbers except passwords. It may also log your user interface interactions.

1. Install a screen reader (such as Kickback, Soundback, or Talkback) from the Android Market.
2. Press  >  and tap  > **Accessibility**.

Note: You must first install a screen reader from the Android Market such as Kickback, Soundback, or Talkback in order for this feature to work.

3. Tap **Accessibility** then select a service for which you want to log data.

Voice Input and Output Settings

These settings allow the Samsung Transform™ Ultra to provide a verbal readout of onscreen data such as messages and incoming caller information, see “Text-to-Speech” on page 111.

Search Settings

You can use your device's search preferences to configure some aspects of Google Web search (for example, whether it makes suggestions below the Quick Search Box as you type), and what phone features you want to include in searches.

Configuring the Search Settings

1. Press  >  and tap  > **Search**.
2. Press  and tap **Search settings**.

3. Tap any of the following search parameters to then alter the settings:

- **Google search** opens a screen where you can set your Google search preferences.
 - **Show web suggestions** also includes search matches from Google's online search engine.
 - **Use My Location** uses your My Location information for Google search results and services.
 - **Search history** determines whether you also wish to included personalized search history results in the list of matches.
 - **Manage search history** helps to manage the personalized search history associated with your current registered Google account.
- **Searchable items** opens a screen where you can choose the search categories included in device searches.
 - Categories include: **Web, Apps, Contacts, Messaging, Music, or Voice Search.**
- **Clear shortcuts** erases the history of recently selected search results.

2D. Call Log

- ◆ Viewing Call Log (page 83)
- ◆ Call Log Options (page 84)
- ◆ Making a Call From Call Log (page 86)
- ◆ Saving a Number From Call Log (page 86)
- ◆ Altering a Number From Call Log (page 86)
- ◆ Erasing the Call Log (page 87)

Viewing Call Log

Call Log (History) is a list of the phone numbers (or Contacts entries) for calls you placed, accepted, or missed. Call log makes redialing a number fast and easy. It is continually updated as your device automatically adds new numbers to the beginning of the list and removes the oldest entries from the bottom of the list.

The Notification area of the Home screen (upper-left) displays phone notifications, status, or alerts such as:

	Call in progress: Indicates there is a call currently active and in progress.
	Missed Call: Indicates an incoming call was missed.

To access the Call log:

1. Press  and tap  > **Call log** (.
2. Tap an entry to view available options.

Note: Call log records only calls that occur while the device is turned on. If a call is received while your device is turned off, it will not be included in history.

From within the Call log screen, each entry contains the phone number (if it is available) and Contacts entry name (if the number is in your Contacts).

	Dialed: Indicates all outgoing calls made from your device.
	Received: Indicates any received calls that were answered.




Missed: Indicates any missed calls. These are routed to your voicemail.

Accessing Call Log From Notifications

You can also access the Call log from a Missed Call notification. (See “Using the Notifications Panel” on page 38.)

To access these call notifications:


1. Locate  from the Notifications area of the Status bar.
2. Touch and hold the Status bar, and then slide your finger down the screen.
3. Tap the Missed call entry to open the Call log screen.

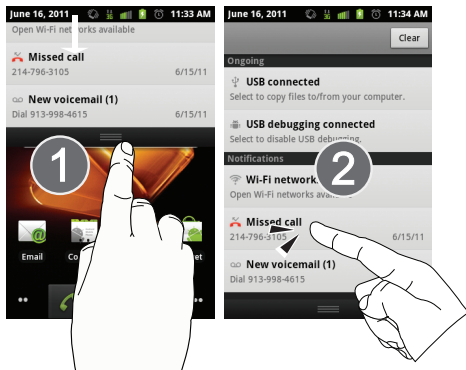

Call Log Options

This list provides easy access to redial an entry, or you can also choose to access two types of history entry lists depending on how they are touched.

- Highlight an entry from the list and tap  to quickly redial the selected entry. (See “Making a Call From Call Log” on page 86.)

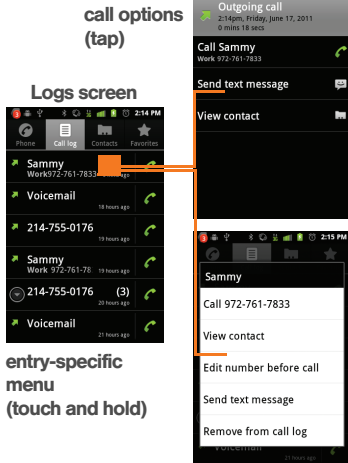

- Tap a contact entry name or number to reveal the **call options** screen:
 - **Time** provides the time and date of the call and its duration.
 - **Call again** allows you to redial the entry by name or number.
 - **Send text message** allows you to create a new text message to the selected entry.
 - **Add to contacts** to save the number if it is not already in your Contacts. (See “Saving a Number From Call Log” on page 86.)
 - Touch and hold an entry to display the following **entry-specific options**:
 - **Call <number>** to redial the current phone number.
 - **Edit number before call** allows you to edit the number before you call it.
 - **Send text message** allows you to create a new text message to the selected entry.
 - **Add to contacts** adds this number to the Contacts list.
 - **Remove from call log** removes this number from the call log.

Making a Call From Call Log

1. Press  and tap  > **Call log** ().
2. Tap  adjacent to a desired entry.
 - or –Touch and hold an entry name/number from the list, and then tap **Call**.

Note: You cannot make calls from History to entries identified as **Unknown, No ID, Restricted** or **Private Number**.

Saving a Number From Call Log

1. Tap a Call log entry > **Add to contacts** > **Create new contact**.
2. Enter a First name and Last name for this contact.
3. Tap **Done** when you finish entering information for the contact.

Note: The option to select a destination is only available if you have previously established a Google or Microsoft® Exchange Server account on the device.

After you save the number, your device displays the new Contacts entry in place of the previous number. (See “Contacts Entry Options” on page 92.)

Note: You cannot save phone numbers already in your Contacts or from calls identified as **Unknown, No ID, Restricted** or **Private Number**.

Altering a Number From Call Log

If you need to make a call from Call log and you need to alter the number prior to dialing, you can add the appropriate prefix by prepending the number.

1. Press  and tap  > **Call log** ().
2. Touch and hold an entry to access the entry-specific options menu.
3. Tap **Edit number before call**.
4. Edit the number using the onscreen dialpad or delete digits by pressing  to erase the numbers.
5. Tap  once the number is changed.

Erasing the Call Log

You can delete either an individual call log entry or all current entries from the Call log list.

To clear a single entry from the Call log list:

1. Press  and tap  > **Call log** ().

Touch and hold the entry from the Call log screen and select **Remove from call log**.

To clear all entries from the Call log list:

1. Press  and tap  > **Call log** ().
2. Press  and tap **Clear call log**.

2E. Contacts


- ♦ Creating a New Contacts Entry (page 88)
- ♦ Confirming Contact Synchronization (page 90)
- ♦ Contacts Menu Options (page 91)
- ♦ Contacts Entry Options (page 92)
- ♦ Editing a Contacts Entry (page 92)
- ♦ Adding a Number to a Contacts Entry (page 93)
- ♦ Editing a Contacts Entry's Number (page 93)
- ♦ Sending Contacts (page 94)
- ♦ Assigning a Picture to an Entry (page 94)
- ♦ Deleting Entries (page 95)
- ♦ Adding Entries to Your Favorites (page 95)

Important: To verify your Contacts appear on your device, you must sync your email accounts after setup (**Settings > Accounts & sync**). (See "Confirming Contact Synchronization" on page 90.)

Creating a New Contacts Entry

If existing Google and Microsoft® Exchange Server (Microsoft® Outlook®) email accounts were synchronized to your device, these are available to your device during the creation of new entries. New Contacts entries can be assigned or saved to synced accounts such as **Google** or **Microsoft® Outlook® (Microsoft® Exchange ActiveSync)**.

Your device automatically sorts the Contacts entries alphabetically. Each entry's name can contain an unlimited number of characters. You can create either a **Google** or **Microsoft® Exchange Server (Microsoft® Outlook®)** contact.

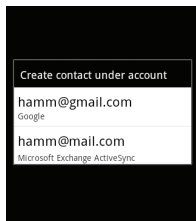

WARNING: If the device is ever reset to its factory default parameters, locally stored contacts can be lost.

- **Google** contacts are shared with your existing Google account and can also be imported to your device after you have created a Google Mail account.
- **Exchange Server** contacts are those contacts that are intended to be shared with either an Exchange Server or from within Microsoft® Outlook®.

To add a contact:

1. Press  and tap **Contacts** ().
2. Tap  > **New contact**.

Shortcut: Enter a phone number from the dialpad and press  > **Add to contacts** > **Create new contact**.

3. If prompted, tap a destination type (**Google** or **Exchange Server**).

Note: You will not see the option to select a destination unless you previously established a **Google** or **Exchange Server** account on the device.

4. Tap the **First name** and **Last name** fields, and enter a name for the new entry.

Note: Use the predictive text row to shortcut a name selection by tapping the word.

5. Tap the **Phone number** field and enter a phone number using the onscreen dialpad.
 - Tap  to enter additional phone numbers for the new Contacts entry.
 - Tap  to remove a previously entered phone number.
6. Tap the label button (to the left of the Phone field) to select a category such as: **Home**, **Mobile**, **Work**, **Work Fax**, **Home Fax**, **Pager**, **Other**, **Custom** (to create your own unique category type. Not available with Outlook.), **Car**, **Company Main**, **Radio**, **Assistant**, or **MMS**.
7. Enter additional information into these categories: **Email**, **Postal address**, **Organization**, or **More** (IM, Notes, Nickname, Website, or Internet call).
 - Use your finger to slide the page up or down to see additional fields and categories.
 - Tap  to enter additional categories.
 - Tap  to remove a previously entered category.
8. Tap **Done** to complete and store the new entry.

After saving the number, your device displays the new entry within the Contact list. (See “Contacts Entry Options” on page 92.)

Tip: ICE – In Case of Emergency

To make it easier for emergency personnel to identify important contacts, you can list your local emergency contacts under “ICE” in your device’s Contacts list. For example, if your mother is your primary emergency contact, list her as “ICE–Mom” in your Contacts. To list more than one emergency contact, use “ICE1–___,” “ICE2–___,” etc.

Confirming Contact Synchronization

Syncing data from your managed accounts allows you to add and manage a new or existing contact from your online or remote accounts to your device. Prior to syncing, you must first have an active Google or Exchange Server account with current Contact entries, and be signed into your account via the device.

With syncing, any Contacts entries (with phone numbers, email addresses, pictures, etc.) are updated and synced with your Samsung Transform™ Ultra.

For more information about syncing existing managed accounts, see “Synchronizing Accounts” on page 77.

1. Press  >  and tap  > **Accounts & sync.**
2. Tap  within the desired account field to reveal the account’s synchronization settings screen.
3. To synchronize Gmail Contacts, tap **Sync Contacts**. A green checkmark indicates the feature is enabled.
– or –

To synchronize Exchange Server Contacts, tap **Sync Contacts**. A green checkmark indicates the feature is enabled.

Note: Any change on either side (Gmail, or Exchange Server/ Microsoft® Outlook® Contacts), is reflected on the other side after a sync process.

The process of updating your Contacts tab can take several minutes. If after 10-20 minutes, your list has not been updated, repeat step 2-3.

4. Your **Contacts** tab reflects any updated Contact information.

- This update process works both ways. For example, any changes on the device are updated to your Gmail Contacts list after synchronization.

Note: Syncing of contacts requires you are logged into your Gmail and Exchange Server accounts using the device.


Contacts Menu Options

1. Press  and tap



2. Touch and hold an entry and select from the available contact menu options:

- **View contact** to view the Contact's overview screen.
- **Call contact** to call a Contact's available number.

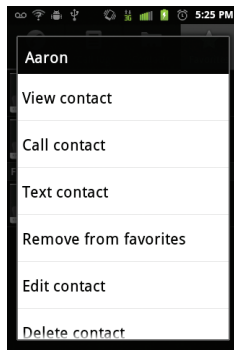

- **Remember this choice** marks the selected number as the primary one for use with this Contact.

- **Text contact** to send the Contact a new text message.
- **Add to favorites** to copy the current Contacts entry to the list within the Favorites tab (page 95).
- **Remove from favorites** to copy the current Contacts entry to the list within the Favorites tab (page 95).
- **Edit contact** to edit the currently selected Contacts entry. (See "Editing a Contacts Entry" on page 92.)
- **Delete contact** to erase the currently selected Contacts entry. (See "Deleting Entries" on page 95.)

Note: Prior to using the Bluetooth feature, it must first be enabled, and the recipient's device must be visible.

Only a Contact's information can be sent via Bluetooth. No other file type (video, image, or audio) can be sent using Bluetooth.

Contacts Entry Options

1. Press  and tap .
2. Tap an entry to display the Contact entry's overview screen. This screen contains Name, History, contacts numbers, email, and linked contact information.
3. Press  to reveal the context menu specific to this entry.
4. Tap an available option:
 - **Edit contact** to access the details page for the entry and begin editing its information (page 94).
 - **Share** to send the current Contact entry's information to an external recipient via either:
 - **Bluetooth** to transmit this contact to another bluetooth-compatible device.
 - **Gmail** to attach the contact card to a new outgoing Internet-based email.
 - **Options** to configure Contact-specific options such as:
 - **Ringtone** where you can assign a custom ringtone for this entry.

- **Incoming calls** where calls from this Contact are automatically sent to voicemail. A green checkmark indicates this feature is active.

- **Delete contact** to erase the currently selected Contacts entry.

Note: Prior to using this feature, Bluetooth must first be enabled, and the recipient's device must be visible.

Only a Contact's information can be sent via Bluetooth. No other file type (video, image, or audio) can be sent using Bluetooth.

Editing a Contacts Entry

1. From the Contact's overview screen, press  and tap **Edit contact**. Tap an option to begin editing.
 - **[image icon]** to assign a picture to the entry. (See "Assigning a Picture to an Entry" on page 94.)
 - **First name/Last name** to edit the current name.
 - **Phone** to add or delete a phone number to the entry. (See "Adding a Number to a Contacts Entry" on page 93.)

- **Email** to add or delete an email address.
 - **Postal address** to enter a physical street address.
 - **Organization** to enter business information such as company name and position.
 - **More** to add additional categories such as: **IM**, **Notes**, **Nickname**, and **Website**.
 - **IM** to assign an existing IM client contact name. Tap  > **label** button to access **AIM**, **Windows Live**, **Yahoo**, **Skype**, **QQ**, **Google Talk**, **ICQ**, **Jabber**, or **Custom**.
2. Tap **Done** to store your updates.

Adding a Number to a Contacts Entry

1. From the Contact's overview screen, press  and tap **Edit contact**.
2. From the phone numbers area, tap  to create a new empty **Phone number** field within the selected phone number category.

3. Tap the label button (to the left of the Phone field) to select a category such as: **Home**, **Mobile**, **Work**, **Work Fax**, **Home Fax**, **Pager**, **Other** (except Outlook), **Custom** (except outlook), **Callback** (except outlook), **Car**, **Company Main**, **ISDN**, **Main**, **Other Fax**, **Radio** (Outlook only), **Telex**, **TTY TDD**, **Work Mobile**, **Work Pager**, **Assistant**, or **MMS**.
 - If you have chosen **Custom**, enter your new label and tap **OK**.
4. Tap the **Phone** field and enter the new number.
5. Scroll to the bottom of the page and tap **Done** or press  > **Done** to update the new number to the existing Contacts entry.

Editing a Contacts Entry's Number


1. From the Contact's overview screen, press  and tap **Edit contact**.
2. Tap an existing phone number field.
3. Tap  to clear one digit at a time.
4. Re-enter or edit the number.

5. Tap **Done** to update the number to the existing Contacts entry.

Sending Contacts

1. Press  and tap .
2. Tap an entry to open its overview page.
3. Press  and tap **Share** to send the current Contact entry's information to an external recipient via either:

- **Bluetooth** to transmit this contact to another Bluetooth-compatible device.
- **Gmail** to attach the contact card to a new outgoing Gmail email message.

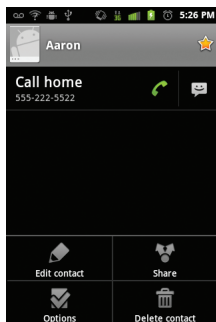

Assigning a Picture to an Entry

Assign a picture to display each time a certain contact calls you.

Assigning a picture via the device:

1. From the Contact's overview screen, press  and tap **Edit contact**.
2. Tap the image icon or current image (upper-left).
3. Tap **Take photo** (to take a picture for this image), or **Select photo from Gallery** (to select a photo).
4. Tap an image to select it.
5. Touch and drag along the sides of the yellow border box to begin cropping the desired area, and then tap **Save** to assign the selected picture.
6. Tap **Done**.
 - If an image was already assigned, tap **Use this photo**, **Remove icon**, or **Change icon**.

Applying a picture from within your online Gmail:

1. Log into your Gmail account and go to your Contacts page.
2. Select your Contacts entry (with a checkmark), double click on the entry, then click **Change Picture**
3. Click **Browse** to locate a local copy of your image.
 - You can also choose an image from other sources such as Picasa® Web.
4. Crop the visible area of your selected picture and click **Apply Changes**.
5. Sync your new contact from your online Gmail to your device. See “Confirming Contact Synchronization” on page 90.

Deleting Entries

1. Touch and hold the entry name from the Contacts tab listing.
2. From the **Contacts Entry** context menu, tap **Delete contact**.
3. Tap **OK** to confirm the deletion.

Adding Entries to Your Favorites

The Favorites tab is a listing that can help you quickly access your most used or preferred Contacts entries.

1. Press  and tap .
2. Touch and hold the entry name from the Contacts tab listing.
3. From the **Contacts Entry** context menu, tap **Add to favorites**.

Note: Another method to add or remove an entry from your favorites is to toggle the state of the star icon on the Contact's details page (upper-right). Tap to add the entry to your favorites (star is lit), tap again to remove.

2F. Calendar & Tools

- ◆ Before You Begin (page 96)
- ◆ Calendar (page 96)
- ◆ Clock (page 102)
- ◆ My Files (page 104)
- ◆ Calculator (page 105)
- ◆ Updating Your Device Firmware (page 105)
- ◆ Updating Your Profile (page 107)
- ◆ Updating Your Samsung Software (page 108)

Before You Begin

Prior to using Google applications such as calendar, you will need to have an active Google account (page 50).

Google Calendar is an application that synchronizes new and existing entries between your device and your online Google account.

Calendar

Synchronizing Calendar Events Through Microsoft Exchange ActiveSync

Calendars maintained through Exchange servers are not synchronized to your device by default; this account type must be manually added. Although we previously described how to add an account to your list of managed accounts, this only allows your device to track that account type's email.

Calendar events must be added and tracked by your device separately.

To add Microsoft Exchange ActiveSync calendar events to your device's managed account tracking:

1. Press  >  and tap  >
Accounts & sync.
2. Locate the Microsoft® Exchange ActiveSync email account within the Managed accounts area of the screen.
 - If not present, add this account (page 79).

3. Tap  within the Microsoft® Exchange ActiveSync account field to reveal the account's synchronization settings screen.
4. Tap **Sync Calendar** to activate the synchronization of calendar events between your device and the remote exchange server. A green checkmark indicates the feature is enabled.

Note: It might be necessary to toggle the feature on and off to force a re-sync.

To manually sync your calendar events to a managed Microsoft Exchange ActiveSync account:

1. Press  >  and tap  > **Accounts & sync**.
2. Tap  within the Microsoft® Exchange ActiveSync account field to reveal the account's synchronization settings screen.
3. Tap the green checkmark to toggle it off then back on. (See “Synchronizing Your Microsoft Exchange ActiveSync Account” on page 79.)

Configuring Calendar Settings

1. Press  and tap  >  (**Calendar**).
2. Tap  > **Settings**.
3. Tap an onscreen option:
 - **Calendars** displays the currently managed accounts. Tap an entry to change the sync state of the account.
 - **Default calendar** allows you to select a calendar from the list that will automatically display when opening the Calendar.
 - **Default view** configures the current Calendar default view for events. **Month view** is the default. Choose from: **Month**, **Week**, **Day** or **List**.
 - **Day view** configures how the available events are displayed onscreen. Choose from **Time grid** or **Event list**.
 - **First day of week** sets the calendar week to start with either **Sunday** or **Monday**.
 - **Hide declined events** hides (checked) or displays (unchecked) those events that have been declined via the calendar application.

- **Lock time zone** locks event times and dates to the selected time zone below. Times and dates do not change even if you move to another time zone.
- **Select time zone** allows you to select a time zone to associate with this calendar.

Notification settings

- **Set alerts and notifications** posts alerts on the status bar.
- **Vibrate** sets the phone to vibrate (only in silent mode) when you receive a notification.
- **Select ringtone** plays a notification tone.


Sync settings

- **Calendar sync** configures the general synchronization settings.

Adding an Event to the Calendar

Your Calendar helps organize your time and reminds you of important events.

1. Press  and tap  >  (**Calendar**).

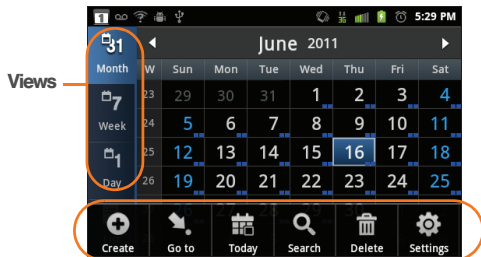

Calendar Menu Options

Note: To synchronize calendar events among your Google and Microsoft® Exchange ActiveSync accounts, make sure they are being managed by your device (page 77).

2. Tap a day to which you would like to add an event.
 - The default view for the Calendar is the **Month** view.
 - To change the view, tap the available tabs along the top (in portrait view) or the left (in landscape view) of the Calendar screen. Choose from **Month**, **Week**, **Day**, and **List**.

3. Tap the **Event** field and enter a title for the event.
4. Select a **From/To** date and time for the event by tapping the corresponding fields, and adjusting the values by tapping  or .
- Tap the **AM** or **PM** button to change the value.
- Tap **Set** when finished.
5. Tap the **Time zone** field and select a time zone.
6. Tap the **All day** field to assign this as an all day event. If assigned as an all day event, the time fields are removed as options.
7. Tap the **Calendar** field and then select an account in which to assign the new calendar event.

Note: Some of the available options are dependant on the type of currently available email accounts.

- **My calendar** are calendar entries that are stored locally on the device and not part of an email account.
 - Tap **OK** when finished.
8. Enter a location for the event in the **Location** field.

9. Assign participants by either entering the name directly into the **Participants** field.

Note: Some options are dependant on the type of available email accounts.

10. Tap **Repeat** to select a recurrence cycle for this event: **None** (do not repeat this event), **Daily**, **Every weekday (Mon-Fri)**, **Weekly (every [day])**, **Every 2 weeks [day]**, **Monthly (every first [Number Day])**, **Monthly (on day [Number])**, **Yearly (on [Month Day])**.
11. Tap the **Reminders** field and tap the drop-down to select a reminder time.
 - Select **On time**, **5 mins before**, **15 mins before**, **1 hour before**, **1 day before**, **2 days before**, **1 week before**, or **Customize**.
 - **Customize** allows you to manually enter a desired number. Tap **Set** to complete the custom assignment.
12. Enter a description for the event in the **Description** field.
13. Tap **Save** to store the new event and synchronize it with your selected account.

Event Reminders

When your device is turned on and you have an event alarm scheduled, there are several ways your device alerts you to scheduled events:

- By playing a short beep.
- By illuminating the backlight.
- By indicating a  icon within the Status bar.

To view additional options:

1. Tap the Status bar, and then slide your finger down the screen to open the Notifications panel.
2. Tap the upcoming event name from the onscreen list to display the event within the Calendar notifications screen.
3. Tap an option:
 - **Snooze all** to snooze all event reminders for five minutes.
 - **Dismiss all** to dismiss all event reminders.
 - Press  to keep these reminders in place and close the Notifications panel.

Viewing Events

1. Press  and tap  > . Once an event is created, entries are shown in the default view.
2. To view a Calendar event farther out, tap either **Week** or **Month**.

Note: If in the Month view (tab), days containing calendar events are indicated by a blue triangle. Tap a day from this view to display a list of event within the Day tab.

3. Tap the day for which you would like to view events. (Your device lists events in chronological order.)
4. Tap the event to display the event's details.

Going to the Current Day's Calendar Menu

- From Calendar view, press  and tap **Today**.

Editing an Existing Event

1. Press  and tap  > .
2. Tap an event to reveal its details.
3. Press  and tap **Edit**.

4. Make your modifications (event name, location, participants, alarm, repetition, etc).
5. Tap **Save** to store the new updates and synchronize them with your assigned account.

Erasing a Day's Events

1. Press  and tap  > .
2. Tap the **Day** tab on the Calendar screen.
3. Find the selected day and press  and tap **Delete**.
4. Tap **Select all** to delete all events on this day.
– or –
Place a checkmark only on those events you want deleted.
5. Tap **Delete > Yes** to erase the selected events and then synchronize this action with your managed account.

Erasing All Events

1. Press  and tap  > .
2. From the main Calendar screen (Month tab view), press  and tap **Delete**.
3. Tap **Select all** to delete all events currently available for this managed account.
– or –
Place a checkmark only on those events you want deleted.
4. Tap **Delete > Yes** to erase the selected events and then synchronize this action with your managed account.

Clock


Your device comes with a built-in series of functions accessed through the Clock screen such as Alarm, Picture Gallery, Music Player, and Home screen.

Alarm Clock

The alarm clock that has multiple alarm capabilities. There is no limit to the number of alarm events you can create.

To create an Alarm event:

1. Press  and tap  > . This allows access to the alarm and media application screen.

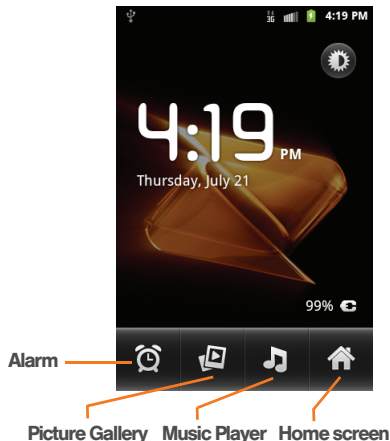

	Alarm: Launches the Alarm feature.
	Picture Gallery: Launches the Gallery.



Music Player: Launches the Music Player.



Home Screen: Takes you back to the Home screen.

2. Tap  (**Alarm**) to launch the alarm screen.

Note: Upon your first launch of the Alarm Clock application, two alarm presets are set up by default and ready for you to customize. These alarms are turned off by default.

3. Tap  (**Add alarm**) to activate an alarm.
4. To activate an existing alarm, tap the clock icon.
5. To edit an alarm, tap the entry and then tap the **Time** field to adjust the alarm time.
- Adjust the hour and minute by tapping either  or .
 - Tap the **AM** or **PM** button to change the value.
 - Tap **Set** when finished.

Note: The number of hours and minutes left before the alarm goes off is briefly displayed onscreen after you set the new alarm time.

6. Tap the **Repeat** field to select a repeating status for the alarm.
- Place a green checkmark adjacent to the desired repetition days and tap **OK**.
7. Tap **Ringtone** to select an audio ringtone that will sound with the alarm.
- Tap a ringtone to hear an audio sample.
 - Tap **OK** to accept the ringtone assignment.
8. Tap **Vibrate** to add a vibration feature to the alarm.
9. Select a unique name for this alarm event by tapping the **Label** field, entering a new label, and tapping **OK**.
10. Tap **Done** to store the new alarm event.

Note: To allow the alarm to sound even while the device is in silent mode, press  and tap **Settings**, then activate the **Alarm in silent mode** field.

To delete an Alarm event:

1. Press  and tap  >  > .
2. Touch and hold a desired alarm event.
3. From the onscreen context menu, tap **Delete alarm** and then tap **OK**.

To disable an Alarm event:

1. Press  and tap  >  > .
2. Touch and hold a desired alarm event.
3. From the onscreen context menu, tap **Turn alarm off**.
– or –
4. Touch the active alarms event's green icon until it turns gray.

My Files

My Files allows you to view a list from which you can launch a file if the associated application is already on your device (ex: MP4 and DivX).

Note: The best recoding setting for MP4 video playback on this device is H.264 for Android™ or PSP™.

Accessing File Viewer

- ▶ Press  and tap  >  (**My Files**).
Navigation in this viewer works on a hierarchy structure with folders, subfolders, etc.

Opening Files in File Viewer

1. Press  and tap  >  (**My Files**).
2. Tap a folder and scroll down or up until you locate your selected file.
 - Tap the **Up** tab to back up into a higher directory.
 - Tap the **Home** tab to back up to the root directory.
 - Press  and tap the **View by** to change the way the files are displayed onscreen. Choose from: **List**, **List and details**, or **Thumbnail**.

- Press  for these additional options: **Share**, **Create folder**, **Delete**, **View by**, **List by**, and **More** (**Move**, **Copy**, **Rename**, and **Settings**).

3. Once you have located your file, tap the file name to launch the associated application.

Calculator

Your device comes with a built-in calculator.

- Press  and tap  >  (**Calculator**).

Calculating

1. Press  and tap  >  (**Calculator**).
2. Enter the operation for your calculation by touching the **Plus**, **Minus**, **Multiplication**, or **Division** key.
3. Enter the next number.
 - or –
 Open the keyboard to view other mathematical keys and functions.
4. Tap the = (equals) key to view the result.
5. Repeat steps 1-4 as many times as required.

Clearing History

- Touch and hold the  key to clear all numbers.

Updating Your Device Firmware

You can update your device's software using the **Update Firmware** option.

Before Updating Your Firmware

Updating your device firmware may erase all user data from your device. You must back up all critical information before updating your device firmware.

As an added precaution, to preserve any data on your microSD card, please remove it from your device prior to starting the update process. (See “Your device is equipped with a preinstalled 2GB SDHC (Secure Digital High Capacity) memory card. It allows you to store images, videos, music, and data in your device.” on page 113.)

Back Up Your Data Prior to Update

To back up your Gmail information:

1. Press  >  and tap  > **Accounts & sync**. (See “Synchronizing Accounts” on page 77.)
2. Tap the **Auto-sync** option to enable the feature (green checkmark). (See “Synchronizing Your Google Account” on page 78.)
 - If the **Auto-sync** option is on, email, Calendar and Contacts automatically synchronize whenever a change is made.
 - If the **Auto-sync** option is off, simply tap  within the account field to reveal the account's synchronization settings screen.

To back up your Exchange Mail information:

1. Press  >  and tap  > **Accounts & sync**. (See “Exchange Server Email (Outlook)” on page 164. See “Synchronizing Accounts” on page 77.)
2. Tap  within the **Manage accounts** field to reveal the account's synchronization settings screen.

3. Toggle the onscreen checkmark to manually synchronize the desired parameters (Contacts or Calendar).

To back up stored text messages:

1. Press  and tap  > .
2. Select the text message from the list to view the message thread.
3. Touch and hold on a portion of the text message from the string. The **Message options** context menu appears.

Note: You can back up stored text messages by forwarding them to your own phone number. Open the messages after you have updated your firmware.

4. Tap **Forward**.
5. Enter the recipient's phone number and tap **Send**.

To restore your Google applications:

Your Google™ application purchases are reloaded remotely and can be re-installed after the update is applied. (See “Using the Android Market” on page 170.)

1. Log into your Google account via the device.

2. Press  and tap  >  .
3. Press  and tap **My apps**.
4. Scroll through the list of previously added Google applications and choose the one you wish to reinstall.
5. Follow the onscreen instructions.

Updating Your Device Firmware

Once you have backed up all your data, use the **Update Firmware** option to update your device firmware.

1. Press  >  and tap  > **About phone** > **System Updates**.
2. Tap **Update Firmware**. (Your device automatically installs any available updates). You may be required to power your device off and back on to complete the software upgrade.)
 - or –
1. Locate the System Update Available icon () from the Status bar area.

2. Touch and hold the Status bar, then slide your finger down the screen.
3. Tap  to open the System Updates screen.
4. Tap **Download** and follow the onscreen instructions. ( displays within the Status bar to indicate the device is adding the necessary files.)
5. Tap **Restart & install** to complete the process.

Note: The Notifications panel can also be opened on the Home screen by pressing  and then tapping **Notifications**.

Confirm Your Current Device Firmware

1. Press  >  and tap  > **About phone**.
2. Scroll to the bottom of the page and locate the **Baseband version** read-only field.

Updating Your Profile

This option allows you to automatically update your online user profile information. If you choose to change your user name and select a new one online, you must then update the user name on your device.

1. Press  >  and tap  > **About phone** > **System updates** > **Update Profile**.
2. Follow the onscreen instructions.

Note: If your data services or account syncing ever seems to go out unexpectedly, use this feature to reconnect with the network.

Updating Your Samsung Software

1. Press  >  and tap  > **About phone** > **System updates** > **Update Samsung Software**.
2. Follow the onscreen instructions.

2G. Services

- ◆ Voice Dialer (page 109)
- ◆ Opening Menus With Voice Dialer (page 111)
- ◆ Text-to-Speech (page 111)
- ◆ Search (page 112)

Important: The **Control** (Speech to Action) feature will not launch if you are currently in an active menu.

Voice Dialer

You can use your device's built-in automatic speech recognition (ASR) software, called **Voice Dialer**, to dial a phone number in your Contacts or to launch phone functions. All you have to do is to talk into the phone, and ASR will recognize your and complete tasks by itself.


Activating Dialer

- Press  and tap  >  (**Voice Dialer**).

The screen displays “**Listening**” and the phone prompts you to say the name of the command you want to use. To complete your task, simply follow the prompts or tap an onscreen option.

Available ASR commands include:

- **Call** <Name> to call an entry in your Contacts list. (See “Calling a Contact With Voice Dialer” on page 110.)
- **Dial** <#> to call a spoken phone number.
- **Redial** to redial the last number called.

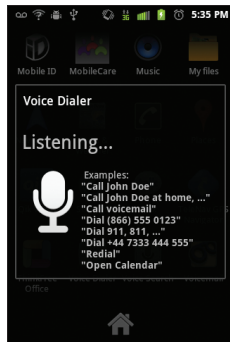

- **Open** <Menu> to jump directly to menu items or applications. (See “Opening Menus With Voice Dialer” on page 111.)

Tip: Use Voice Dialer in a quiet environment so it can accurately recognize your commands.

Calling a Contact With Voice Dialer

1. Press  and tap  >  (**Voice Dialer**).
2. When you see “**Listening**,” say “**Call**” followed by the name and the label for the contact you wish to call. For example, say “**Call John Smith Mobile**.” The device displays the name it understands on the screen.
 - If the location is not recognized or the name does not have a phone number stored in Contacts, you will see an onscreen list of possible options.
 - If a name has only a single number, or if you know the name but are not sure which number to call, say “**Call**” followed by the name only. For example, say “**Call John**.”
 - If the name is recognized and there is only one phone number for the name. Tap OK to dial the number.

- If there are multiple numbers, a list displays; tap a number to place the call.

Calling a Phone Number With Voice Dialer

1. Press  and tap  >  (**Voice Dialer**).
2. When you see “**Listening**,” say “**Dial**” followed immediately by a valid string of digits to dial, for example, say “**555 555 5555**.”


Speak naturally and clearly and remember to speak one digit at a time—1-800 should be pronounced “One Eight Zero Zero.”

Opening Menus With Voice Dialer

You can jump directly to many menu items or applications by saying “Go to” followed by a menu option.

1. Press  and tap  >  (Voice Dialer).
2. When you see “Listening,” say “Open.” A list of valid actions is displayed.
3. Tap an option to open the selected menu.

Tip: You can also say “Open” and the name of the item you want to open. You will see the item displayed. Tap **OK** to open it.

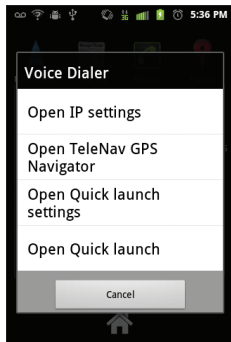

Text-to-Speech

Allows the device to provide a verbal readout of onscreen data such as messages and incoming caller information (based on Caller ID).

Text-to-Speech Settings

1. Press  >  and tap  > **Voice input & output** > **Text-to-speech** > **Text-to-speech settings**.
2. Configure the available options to alter the settings associated with this feature.
 - **Listen to an example** plays a short example of what the text-to-speech feature will sound like on your device when activated.
 - **Always use my settings** overrides any conflicting application settings with those you set up within this text-to-speech settings screen. If enabled, and available as a feature, your device will default to using the text-to-speech feature.
 - **Default Engine** sets the speech synthesis engine used for the spoken text. Default is **Pico TTS**.

- **Install voice data** confirms the installation of necessary data required for synthesis. Tap this to ad and install the free app from Android market.

Important: Before initial use, activate the **Install data** function to properly activate and use the text-to-speech feature.

- **Speech rate** adjusts the rate at which onscreen text is spoken by the device. Choose from: **Very slow, Slow, Normal, Fast, and Very fast.**
 - **Language** assigns the language used by the verbal readout. Choose from **American English or Spanish.**
 - **PicoTTS** assigns the TTS settings. These settings must be obtained from the Android Market.
3. Press  to return to the previous screen.

Search

Search works similarly to the Voice Dialer. It uses built-in recognition software to listen to your spoken words, convert those to text, and then launch a Google search using that text.

1. Press  and tap  >  (**Voice Search**).
2. Speak clearly into the microphone. If an error occurs, tap **Try again**.
3. From the onscreen Google search page, tap a matching entry.

For more information, see “Using Your Device to Search” on page 22.

2H. microSD Card

- ◆ Your Device's microSD Card and Adapter (page 113)
- ◆ Connecting Your Device to Your Computer (page 115)
- ◆ microSD Card Settings (page 118)
- ◆ Important Connection Information (page 118)

Your Device's microSD Card and Adapter

The microSD Card

Important: Camera, Camcorder, and Music playback features require that you have a microSD memory card installed. Although the Samsung Transform™ Ultra comes with a pre-installed 2GB card, it can support SDHC cards of up to 32GB.

Your device is equipped with a preinstalled 2GB SDHC (Secure Digital High Capacity) memory card. It allows you to store images, videos, music, and data in your device.

Removing the microSD Card

1. Remove the battery cover.
 - Grasp the device firmly and locate the cover release latch.
 - Place your fingernail in the opening and firmly “pop” the cover off the device (similar to a soda can).
2. Firmly press the card into the slot and release it. The card should pop partially out of the slot.
3. Remove the card from the slot.
4. Replace the battery cover.

Note: You can easily damage the microSD card and its adapter by improper operation. Please be careful when inserting, removing, or handling it.



WARNING: Do not over-insert the card as this can damage the contact pins.

Re-inserting the microSD Card

1. Remove the battery cover.
2. Insert the microSD card into the microSD card slot and push in until you feel a click.
3. Replace the battery cover.

Note: Make sure the microSD card's gold contacts are facing down.

Be sure to use only recommended microSD cards ($\leq 32\text{GB}$). Using non-recommended microSD cards could cause data loss and damage your device.

microSD Icon Indicators

The following icons show your microSD card connection status at a glance:



– card has been unmounted (released from use) from the device.



– card has been incorrectly removed.

WARNING: **DO NOT** remove a microSD card while the device is accessing or transferring files. Doing so will result in loss or damage of data. Make sure your battery is fully charged before using the microSD card. Your data may become damaged or lost if the battery runs out while you are using the microSD card.

microSD Adapter

The supplied microSD adapter allows you to use microSD cards in other SD-compatible devices, like computers, cameras, and printers. Before using the microSD card with an SD-compatible device, you will need to insert the microSD card into the microSD adapter.

To insert the microSD card into the microSD adapter:

- ▶ With the label side of the microSD card facing up, insert the card into the supplied microSD adapter, and gently slide the card until it is fully inserted.

To remove the microSD card from the microSD adapter:

- ▶ Hold the front edge of the microSD card, and gently pull it out to remove it from the adapter.

Write Protection

The microSD adapter has a built-in Write Protection lock to prevent accidental overwriting or removal of your data when the microSD card and adapter are inserted in another device.

Slide the Write Protection lock tab down into the “Lock” position to prevent overwriting of data. To allow data to be added or removed from the microSD card, slide the Write Protection lock tab up into the normal position.

Connecting Your Device to Your Computer

Before using your device’s mass storage capabilities, you need to prepare your device’s data services to synchronize with your desktop or laptop computer. Once you have connected the device to the computer, you can transfer your data to or from the microSD card.

Note: If you experience a setup issue, refer to the “Troubleshooting USB Connection” on page 116.

Before You Begin

Here is what you will need to have before you can successfully establish a connection between your Samsung Transform™ Ultra and a PC.

- microSD card (internally installed prior to start)
- compatible USB cable (included)

1. With the microSD card installed, connect your device to your computer using a compatible USB cable. (Wait for the connection to be completed. When connected, the host computer will automatically detect your device.)
2. Tap **Mass Storage** from the **USB connection** screen.
 - **Charging** uses the connected USB cable to charge the device via your computer's USB port.
 - **Mass Storage** uses the connected USB cable to provide data communication between the device and your computer. The device then appears as an external drive with its own drive letter.
 - Go to www.samsung.com and visit the Transform™ Ultra Product page, where you can navigate to the Support tab to obtain this driver.
 - The online FAQ also provides detailed information about this driver.
 - **Ask on connection** asks for a connection type when you connect to a computer.

To remove the connection:

- When you finish transferring data, click the USB device icon on your computer's taskbar, and follow

the onscreen instructions to safely unplug the USB cable.

Troubleshooting USB Connection

If there is ever a circumstance where your setup of the device's USB connection has an issue, try these troubleshooting tips.

1. Verify your computer is able to access the Internet prior to connection and that this connection is not lost during these troubleshooting procedures.
 - Some system connections might require additional setup data available online.
2. Once the device is connected to the computer via USB, select **Connect to PC** to begin the USB connection setup.
 - Selecting the **Charge** option closes the USB data connection.
 - Verify the device screen shows **Connected to PC**.
3. From the **Found New Hardware Wizard**, select **Install the software automatically** and click **Next**.
4. Select a connection to the Internet and click **Next**.

5. If a **Cannot install this Hardware** screen displays, follow these steps:
 - Click **Finish**.
 - From your computer, right-click on the **My Computer** icon and select **Properties** (from the onscreen context menu).
 - Click the Hardware tab and select the **Device Manager**.
 - Open the **Other devices** section from the list. Confirm there is a **USB MMC Storage** item listed.
 - This entry indicates an error occurred during the USB driver installation process.
 - Using your mouse, right-click on **USB MMC Storage** and select **Update Driver....**
 - From the **Found New Hardware Wizard**, select **Install the software automatically** and click **Next > Finish**.

Transferring Data Directly to and From the microSD Card

You can access the microSD card and use it just as easily as any other communicating storage device.

1. Connect the USB cable and tap **Connect to PC**.
2. From your Desktop, double-click **My Computer > [device drive letter]** to display the folders and files currently available on the internal microSD card.
3. Open a folder on your computer and begin the transfer process of files from your computer to the internal card's target folder.

Note: This process can be reversed from copying data from the microSD card back to the connected computer.

To remove the connection:

1. When you finish transferring data, click the USB device icon on your computer's taskbar, and follow the onscreen instructions to safely unplug the USB cable.
2. To complete the disconnect process, touch and drag the **Disconnect** slider.

Creating Folders in the microSD Card

1. From your Desktop, double-click **My Computer > [device drive letter]**.
2. Right-click and select **New > Folder**.

WARNING: Do not alter or delete the four default folders. These are used by the phone to parse-out the different file formats and contents.

microSD Card Settings

Viewing Memory in the microSD Card

The Samsung Transform™ Ultra allows you to review the memory allocation of both your device's internal storage and that of the microSD card.

1. Press  >  and tap  > **Storage**.
2. Review the available information.
 - The storage capacity page is divided into two sections: **SD card** and **Internal phone storage**.
3. Press  to return to the previous page.

Formatting the microSD Card

Formatting a microSD card permanently removes all files stored on the card.

1. Press  >  and tap  > **Storage**.
2. Tap **Erase SD card** > **Erase SD card** > **Erase Everything**.
 - Once completely formatted, the card is automatically re-mounted (reconnected for use by the device).

Important: The formatting procedure erases all the data on the microSD card, after which the files **CANNOT** be retrieved. To prevent the loss of important data, please check the contents before you format the card.

Important Connection Information

- To avoid loss of data, DO NOT remove the USB cable, the microSD card, or the battery while accessing or transferring files.
- DO NOT use your computer to change or edit folder or file names on the microSD card, and do not attempt to transfer large amounts of data from the computer to the microSD card. Doing so may cause the microSD card to fail.

- DO NOT turn off or restart your computer, or put it into standby mode, while using a mass storage device. Doing so will result in loss or damage of data.
- The microSD card can only be mounted for use by either the device or a connected computer. Prior to accessing the card via a different method, it must first be unmounted from its current device (phone or computer-USB).

Important: The microSD card can only share a connection with one device at a time, either your device or your computer (via its USB connection), not both. You can not browse the contents of the card via your device if they are currently being browsed via your PC.


2l. Camera

- ◆ Taking Pictures (page 120)
- ◆ Recording Videos (page 125)

Note: The storage card that comes installed on your device allows you to use the camera and camcorder features. All pictures and videos are stored on the internal 2GB SDHC card. The Samsung Transform™ Ultra supports SDHC cards of up to 32GB.

Taking Pictures

Taking pictures with your device's built-in camera is as simple as choosing a subject, pointing the lens, and pressing a button.

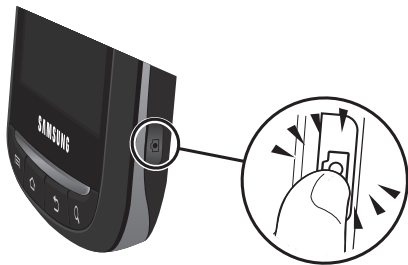

To take a picture:

1. Press and hold the camera key () located on the side of the device.
– or –
Press  and tap  >  (**Camera**) to activate camera mode. (Additional camera options are available through the camera settings page. (See “Camera Settings” on page 121 for more information.)

2. Holding the phone in landscape mode, use the display screen as a viewfinder and aim the camera lens at your subject.
3. Press  or tap  until the shutter sounds. (Your device automatically saves the picture to the **DCIM** folder on the microSD card.)

Camera Settings

1. From camera mode () tap one of the following:
 - **Camera settings** to access camera hardware settings:
 - **Focus mode** to force the camera to focus on a specific area on the display, even if it's not in the center of the frame. Choose from **Auto** (default), **Macro**.
 - **Exposure mode** to adjust the overall image brightness. Use the onscreen slider to adjust the value. Choose from **+2**, **+1**, **0** (default), **-1**, or **-2**.
 - **Scene Mode** to select a camera setting for better image capture depending upon the brightness, location, subject, or angle. Choose from: **Auto** (default), **Portrait**, **Landscape**, **Night**, **Beach**, **Sunset**, **Fireworks**, **Sports**, **Party**, **Candlelight**, **Against Light**, **Dawn**, or **Text**.
 - **Picture Size** to set the size of your image. Choose from: **3M Pixels** (default), **2M Pixels**, **1.3M Pixels**, or **VGA**.
 - **Picture quality** to set the image quality for your image. Choose from: **Superfine**, **Fine**, or **Normal** (default).
 - **Color effect** to apply different color effects onto images. Choose from: **None** (default), **Mono**, **Sepia**, **Negative**, or **Sketch**.
 - **Select Auto Exposure Mode** to set which information within the scene is used to calculate the exposure value. Choose from: **Frame Average**, **Center Weighted** (default), or **Spot Metering**.
 - **Camera settings** to restore the settings to the default parameters.

- **Store location** to store the actual location (latitude and longitude) where the image was taken so the photo can later be displayed on Google™ Maps or used in other social applications. Choose from: **On** or **Off** (default).
- **White balance** to compensate for color differences found within different lighting conditions. Choose from: **Auto** (default), **Incandescent**, **Daylight**, **Fluorescent**, or **Cloudy**.
- **Flash mode** to configure flash. Choose from **Auto** (default), **On**, or **Off**.
- **Zoom** to adjust the distance of your image. Choose from: **4x**, **3x**, **2.3x**, **1.7x**, **1.3x**, or **1x**.
- **Select camera** to toggle between the **Back** (default) and **Front**-facing camera modes.




View Your Pictures

The Gallery is where you can access the Gallery of stored camera images.

1. Press  and tap  >  (**Gallery**).
2. Select a folder location (for example: **Camera pictures**) and tap an image to view your picture.
 - Press  from the main Gallery screen reveals gallery-specific options **Share**, **Delete**, and **More**.

- From the image folder, touch and hold any desired images to select them. The options such as **Share** (Bluetooth, Email, Gmail, Messaging, Picasa, or Wi-Fi), **Delete**, and **More** (Details, Set as, Crop, Rotate left, or Rotate Right).

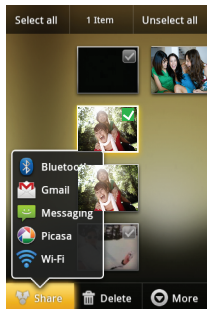

- Tap an image to open it, and select options Slideshow for options such as **Share** (Bluetooth, Email, Gmail, Messaging, Picasa or Wi-Fi), **Delete**, and **More** (Details, Set as, Crop, Rotate left, or Rotate Right).
- Press  to return to the previous screen.

Camera Image Settings

- Press  and tap  >  (**Gallery**).
- From **Camera** gallery, tap an image icon to open the image.
 - Use the zoom buttons (upper-right of the image) to zoom in or out.

Note: **Picture options** can also be accessed by touching and holding the image from the gallery. These options include: **Share**, **Delete**, and **More**.

Note: Tap an onscreen image to display the available options (**Zoom**, **Slideshow**, or **Menu**).

- Tap **Slideshow** to initiate an onscreen slideshow displaying every image in the current folder.
 - or –
 - Tap **Menu** to display the following image menu options:
 - Share** to activate the picture share menu from which you can choose to share the current image via one of many options:
 - Bluetooth** to send the image to another device via Bluetooth.

- **Email** to attach the image to a new Email message.
- **Gmail** to attach your image to a new Gmail email message.
- **Messaging** to insert your image into a new outgoing MMS message (multimedia text message)..
- **Picasa** to help you edit, organize, and share your images.
- **Wi-Fi** to share the selected image via Wi-Fi.
- **Delete** to delete the image.
- **More** to open additional image options such as: **Details**, **Set as**, **Crop**, **Rotate left**, and **Rotate right**.

- **Details** to display image details such as Title, Type, Date taken, Album, Location, Latitude, and Longitude.

- **Set as** to assign the image to a current **Contact icon** (display image) or as the **Wallpaper** (Home screen background).
- **Crop** to crop the image. Crop the image and tap **Save** to a new version of the original.
- **Rotate** to rotate the image. Options include: **Rotate left** or **Rotate right**.



Assigning Pictures

After taking a picture, assign it as a picture ID for a Contacts entry or as the Home screen background image (wallpaper).

1. Press  and tap  >  .
2. From the **Camera** gallery (or other image folder), tap an image icon to open the image.
3. Tap **Menu > More > Set as** and select **Contact icon** or **Wallpaper**.

Recording Videos

In addition to taking pictures, you can record, view, and send videos with your device's built-in video camera.

1. Press and hold the camera key () located on the side of the device.
– or –
Press  and tap  >  (**Camera**) to activate camera mode. (Additional camera options are available through the camera settings page.

See “Camera Settings” on page 121 for more information.)

2. Touch and slide the camera mode slider up to camcorder mode (). Using the device's display screen as a viewfinder, aim the camera lens at your subject.
3. Select a recording video quality:
 - **Long Video (Normal)** the file size is normal and not limited by restriction.
 - **Video Mail (MMS)** the file size is limited by the restriction placed on video files that can be attached to MMS text messages. Depending on your settings, this can be up to 30 seconds.

Camcorder Settings



Begin and Stop Recording

4. Press  or tap  to begin recording.
5. Press  or tap  to stop recording. (Your device automatically saves the video within the **DCIM** folder on the microSD card.)

Camcorder Settings

From camcorder mode, touch the camera's panel on the right side and select from the following:

Note: Access a menus multiple options by tapping the onscreen arrows.

- **Camcorder setting** to access camcorder hardware settings:
 - **Color effect** to apply different color effects onto videos. Choose from: **None** (default), **Mono**, **Sepia**, **Negative**, or **Sketch**.
 - **Video quality** to set the length for your video. Choose from: **VGA** (default), **CIF**, **QVGA** or **QCIF**.
 - **Video duration** to set the length of recording time for each video. Choose from **30 seconds**, **10 minutes**, or **30 minutes**.
 - **Camera settings** to restore the settings back to their default values.
- **White balance** to compensate for color differences found within different lighting conditions. Choose from: **Auto** (default), **Incandescent**, **Daylight**, **Fluorescent**, or **Cloudy**.

- **Flash mode** to activate the built-in flash and provide an additional light source for new videos taken with the Samsung Transform™ Ultra. Set to **On** or **Off**.
 - **Video quality** to set the length for your video. Choose from: **Long Video (Normal)** or **Video Mail (MMS)**.
 - **Select camera** to toggle between the **Back** and **Front**-facing modes.
- or –
- Press  and adjust any of the following options:
- **Switch to camera** to switch to camera shooting mode.
 - **Gallery** to access the Gallery of stored camera videos.
 - Tap **Gallery** while in the Camcorder mode opens the **Camera** gallery.
 - Tap **Gallery** and press  to reveal gallery-specific options such as **Share**, **Delete**, and **More (Details)**.
 - Tap a video to begin playback.

6. Press  to return to the previous screen.

Video Settings

1. Press  and tap  >  (**Gallery**).
2. From **Camera videos** gallery, tap a video icon to begin video playback.

– or –

Touch and hold the video icon to display the following video menu context menu options:

- **Play** to begin playback of the current video file.
- **Share** to activate the **Share video via** menu from which you can choose to share the current video via one of many options:
 - **Bluetooth** to send the image to another device via Bluetooth.
 - **Email** to attach your video to a new Email message.
 - **Gmail** to attach your video to a new Gmail email message.
 - **Messaging** to attach your video to a new MMS message.

- **Wi-Fi** to share the selected video via Wi-Fi.
- **YouTube** to post the selected video to YouTube.
- **Delete**
 - **Confirm deletions** to confirm when a video is removed.
- **More**
 - **Details** to display image details such as File name, File size, Duration, Frame rate, Bit rate, Format, and Date taken.

2J. Bluetooth

- ◆ Turning Bluetooth On and Off (page 129)
- ◆ Using the Bluetooth Settings Menu (page 130)
- ◆ Pairing Bluetooth Devices (page 131)
- ◆ Sending Contacts via Bluetooth (page 132)
- ◆ Disconnecting Bluetooth Connection During an Active Call (page 133)

About Bluetooth

Bluetooth is a short-range communications technology that allows you to connect wirelessly to a number of Bluetooth devices, such as headsets and hands-free car kits, and Bluetooth-enabled handhelds, computers, printers, and wireless devices. The Bluetooth communication range is usually up to approximately 30 feet.

Turning Bluetooth On and Off

By default, your device's Bluetooth feature is set to **Off**. Turning Bluetooth on activates the internal Bluetooth antenna.

Note: Activating Bluetooth can drain your battery faster and reduce your available usage times. It is recommended that if you do not need it active, turn it off.

It is also recommended to turn off your Bluetooth within locations that prohibit its use.

To turn Bluetooth on:

1. Press  >  and tap  > **Wireless & networks**.
2. Tap **Bluetooth** to activate the feature (a green checkmark indicates it is active). When active, displays within the Status area. 

To turn Bluetooth off:

- ▶ Press  >  and tap  > **Wireless & networks > Bluetooth**.
 - Tap to remove the green checkmark and deactivate Bluetooth.

Bluetooth Status Indicators

The following icons show your Bluetooth connection status at a glance:



– Bluetooth is active



– Bluetooth is connected (paired) and communicating

[no icon] – Bluetooth is disabled (default status)


Using the Bluetooth Settings Menu

The **Bluetooth settings** menu allows you to set up many of the characteristics of your device's Bluetooth service, including:

- Entering or changing the name your device uses for Bluetooth communication and description
- Setting your device's visibility (or "discoverability") for other Bluetooth devices

To access the Bluetooth Settings menu:

1. Press  >  and tap  > **Wireless & networks > Bluetooth settings.**
2. Set your Bluetooth options: **Device name**, **Discoverable**, and **Scan for devices.**

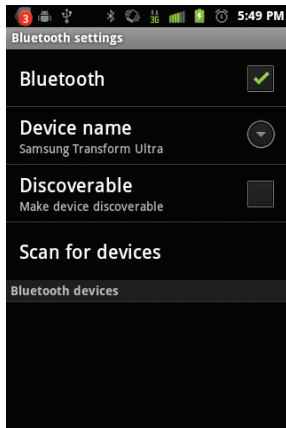

To change your Bluetooth name:

1. Verify your Bluetooth is active.
2. From the Bluetooth settings page, tap **Device name**.
3. Tap the **Device name** field and enter a new name.
4. Tap **OK** to complete the rename process.

To make your device visible:

1. Verify your Bluetooth is active.
2. From the Bluetooth settings page, tap **Discoverable**.
 - Making your device discoverable allows it to be detected by other devices for pairing and communication.

Note: Your device is visible for up to 120 seconds (2 minutes). This value appears as a countdown within this field.

To scan for Bluetooth devices:

1. Verify your Bluetooth is active.
2. From the Bluetooth settings page, tap **Scan for devices** to search for visible external Bluetooth-compatible devices such as headsets, devices, printers, and computers.

Pairing Bluetooth Devices

Paired Devices

The Bluetooth pairing process allows you to establish trusted connections between your device and another Bluetooth device. When you pair devices, they share a passkey, allowing for fast, secure connections while bypassing the discovery and authentication process.

To pair your device with another Bluetooth device:

1. Verify your Bluetooth is active.
2. From the Bluetooth settings page, tap **Discoverable**. Your device must be visible to successfully pair with an external device.
3. Tap **Scan for devices**. (Your device will display a list of discovered in-range Bluetooth devices, page 130.)
4. Tap a device from the list to initiate pairing.
5. Enter the passkey or PIN code and tap **Done > OK**.
– or –
Tap **Pair** from the onscreen pairing options popup.

6. The external device must accept the connection and enter your device's PIN code.

- Once successfully paired to an external device,  displays in the Status area.

Note: Due to different specifications and features of other Bluetooth-compatible devices, display and operations may be different, and functions such as transfer or exchange may not be possible with all Bluetooth-compatible devices.

Pairing between two Bluetooth devices is a one-time process. Once a pairing has been created, the devices will continue to recognize their partnership and exchange information without having to re-enter a passcode again.

To disconnect a paired device:

Disconnecting a paired device breaks the connection between the device and your Samsung Transform™ Ultra, but retains the knowledge of the pairing. At a later point when you wish to reconnect the device, there is no need to setup the connection information again.

1. Verify your Bluetooth is active.
2. From the Bluetooth settings page, touch and hold the name of the previously paired device.

3. Tap **Unpair** to confirm disconnection.

Note: Disconnections are manually done but often occur automatically if the paired device goes out of range of your Samsung Transform™ Ultra or it is powered off.

To access a paired device's settings:

1. Verify your Bluetooth is active.
2. From the Bluetooth settings page, **touch and hold** the name of the previously paired device.
3. Tap **Options...** (from the onscreen context menu) and configure the desired options.
4. Press  to return to the previous page.


Sending Contacts via Bluetooth

Depending on your paired devices' settings and capabilities, you may be able to send pictures, Contacts information, or other items using a Bluetooth connection.

Note: Prior to using this feature, Bluetooth must first be enabled, and the recipient's device must be visible.

If no devices are detected, tap **Scan devices** to begin a new search.

1. Press  and tap .
2. Tap an entry to open its Contact's overview page (page 92).
3. Press  and tap **Share > Bluetooth**.
4. Tap a paired device.
 - The external Bluetooth device must be visible and communicating for the pairing to be successful.

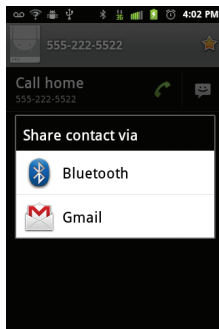

Disconnecting Bluetooth Connection During an Active Call

- ▶ During an active call, where the audio is being routed through a connected Bluetooth device (headset or hands-free connection), tap **Bluetooth** to route the device's audio through the connected Bluetooth headset (On) or through the speaker (Off).
 - When the call is routed to a Bluetooth headset, the current call area is surrounded by a blue box, the **Bluetooth** button indicates it's on, and shows the **Bluetooth** call icon (.
 - When turned off, the call is routed through either the earpiece or speaker, the call area is surrounded by a green box, the **Bluetooth** button indicates its off, and displays (.

Note: Communication can be toggled between the Bluetooth headset and the device speaker by tapping the **Headset** button On or Off.

Section 3
Boost Service



3A. Boost Service: The Basics

- ◆ Text Messaging (SMS) (page 137)
- ◆ Multimedia Messaging (MMS) (page 138)
- ◆ Caller ID (page 143)
- ◆ Call Waiting (page 143)
- ◆ Making a 3-Way Call (page 144)
- ◆ Call Forwarding (page 145)

Voicemail

Setting Up Your Voicemail

Your device automatically transfers all unanswered calls to your voicemail, even if your device is in use or turned off. You should set up your Boost Voicemail and personal greeting as soon as your device is activated. Always use a password to protect against unauthorized access.

Note: Your device's battery should have enough charge for your device to turn on and find a signal, set up your voicemail and make a call. You should fully charge your battery as soon as possible.

1. Tap  and then touch and hold **1**.
2. Follow the system prompts to:
 - Create your password.
 - Record your name announcement.
 - Record your greeting.

Note: Voicemail Password

Boost strongly recommends that you create a password when setting up your voicemail to protect against unauthorized access. Without a password, anyone who has access to your device is able to access your voicemail messages.

Voicemail Notification

There are several ways your phone alerts you to a new message:

- By displaying a message on the screen.
- By sounding the assigned ringer type.
- By displaying  at the top of your screen.

New Voicemail Message Alerts

When you receive a new voice message, your phone alerts you and prompts you to call your voicemail.

To call your voicemail:

- ▶ Press and hold **1**.

Note: When you are not connected to the Nationwide Sprint Network, you may not receive notification of new voicemail messages. Boost recommends that you periodically check your voicemail by dialing your ten-digit wireless phone number. When your voicemail answers, press ***** and enter your passcode. Check with your service provider for rates when you access voicemail while off the Nationwide Sprint Network.

Your phone accepts messages even when it is turned off. However, your phone notifies you of new messages only when it is turned on and you are in a Sprint service area.

Retrieving Your Voicemail Messages

You can review your messages directly from your wireless phone or from any other touch-tone phone. To dial from your wireless phone, either speed dial your voicemail or use the menu keys.

Using One-Touch Message Access

- ▶ Press and hold **1**. (Your phone will dial your voicemail box.)

Text Messaging (SMS)

With text messaging (SMS), you can send and receive instant text messages between your wireless device and another messaging-ready phone. When you receive a new message, it will automatically display on your device's screen.

Messaging is available via the Messaging application in your Applications screen. This icon () displays in Status bar area when a new text message is received.

Note: See your service plan for applicable charges for text and multimedia messaging.

Composing Text Messages

1. Press  and tap  >  (Messaging) > **New message**.
2. Tap the **To** field and enter a Contact's name, a mobile phone number, or an email address using either the onscreen or QWERTY keyboards.
 - **Contacts** as you enter either a phone number or email address, if the information matches a current contact's entry information, you will see a match. When you see a match, tap the associated name to complete the addressing.
 - **Mobile** to enter a wireless phone number directly.
 - **Email** to enter the recipient's email address.
3. If applicable, tap a matching entry from the onscreen drop-down list. This list is populated by matches found from your managed accounts.
4. Tap the **Type to compose** field and enter your message.
5. Review your message and tap **Send**.

Accessing Text Messages

To read a text message:

- When you receive a text message, you will see it listed within the Messaging screen. Tap the message to open it and then scroll down and view its entire content.

To reply to a text message:

1. While the message is open, tap the **Type to compose** field and then type your reply message.
2. Review your reply and tap **Send**.

– or –

You may select additional messaging options by pressing .)

- Options may include: **Call**, **Add subject**, **Attach**, **Insert smiley**, **Delete thread**, or **All threads**.

Multimedia Messaging (MMS)

With multimedia messaging (MMS), you can send and receive instant text messages that contain text, pictures, audio, recorded voice, or a picture slideshow.

Messaging is available via the Messaging application in your Applications screen.

Note: See your service plan for applicable charges for text and multimedia messaging.


Composing MMS Messages

Composing MMS messages is exactly the same as composing text messages, except that you attach a picture, a video, or an audio file to the message.

1. Press  and tap  >  (Messaging) > **New message**.
2. Tap the **To** field and enter a Contact's name, a mobile phone number, or an email address. As you enter the phone number or email address, matching contacts appear onscreen.
 - If applicable, tap an available matching recipient or continue entering the phone number or email address.
3. Tap the **Type to compose** field and enter your message.
4. Press  and tap **Attach**.

5. Select a multimedia attachment type:

- **Pictures:** Opens the Gallery application. Use the onscreen navigation to select the picture you wish to send with the outgoing message.
- **Capture picture:** Opens the camera application. Take a picture, and then tap **OK** to use this image in your message. (See “Taking Pictures” on page 120.)
- **Videos:** Opens the Gallery application. Use the onscreen navigation to select a video and attach it to your outgoing message.
- **Capture video:** Opens the camcorder application. Shoot a video, and then tap **OK** to use this video in your message. (See “Recording Videos” on page 125.)
- **Audio:** Opens the Select audio menu. Use the onscreen navigation to select an audio file and tap **OK**.
- **Record audio:** Opens the message recorder (shown).

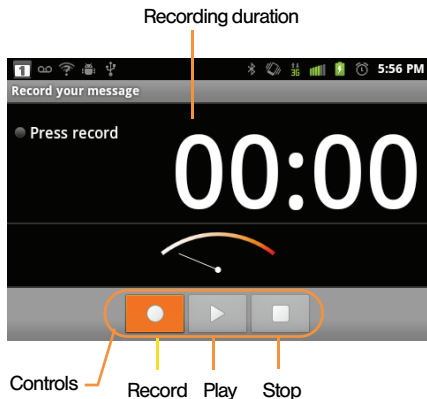


- **Recording duration:** length of the recorded voice message.
- **Volume Meter:** displays the volume level.
- **Record:** starts recording your message.
- **Play:** plays back the recording.

- **Stop:** stops the recording. Once stopped, tap either **Use this recording** (attach it to your message), or **Discard** (delete the current recording and re-record).

■ **Slideshow:** Opens the **Edit slideshow** menu.

- Tap **Add slide** to create a new slide (this is a placeholder for new images to be added, similar to a playlist).
- Tap the created slide (example, Slide 1), tap **Add picture**, and then select the picture you want to add to the slide.
- Tap the text field below the image to enter a caption for the picture.
- When finished, tap **Done** to attach the slideshow to your message.

Note: To remove or replace a picture or an audio attachment, on the Compose screen, tap the **Remove** button next to the attachment.

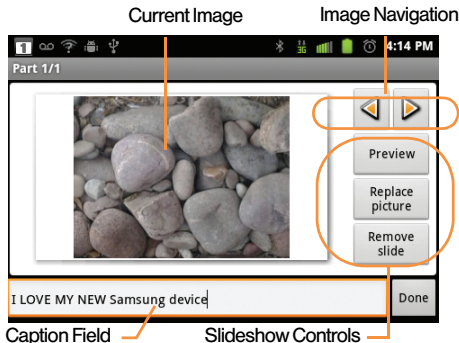

6. When you are finished creating your new MMS message, tap **Send MMS**.

To view and play a multimedia message:

1. Press and tap > .
2. From the message list, tap a multimedia message to open its contents.

3. While the message is open, tap the play icon (on a video or audio file) to play back the file or tap an image to view a picture.

Tip: The file attachment on the MMS message can be saved to the microSD card. To save the attachment, touch and hold the file and tap **Copy attached to SD card** from the Message options context menu.

To reply to a multimedia message:

1. Press and tap > .
2. From the message list, tap a multimedia message to open its contents.
3. While the message is open, tap the **Type to compose** field and then type your reply message.
4. Once complete, tap **Send**.

Note: When replying to a text message with an MMS message, first open the text message, press and tap **Add subject** or **Attach**. The original text message is then automatically converted into a multimedia message.

Deleting a Message or Message Thread

1. Press  and tap  > .
2. Touch and hold the message entry to display the context menu.
3. Tap **Delete thread** and once prompted, tap **OK** to complete the process.

Adjusting Message Settings

1. Press  and tap  > .
2. From within the Messaging screen, press  and tap **Settings**.
3. Adjust the following fields according to your needs:
 - **Delete old messages:** Enable this option to delete older text messages that exceed the defined maximum number of text messages limit set below.
 - **Text message limit:** Sets the maximum number of text messages that can be stored on the device (per conversation).

- **Multimedia message limit:** Sets the maximum number of multimedia messages that can be stored on the device (per conversation).
- **Auto-retrieve:** Enable this option to automatically retrieve the entire content of your MMS messages. When checked, the MMS message header, message body, and any attachments will automatically ad to your device.
 - If you disable this option, only the MMS message headers will be retrieved and shown in the message list.
- **Notifications:** Enable this option if you wish to receive a notification in the status bar when a new text or multimedia message arrives.
- **Select ringtone:** Allows you to select a ringtone to sound when a new message is received. Tap this option, and then select a ringtone that is specific to new text and multimedia messages. A sample will briefly be played upon selection.
- **Vibrate:** Enable this option if you want the device to vibrate when a new text or multimedia message is received.

Caller ID

Caller ID allows people to identify a caller before answering the phone by displaying the number of the incoming call. If you do not want your number displayed when you make a call, follow these steps.

1. Press  and tap  >  to access the onscreen dialpad.
2. Tap  **6** MNO **7** PQRS.
3. Enter a phone number and then press .


To permanently block your number, call Boost Customer Service.

Call Waiting

When you're on a call, Call Waiting alerts you to incoming calls by sounding two beeps. Your device's screen informs you that another call is coming in and displays the caller's phone number (if it is available and you are in digital mode).

To respond to an incoming call while you're on a call:

- ▶ Before accepting the incoming call, drag the onscreen caller ID to one of the following onscreen options:
 -  to answer the new call. The first caller is placed on hold.
 -  to send the call to your voicemail box.

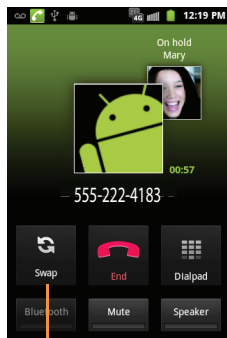

Call Swap

To switch back to the first caller:

- ▶ Tap **Swap** from the In-Call options screen (shown here).

Tip: For those calls where you don't want to be interrupted, you can temporarily disable Call Waiting by pressing *** 7 PQRS 0 .** before placing your call. Call Waiting is automatically reactivated once you end the call.

Making a 3-Way Call

With 3-Way calling, you can talk to two people at the same time. When using this feature, the normal airtime rates will be charged for each of the two calls.

1. Press  and tap  >  to access the onscreen dialer.


2. Make your call to the first recipient.
3. During a call select **Add call**.

- It may take up to **20 seconds** for the button to become active.

4. Enter the second caller's phone number and tap  or select a number from your Contacts tab. (Your first call is automatically put on hold.)

5. During a call select **Merge calls** to combine both calls into a single 3-way call.

If one of the people you called hangs up during your call, you and the remaining caller stay connected. If you initiated the call and are the first to hang up, all callers are disconnected.

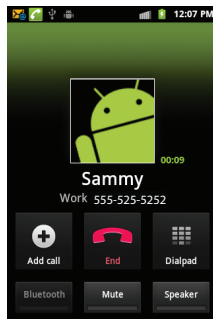

Call Forwarding

Call Forwarding lets you forward all your incoming calls to another phone number – even when your device is turned off. You can continue to make calls from your phone when you have activated Call Forwarding.

To activate Call Forwarding:

1. Press  and tap  to access the onscreen dialer.
2. Tap  **7** PQRS  ABC.
3. Enter the area code and phone number to which you want your calls forwarded.
4. Tap . (You will hear a tone to confirm the activation of Call Forwarding.)

To deactivate Call Forwarding:

1. Press  and tap  to access the onscreen dialer.
2. Tap  **7** PQRS  ABC  . (You will hear a tone to confirm the deactivation.)

Note: You may be charged a higher rate for calls you have forwarded.

Enabling/Disabling 3G Data

Your device allows you to control your use of 3G data. You can now choose to enable or disable this feature. With 3G data disabled, you must use Wi-Fi to connect to the Internet.

1. Press  >  and tap  > **Wireless & networks** > **Mobile networks**.
2. Tap **3G data** to enable the use of 3G data services. (A green checkmark appears next to the field.)

3B. Web and Data Services

- ◆ Getting Started With Data Services (page 146)
- ◆ Navigating the Web (page 147)
- ◆ Wi-Fi (page 154)
- ◆ Email (page 157)
- ◆ Using the Android Market (page 170)
- ◆ Boost Applications (page 172)

Getting Started With Data Services

With your Boost service, you are ready to start enjoying the advantages of data services. This section will help you learn the basics of using your data services, including managing your user name, launching a data connection, and navigating the Web with your Samsung Transform™ Ultra.

Important: Certain data service requests may require additional time to process. While your device is loading the requested service, the touchscreen may appear unresponsive when in fact it is functioning properly. Allow the device some time to process your data usage request.

Launching a Web Connection

- Press  and tap  >  (**Browser**). (Your data connection starts and you see the home page.)

Note: Internet connections can be made either through the Sprint network or via Wi-Fi (configured via the **Settings > Wireless & networks** page).

While connecting, you may see an animation. Once complete, you are connected to the default home page.

Tip: To change the default launch page to a current page, press  and tap **More > Settings > Set home page**.

Note: The Browser automatically launches when a Web link is tapped from within either an email or text message.

Data Connection Status and Indicators

Your device displays the current status of your mobile data connection through indicators at the top of the screen. The following symbols are used:



Your device is connected to the high-speed Sprint 3G network. When the arrows are animated, your device is transferring data (for example, when you are opening a Web page).



When the arrows are gray, your device is connected to the network but is not currently transferring data.

If you do not see an indicator, your phone does not have a current data connection. To launch a connection, see “Launching a Web Connection” on page 146.

Note: If you have a Wi-Fi connection, the mobile status indicators typically will not be displayed. See “Wi-Fi Status Indicators” on page 155.

Navigating the Web

Navigating through menus and websites during a data session is easy once you have learned a few basics.

Note: Prior to gaining access to Boost Web home page, you may be asked to enter your 10-digit wireless phone number and tap **Go**. Entering your phone number is not required for access to other Web pages.

Scrolling

As with other parts of your device’s menu, you’ll have to drag up and down to see everything on some websites.

To scroll through a website’s page:

- In a single motion, touch and drag across or up and down a page.

Selecting

To select onscreen items or links:

- Drag across a page, and then either touch or tap an onscreen link to select it.

Links, which are displayed as underlined text, allow you to jump to Web pages, select special functions, or even place phone calls.

Pinching and Zooming

Zooming in and out on a Web page can be done now without the need of an onscreen zoom tool. Just use your fingers to pinch in or spread out on the screen.

To zoom in:

1. Place your thumb and index finger on the screen.
2. Expand them outward (spread) to zoom in.

To zoom out:

1. Place your thumb and index finger on the screen.
2. Bring them together (pinch) to zoom out.

Going Back

To go back one page:

- ▶ Press  on your device. Repeat this process to keep going back through your Web page history of recently visited pages.

Note: You can use  for deleting text when you are entering text.

Going to a Webpage

1. Tap the **Address** field (top of the browser window) and enter a new Web address.
 - As you enter the address, possible matches are displayed within an onscreen list. Tap an entry to launch the desired website.
2. Tap  to launch the new page.

Browser Menu


The browser menu offers additional options to expand your use of the Web on your device.

Opening the Browser Menu

The browser menu may be opened anytime you have an active data session, from any page you are viewing.

- ▶ From any open Web page, press . (You will see the browser menu.)

Options available within the browser menu include:

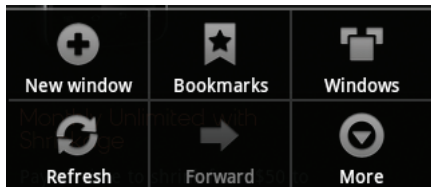

- **New window:** Launches a new Internet window while maintaining the current Web page active.
- **Bookmarks:** Allows you to access and manage your bookmarks.
- **Windows:** Displays the currently active browser windows as an onscreen list. Tap a window entry to launch that window.
- **Refresh:** Reloads the current Web page.
- **Forward:** Returns you to a previously viewed page.
- **More:** Add bookmark, Find on page, Select text, Page info, Share page, Downloads, and Settings.
- **More:** Provide additional browser options:
 - **Add bookmark (Menu+a):** Assigns the current Web page as a new bookmark.

- **Find on page (Menu+f):** Searches the current Web page for a word.
- **Select text (Menu+e):** Selects text from the current Web page.
- **Page info (Menu+g):** Displays the Name and URL (website address) of the site you're currently viewing.
- **Share page (Menu+s):** Allows you to send a URL via Gmail, SMS, or Exchange Server Email (Microsoft® Outlook®).
- **Downloads (Menu+d):** Keeps a list of previously downloaded content.
- **Settings (Menu+p):** Lets you configure and manage your browser settings.

Note: These additional options can also be accessed via the QWERTY keyboard by using a combination of the Menu button () and the specified key combination.

Selecting Text on a Web Page

1. While on an active Web page, press  to open the browser menu.
2. Scroll to the area of the webpage containing the desired text.
3. Tap **More > Select text**.
4. Touch and drag across the screen and highlight the desired text. Any selected text highlights and then copies to the device's clipboard.



Adjusting Browser Page Settings

1. Press  to open the browser menu.
2. Tap **More > Settings**.

3. Navigate to the **Page content settings** area and select from one of the following page settings:
 - **Text size:** Adjusts the current onscreen text size. Options include: **Tiny**, **Small**, **Normal**, **Large**, or **Huge**.
 - **Default zoom:** Sets the default browser viewing size. Choose from: **Far**, **Medium**, or **Close**.
 - **Open pages in overview:** Provides an overview of recently opened pages.
 - **Text encoding:** Adjusts the current text encoding.
 - **Block pop-up windows:** Prevents popup advertisement or windows from appearing onscreen. Remove the checkmark to disable this function.
 - **Load images:** Allows web page images to be loaded along with the other text components of a loaded website.
 - **Auto-fit pages:** Allows web pages to be resized to fit as much of the screen as possible.
 - **Landscape-only display:** Displays pages only in the wider landscape screen orientation.

- **Enable JavaScript:** Enables JavaScript for the current Web page. Without this feature, some pages may not display properly. Remove the checkmark to disable this function.
- **Enable plug-ins:** Enables browser plugins for the current Web page. Some pages may require plugins to properly display or function.
- **Open in background:** New pages are launched in a separate page and displayed behind the current one. Remove the checkmark to disable this function.
- **Set home page:** Sets the current home page for the Web browser (page 152).
- **Invert color:** Displays pages in inverted color. Add checkmark to enable and remove checkmark to disable.

Adjusting Browser Privacy Settings

1. Press  to open the browser menu.
2. Tap **More > Settings**.
3. Navigate to the **Privacy settings** area and select from one of the following privacy settings:

- **Clear cache:** Deletes all currently cached data. Tap **OK** to complete the process.
 - **Clear history:** Clears the browser navigation history. Tap **OK** to complete the process.
 - **Accept cookies:** Allows sites, that require cookies, to save and read cookies from your device.
 - **Clear all cookie data:** Clears all current browser cookie files.
 - **Remember form data:** Allows the device to store data from any previously filled out forms. Remove the checkmark to disable this function.
 - **Clear form data:** Deletes any stored data from previously filled out forms. Tap **OK** to complete the process.
 - **Enable location:** Allows sites to request access to your current location (using the built-in GPS).
 - **Clear location access:** Clears location access for all websites.
4. Press  to return to the browser.

Adjusting Browser Security Settings

1. Press  to open the browser menu.
2. Tap **More > Settings**.
3. Navigate to the **Security settings** area and select from one of the following privacy settings:
 - **Remember passwords.** Stores usernames and passwords for visited sites. Remove the checkmark to disable this function.
 - **Clear passwords.** Deletes any previously stored usernames or passwords. Tap **OK** to complete the process.
 - **Show security warnings.** Notifies you if there is a security issue with the current website. Remove the checkmark to disable this function.
4. Press  to return to the browser.

Advanced Settings

- **Set search engine** select Google, Yahoo!, or Bing as you search engine.
- **Website settings** select a search engine from the list, then follow screen prompts to adjust settings.

- **Reset to default** all configuration settings return to default settings.

Creating Website Settings

1. Press  to open the browser menu.
2. Tap **More > Settings**. These are advanced settings that can be configured for individual sites.
3. Tap **Clear location access** to complete the process.

Resetting the Browser to Default

1. Press  to open the browser menu.
2. Tap **More > Settings > Reset to default**.
3. Tap **OK** to complete the process.

Setting the Browser Home Page

1. Press  to open the browser menu.
2. Tap **More > Settings > Set home page**.
3. Delete the current address and enter a new Web page.
4. Tap **OK** to complete the process.

Setting the Search Engine

1. Press  to open the browser menu.
2. Tap **More > Settings > Set search engine**. Choose from **Google**, **Yahoo!**, or **Bing**.

Creating Bookmarks

1. From any open Web page, press . (The browser menu displays)
2. Tap **Bookmarks**. Three tabs are revealed:
 - **Bookmarks**: Displays a list of your current Web bookmarks.
 - **Most visited**: Displays a list of your most frequently visited websites. Tap an entry to launch the selected page.
 - **History**: Displays a record of your browsing history. These records are organized into folders such as: **Today** and **Last 7 days**.
3. Tap **Add** (first entry in the Bookmarks tab).
4. Enter a descriptive name for the new bookmark and tap **OK** to store the new entry to your Bookmarks list.

Creating Bookmarks From Other Tabs

1. From any open Web page, press  > **Bookmarks**.
2. Tap either **Most visited** or **History** tab.
3. Touch and hold an entry from the list to display an onscreen popup menu.
4. Tap **Add bookmark** to add the selected entry to your current list of bookmarks.
– or –
Repeat steps 1 and 2.
5. Tap the star icon adjacent to a website address. The star now turns gold. This adds the “starred” website to your current Bookmarks list.

Creating a New Home Page

1. From any open Web page, press  > **Bookmarks**.
2. Tap either **Most visited** or **History**.
3. Touch and hold an entry from the list to display an onscreen popup menu.

4. Tap **Set as homepage** to assign the selected entry as your new home page.

Adding Bookmarks to Your Home Screen

1. From any open Web page, press .
2. Touch and hold an existing entry from the list to display an onscreen popup menu.
3. Tap **Add shortcut to Home** to add the selected entry to your Home screen.

Wi-Fi

About Wi-Fi

Wi-Fi (short for "wireless fidelity") is a term used for certain types of wireless local area networks (WLAN). These device types use an 802.11 wireless specification to transmit and receive wireless data.

Wi-Fi communication requires access to an existing and accessible Wireless Access Point (WAP). These WAPs can either be Open (unsecured) as within most Hot Spots, or Secured (requiring knowledge of the Router name and password).

Turning Wi-Fi On and Off

By default, your device's Wi-Fi feature is turned off. Turning Wi-Fi on makes your device able to discover and connect to compatible in-range WAPs.

To turn Wi-Fi on:

- ▶ Press  >  and tap  > **Wireless & networks > Wi-Fi**. A green checkmark indicates active). The device scans for available in-range wireless networks.

To turn Wi-Fi off:

- ▶ Press  >  and tap  > **Wireless & networks > Wi-Fi**. The green checkmark does not display Wi-Fi deactivates.

Note: Use of wireless data connections such as Wi-Fi and Bluetooth can cause an added drain to your battery and reduce your use times.

To connect to a Wi-Fi network:

1. Press  >  and tap  > **Wireless & networks > Wi-Fi settings**.

- The network names and security settings (Open network or Secured with xxx) of detected Wi-Fi networks are displayed in the Wi-Fi networks section.

Note: When you select an open network, you will be automatically connected to the network.

2. To manually add your new network connection:

- Tap **Add Wi-Fi network**.
- Enter the Network SSID. This is the name of your Wi-Fi network.
- Tap the **Security** field and select a security option. This must match the current security setting on your target network.
- If secured, you will also need to enter your WAP's password. The **show password option**, reveals the password as you type it instead of only showing asterisks (****).
- Tap **Save** to store the new information and connect to your target network.

Note: The next time your device connects to a previously accessed or secured wireless network, you are not prompted to enter the wireless password again, unless you reset your device back to its factory default settings.

To manually scan for a Wi-Fi network:

1. Press  >  and tap  > **Wireless & networks > Wi-Fi settings**.
2. Press  and tap **Scan**.

Wi-Fi Status Indicators

The following icons show your Wi-Fi connection status at a glance:



– Wi-Fi is connected and active.



– Wi-Fi active but there is a communication issue with the target Wireless Access Point (WAP).

Using the Wi-Fi Settings Menu

The **Wi-Fi settings - Advanced** menu allows you to set up many of your device's Wi-Fi service, including:

- Setting your Wi-Fi sleep policy
- Viewing your device's MAC Address
- Setting the Proxy and Port information
- Configuring use of a Static IP

To access the Wi-Fi Settings menu:

1. Press  >  and tap  > **Wireless & networks > Wi-Fi settings.**
2. Press  and tap **Advanced.**

Enabling Wi-Fi Direct

Wi-Fi Direct allows device-to-device connections so you can transfer large amounts of data over a Wi-Fi connection.

1. Press  >  and tap  > **Wireless & networks > Wi-Fi Direct settings.**

2. Tap **Wi-Fi Direct** to turn it on. A green check mark indicates activation.

Viewing Wi-Fi Direct Status

- Press  >  and tap  > **Wireless & networks > Wi-Fi Direct settings.**
The Status field displays the Wi-Fi Direct status.

Wi-Fi Direct Settings

Wi-Fi Direct allows device-to-device connections so you can transfer large amounts of data over a Wi-Fi connection.

1. Press  >  and tap  > **Wireless & networks > Wi-Fi Direct settings.**
2. Tap **OK** at the Search for device prompt. Check **Do not show again** if you do not want this reminder each time you access these settings.
3. Tap **Wi-Fi Direct** to enable the feature.
4. Tap **Configure Wi-Fi Direct** and enter a device name.
5. Enter your Wi-Fi Direct password.

6. Check the **Show password** checkbox if you want your password to display when entered.
7. Tap **Save** to save your settings.

Sharing Files using Wi-Fi Direct

1. Press  >  and tap  > **Wireless & networks > Wi-Fi Direct settings**.
2. Tap **Wi-Fi Direct** to enable the feature.
3. Tap **Configure Wi-Fi Direct** and enter a device name.
4. Select a file, photo, or other file type to share, select a contact with which to share the file, then follow the screen prompts to share your file.

Disconnecting Wi-Fi Direct

1. Press  >  and tap  > **Wireless & networks > Wi-Fi Direct settings**.
2. Tap **Disconnect Wi-Fi Direct** to disconnect.

Email

Your device's Email applications let you access and manage multiple email accounts simultaneously in one convenient location.

Although there is a separate Gmail application, the main email application can manage both Internet-based email services (Gmail™ and Yahoo™) and Exchange Server Email (Microsoft® Outlook®).

The device can also be manually configured to connect to other email systems.

Note: If you have multiple email accounts, you must configure each account with its own settings.

If you want to send and receive email messages through an ISP (Internet Service Provider) account (such as Microsoft® Outlook®), or if you wish to use your device to access your Exchange Server Email (Outlook®) email through a VPN (Virtual Private Network), you will first need to set up an IMAP or POP account.

- **IMAP** (Internet Message Access Protocol) - This mail retrieval protocol is frequently used in large networks

and commercial and institutional settings. IMAP4 is the current standard.

- **POP** (Post Office Protocol) - This protocol is supported by most ISPs and is currently more common among consumer applications. POP3 is the current standard.

Note: For more information, review your email carrier's literature or contact your IT administrator.

Email Icons/Shortcuts



– IMAP/POP3 Internet Mail shortcut (such as Yahoo! and Microsoft® Outlook®).



– Gmail shortcut

Status Bar - Notifications



– New email message received



– New Gmail message received

Gmail (Google Mail)

This email client is Google's Web-based email service. A Gmail/Google Mail account is created once you sign-up for a new Google account online. (See "Creating a Google Account" on page 50.)

- From a computer, launch a Web browser and navigate to www.google.com.

Depending on your synchronization settings, Google Mail messages (along with calendar events, phone numbers and other contact information) on your device are automatically synchronized between your device and your Gmail/Google Mail account on the Web.

Note: You must have a valid and active Google account prior to using this email client.

Important: You must log into Google after every power cycle of your device. Logging into Gmail (via the device) does not sign you into your Google account. Gmail logging and access are separate from your main Google account.

Setting Up a Gmail Account via the Device

1. Press  and tap  >  (**Gmail**).
2. Follow the onscreen prompts.
 - The first time you connect, you are asked to give your Gmail account a unique onscreen name and enter a From name (displayed in your outgoing emails within the **From** field).
3. Tap **Done** to store the account information and complete setup.

Note: You must have a valid and active Google account (xxxxxx@gmail.com) prior to Gmail setup and configuration.

Your Gmail address is then used to log into your account via the device.

Signal interruptions or incorrect username or password information can cause completion issues.

Opening Gmail

1. Press  and tap  >  (**Gmail**).
2. Tap an email message.

To refresh your Gmail messages:

- Press  and tap **Refresh**.

Composing Gmail

1. Press  and tap  >  (**Gmail**).
2. Press  and tap **Compose**.
3. Enter the message recipient's email address in the **To** field.
 - If you are sending the email to several recipients, separate the email addresses with a comma.
 - You can add as many message recipients as you want.

Note: To send a carbon copy (Cc) or a blind carbon copy (Bcc) of the current email to other recipients, press  and tap **Add Cc/Bcc**.

4. Tap the **Subject** field and enter the email subject.
5. Tap the **Compose Mail** field and compose your email.
 - To add a file attachment, press  and tap **Attach** (from the bottom of the screen).
 - Select the picture you want to attach.

- Tap  to delete a selected attachment from your current email.

6. Once complete, tap **Send**.

- Tap **Save as draft** to save the current email as a draft. To later view your draft email messages, from the Inbox, tap the **Drafts** folder.
- To delete the current email message, tap **Discard**.

Creating a Gmail Signature

1. From the Gmail inbox, press  and tap **More > Settings > Signature** field.
2. Enter a signature and tap **OK**.

Accessing Gmail Messages

A new Gmail message  icon appears within the Notifications area of the Status bar to notify you of a new email.

To view a new email:

1. Press  >  > **More > Notifications**.
– or –

Touch and hold the Status bar, then slide your finger down the screen. (See “Using the Notifications Panel” on page 38.)

2. Tap the new email from the **Notifications** list to launch the **Inbox** tab.
3. Scroll up and down the email by dragging your finger up and down the screen.

To reply to an email message:

1. With the email message displayed, tap  > **Reply > Sender** or **All**.
2. Enter a new message body and tap **Send**.

To delete an email message:

- With the email message displayed, tap **Delete**.

Configuring Gmail Settings

1. Press  and tap  > .
2. Press  and tap **More > Settings**.
3. This menu provides both field information and settings:
 - **Signature**: Allows you to create an email signature for your outgoing Gmail emails.

- **Confirm actions:** Shows a dialog whenever you perform selected actions such as: **Archive**, **Delete**, and **Send**.
- **Reply all:** Makes 'Reply all' the default response for outgoing messages.
- **Auto-advance:** Automatically advances to another message after handling the message (viewing, archiving, deleting, etc.).
- **Message text size:** Allows you to choose the text size displayed within messages: **Tiny**, **Small**, **Normal**, **Large**, or **Huge**.
- **Batch operations:** Allows label operations.
- **Clear search history:** Removes all the searches you have performed.
- **Labels:** Selects which labels are synchronized.
- **Email notifications:** Activates the email notification icon to appear within the Notifications area of the Status bar when a new email message is received.
- **Select ringtone:** Plays a selected ringtone once a new email message is received.
- **Vibrate:** Activates a vibration once a new email message is received.

- **Notify once:** Sets the device to notify you only once for new incoming emails and not for every new message.

Email

Setting Up an Email Account

1. Press  and tap  (**Email**).
2. Press  > **Accounts**.
3. Press  > **Add account**.
4. Follow the onscreen instructions to setup an email account.
 - Tap **Manual setup** to configure your connection settings manually (POP3 or IMAP). Follow the onscreen prompts and enter the information specific to your carrier.
 - The first time you connect, you are asked to give this Internet mail account a unique onscreen name and enter a From name (displayed in your outgoing emails within the **From** field).

- The unique account name is used to differentiate this account from other email accounts accessed by your device. (See “Adding Additional Internet Email Accounts” on page 163.)

Note: Signal interruptions or incorrect username or password information can cause completion issues.

Opening Email

1. Press  and tap  (**Email**).
2. Press  and tap **Accounts**.
3. Select an email account.
4. Tap an email message.

Composing Email

1. Press  and tap  (**Email**).
2. Press  and tap **Accounts**.
3. Select an email account.
4. Tap **Inbox** to open your inbox.
5. Press  and tap **Compose**.
6. Enter the message recipient's email address in the **To** field.

- If you are sending the email to several recipients, separate the email addresses with a comma.
- You can add as many message recipients as you want.
- Choose recipients from the following sources:
 - **Recent** to access your list of recent contacts.
 - **Contacts** to access your current Contacts page.
 - **Search** to search for a contact from within your device.

Note: To send a carbon copy (Cc) or a blind carbon copy (Bcc) of the current email to other recipients, tap the **Cc/Bcc** fields.

7. Tap the **Subject** field and enter the email subject.
8. Tap the **Compose Mail** field and compose your email.
 - To add a file attachment, tap **Attach** (from the bottom of the screen), select a file, and tap **OK**.
 - Select the picture you want to attach.
 - Tap  to delete a selected attachment from your current email.

9. Once complete, tap **Send**.
 - Tap  > **Save as draft** to save the current email as a draft. To later view your draft email messages, from the Inbox, tap the **Drafts** folder.
 - To delete the current email message, tap **Discard**.

Adding Additional Internet Email Accounts

1. Press  and tap .
2. Press  and tap **Accounts** >  > **Add account**.
3. Follow the onscreen prompts to add additional Internet-based email accounts such as Yahoo!, Gmail, AOL, or other POP or IMAP accounts.

Configuring Email Settings

1. Press  and tap .
2. Tap the email account from the Accounts area of the Email screen.
3. Tap **Inbox** to open the contents of your inbox.
4. Press  and tap **More** > **Account settings**.
5. This menu provides both field information and settings:

- **General settings** allows you to configure:
 - **Account name** displays the name used by the device to track the account.
 - **Your name** displays the name used in the From field within your outgoing emails.
 - **Email check frequency** configures the frequency which the device queries the remote server for new email changes.
 - **Default account** assigns this account as the default used when sending out new emails.
- **Notification settings** allows you to configure:
 - **Email notifications** enables the device to display a status bar icon  when new emails have been received.
 - **Select ringtone** assigns an audible ringtone when a new or upcoming event is pending.
 - **Vibrate** assigns a vibration when a new or upcoming event is pending.
- **Server settings** allows you to configure:
 - **Incoming settings** provides access to the Domain, password, and exchange server parameter fields.

- **Outgoing settings** Adjusts the outgoing parameters, such as username, password and other outgoing connection parameters such as SMTP server.
- **Common settings** allows you to configure:
 - **Recent message** assigns the number of onscreen displayed inbox messages. Additional messages must be manually retrieved.
 - **Forward with files** allows you to include attachments when forwarding an email.
 - **Add signature:** Activates the email signature feature.
 - **Signature** allows you to create an outgoing email signature attached to new emails sent from your device.

Exchange Server Email (Outlook)

The main Email application () also provides access to your Microsoft® Outlook® Exchange server via your device. If your company uses Microsoft® Exchange Server 2003 or 2007 as their email system, you can use this email application to wirelessly

synchronize your email, Contacts, and Task information directly with your company's Exchange server.

Important: This Microsoft® Outlook® application does not utilize Microsoft® ActiveSync to synchronize the device to your remote Exchange Server. This synchronization is done wirelessly over the air (OTA) and not via a direct connection.

Setting Up an Exchange Email

1. Press  and tap  (**Email**).
2. Press  and tap **Accounts > Add account**.
3. Enter your **Email address** and **Password** information, and then tap **Next**. Consult your Network Administrator for further details.
 - **Email address:** your Microsoft® Outlook® (Exchange Server) email address.
 - **Password:** typically your network access password (case-sensitive).
4. Tap **Manual setup**.
5. Tap **Microsoft Exchange ActiveSync** (from the add email account screen).

6. When prompted to provide additional detailed information, scroll down the screen and tap **Next**.

7. Enter a **Domain\Username**, **Password**, and **Exchange Server** information.

- **Domain\Username:** Use the arrow keys to place your cursor before your username and enter your network domain\desktop login username.

Important: Key info here is the **Domain** information. Maintain the “\” between the Domain and Username.

- **Password:** typically your network access password (case-sensitive).
- **Exchange Server:** your exchange server remote email address. Typically starts with **mail.XXX.com**. Obtain this information from your company network administrator. Do not accept the default entry as this is a guess based on returned information.
- If your network requires SSL encryption, tap the **Use secure connection (SSL)** field to place a checkmark in the box and activate this additional level of security.

- **If your exchange server requires this feature, leaving this field unchecked can prevent connection.**

Note: Signal interruptions or incorrect username or password information can cause completion issues.

8. Read the onscreen activation disclaimer and, if prompted, tap **Next**.

9. Configure your **Email check frequency**, **Amount to synchronize** (days to synchronize between your device and server), and activate any other email settings, and then tap **Next**.

10. Identify your new account with a unique name and provide the outgoing name text then tap **Done**.

Note: Signal interruptions or incorrect username or password information can cause completion issues.

Important: You can synchronize over the air (not directly) with an Exchange Server running Microsoft® Exchange Server 2003 Service Pack 2 (SP2) or Microsoft® Exchange Server 2007.

Note: You can have multiple Email (Microsoft® Exchange ActiveSync) accounts active on your device.

Opening an Exchange Server/Outlook Email

1. Press  and tap  (**Email**).
2. Press  and tap **Accounts** and select the Exchange Server/Microsoft® Outlook® account.
3. Tap a message to read, manage, and reply to your email messages.
 - From your Inbox screen, press  to select options, such as **Refresh**, **Compose**, **Search**, **Accounts**, **List by**, or **Search**.
 - While in a message, press  to select messaging options, such as **Reply**, **Delete**, **Move to folder**, **Show pictures**, or **Text size**.

Composing Exchange Server/Outlook Email

1. From the Inbox, press  and tap **Compose**.
2. Enter the message recipient's email address in the **To** field.
 - Choose recipients from the following sources:
 - **Recent** to access your list of recent contacts.
 - **Contacts** to access your current Contacts page

- **Search** to search for a contact.

- If you are sending the email to several recipients, separate the email addresses with a comma.
- You can add as many message recipients as you want.

Note: To send an additional carbon copy (Cc) or a blind carbon copy (Bcc) of the current email to other recipients, tap the **Cc/Bcc** fields.

3. Tap the **Subject** field and enter the email subject.
4. Tap the **Body** field and compose your email.
 - To add a file attachment, tap **Attach** (from the bottom of the screen), select a file, and tap **OK**.
 - You can access the internal microSD card and navigate to the file you wish to attach.
 - Tap the file you wish to attach and tap **OK**.

To reply to an email message:

1. From the Inbox, tap an email message.
2. With the email message displayed, tap either **Reply** or **Reply all**.
 - If you select **Forward**, you must specify the message's recipients.

3. Enter a new message body and tap **Send**.

To delete an email message:

- ▶ Touch and hold an email (from your inbox list) and select **Delete** from the onscreen context menu.

– or –

With the email message displayed, tap  > **Delete**.

Configuring Exchange Server Email Settings

After your initial setup, you are taken to the Settings menu for your new Exchange/Microsoft® Outlook® Email account.

Account Settings: configures send and receive settings, such as email signature, notifications, syncing, etc.

1. Press  >  and tap  > **Accounts & sync**.
2. Tap  within the Exchange Server account field to reveal the account's synchronization settings screen.

3. Toggle either the **Sync Calendar** or **Sync Contacts** fields to force the device to manually resync either the exchange Contacts or Calendar entries.

– or –

Tap **Account settings** and configure any other email parameters you wish to synchronize. See “Synchronizing Accounts” on page 77.

To configure Exchange Server Email settings:

1. Press  >  and tap  > **More > Account settings**.
2. Tap the parameters you wish to synchronize.
 - **Account settings** allows you to configure:
 - **Account name** displays the name used by the device to track the account.
 - **Amount to synchronize** to assign the sync range for your incoming and outgoing emails between your device and your external exchange server. How many days worth of emails should the device and server synchronize. Choose from: **1 day, 3 days, 1 week, 2 weeks, or 1 month**.

- **Default account** assigns this account as the default used when sending out new emails.
- **Empty server trash:** Allows you to delete your email account's trash bin remotely.
- **Sync schedule:** Allows you to configure your email sync schedule.
- **Email size:** Configures the incoming email size allowed to pass through to your device automatically without user interaction. Larger emails will have to be retrieved manually.
- **Email notifications** enables the device to display a status bar icon  when new emails have been received.
- **Select ringtone** assigns an audible ringtone when a new or upcoming event is pending.
- **Vibrate** assigns a vibration when a new or upcoming event is pending.
- **Exchange server settings** provides access to the Domain, password, and exchange server parameter fields.
- **Sync Contacts** synchronizes the contacts between your device and the remote exchange server. A checkmark indicates the feature is enabled.
- **Sync Calendar** synchronizes your exchange calendar entries between your device and the remote exchange server. A checkmark indicates the feature is enabled.
- **Period to sync Calendar** assigns a period for your device to sync calendar events.
- **Add signature:** Activates the email signature feature.
- **Signature** allows you to create an outgoing email signature attached to new emails sent from your device.

3. Press  to return to the previous screen.

For more detailed Exchange Server email information, see “Exchange Server Email (Outlook)” on page 164. For more information on Exchange Server (Microsoft® Outlook®) Calendar synchronizing, Synchronizing Calendar Events Through Microsoft Exchange ActiveSync (page 96).

To create an Exchange Server Email Signature:

This signature can differ from any current Email signature on your local Microsoft® Outlook® client. This signature is applied to any outgoing emails originating on your device.

1. Press  >  and tap  > **More > Account settings.**
2. Scroll to the bottom of the list and tap **Signature.**
3. Delete the current default text and enter your new email signature.
4. Tap **OK** to store the new signature.

Configuring Data Synchronization Settings

This feature allows you to determine which current applications are synchronized with external server and at what intervals.

1. Press  >  > and tap  .
Accounts & sync. These settings can affect data minute usage, please refer to your current data plan for more details.
2. Tap any of the following options:

- **Background data:** Allows data synchronization to occur as a background function. It allows this to occur behind the scenes and does not affect any current use of the device.
 - **Auto-sync:** Requires the device to maintain synchronization with the remote server providing data to your selected applications.
3. Press  to store your changes and return to the Home screen.

Books

The Books application allows you to purchase ebooks through the Google ebooks Website.

1. Press  >  and tap **Books.**
2. Your downloaded ebooks display on the Books screen. Purchased ebooks display a yellow line under the specific ebook icon.

To search for an ebook:

1. Tap  to search for an ebook.
2. Enter keywords to narrow your search results (author, title, etc.).

3. Read and follow the onscreen instructions to download the ebook of your choice.

To manage your downloaded ebooks:

1. Press  >  and tap **Books**.
2. Press  and tap **Manage eBooks** .
3. Tap any of the following options:
 -  allows you to delete the selected ebook.
 -  allows you to view the ebook while offline.

To access Books settings:

1. Press  >  and tap **Books**.
2. Press  and tap .
 - **Storage location** allows you to copy your ebook from the device's internal storage to the SD card.
 - **About** the Books application software version.
 - **Terms of Service** allows you to display the Mobile Terms of Service associated with the Books application.
 - **Privacy Policy** allows you to display the Mobile Privacy Policy associated with the Books application.

- **Open source licenses** displays the license details for open source software and fonts.

Using the Android Market

The Android Market provides direct access to a large selection of applications which you can download and install on your device.

Accessing the Market

1. Press  and tap  >  (**Market**).
2. If not already logged in with your Google account, tap **Next**.
3. Tap **Sign in** and enter your Google account information.
4. Tap **Accept** to agree to the Android Market terms of service.

Selecting and Installing a Google Application

1. Press  and tap  > .
2. Browse through the categories, find an application you're interested in, and tap the name.

3. Read the application descriptions.
4. Tap **Install** (for free applications) or **Buy**.

Note: Use caution with applications which request access to any personal data, functions, or significant amounts of data usage times.

5. If prompted, follow the onscreen instructions to pay for the application.
6. Check the progress of the current download by opening the Notifications panel.
7. After the item is downloaded and installed on your device, the content download icon  displays in the notification area of the status bar.
8. On the Android Market screen, press  and tap **My apps**, tap the installed application in the list, and then tap **Open**.

Launching an Installed Google Application

1. Press  and tap .
2. Tap the newly installed application.
3. Read the application descriptions.

Reinstalling a Google Application

If the Android operating system is ever updated, any data contained on the device will be erased. The only data stored on the device are Google applications available via the Android Market.

Note: Pictures and music are stored on the microSD card. Contacts and Calendars are stored remotely on with your remote Google or Microsoft® Outlook® servers.

1. Log into your Google account via the device.
2. Press  and tap  > .
3. Press  and tap **My apps**.
4. Scroll through the list of previously downloaded Google applications and choose the one you wish to reinstall.
5. Follow the onscreen instructions.

Boost Applications

You can access a wide variety of applications in many different categories with your phone and data service. Currently, various applications, such as, Facebook, GPS Navigation (Telenav), Location based search (Poynt), Scvngr, and more, are available when you download and install the Boost ID pack.

Note: Some Boost Mobile data applications may not work with a Wi-Fi connection present. If prompted, disable your device's Wi-Fi feature while using these applications.

Download the Boost ID Pack

- ▶ Press  and tap . On the **Choose your ID screen** tap **Get New > Mobile ID**. Follow the onscreen prompts to install the **Boost ID** Pack.
- or –
- Press  and tap  >  (**Mobile ID**). Switch IDs. Select **Boost ID** or **Get New** if you don't have Boost ID installed.

Note: Once you download and install the Boost ID Pack, applications such as – Facebook, Telenav GPS Navigator, SCVNGR; and Poynt– display on your app menu. When you switch from the Boost ID pack to another ID pack, or choose a new ID Pack, the current applications remain installed and visible on your applications menu (page 5).

To download and install Boost apps:

1. Press  and tap  > **[application name]**. The browser will start and take you to the download menu for the application.
2. Follow the instructions to customize your application (such as selecting a favorite team or driver) or press  to explore your options.

3C. Entertainment: Mobile ID & Music

- ◆ Getting Started with Mobile ID and Music (page 173)
- ◆ Music (page 173)
- ◆ YouTube (page 175)

Getting Started with Mobile ID and Music

In order to access applications on your device, such as Telenav, Facebook, Twitter, etc – you first download and install the Boost ID Pack.

Once the package is installed you can also Manage your Boost Mobile Account; Keep up with email and text messages; Connect with friends on Facebook, MySpace and Hookt; and access popular applications and services like Telenav GPS Navigator, SCVNGR; Poynt; and popular websites like MTV, E!, Univision, CNN and many more.

With the Mobile ID Pack installed you can switch back to any other pack or install a new pack. The Boost Mobile applications will always be stored on your applications screen.

- ▶ Press  and tap . On the **Choose your ID screen** tap **Get New**. Follow the onscreen prompts to install the **Boost ID Pack**.

Music

Accessing the Music Player

1. Press  and tap  >  (**Music**).
2. From the Music display, select a tab:
 - **Artists** to display your music sorted by artist.
 - **Albums** to display your music sorted by album.
 - **Songs** to browse through all of your added music and any additional songs you have loaded onto your microSD card from your computer.
 - **Playlists** to select a customized playlist you've created to organize your music.

3. Once you've displayed a list of songs, you can browse through your available titles.
 - Tap a song or playlist to begin playing. (You can also highlight the playlist to begin listening.)

Creating a Playlist

1. Press  and tap  >  > **Songs**. Your device searches through your device and microSD card for compatible music files and then displays them onscreen.
2. Touch and hold a song to add to a playlist. This action reveals an onscreen popup menu.
3. Tap **Add to playlist** and select either a **Current playlist** or select **New** (to create a new playlist).
 - If you select **New**, delete the current default name, enter a name for your new playlist, and tap **Save**.

Assigning a Song as a Ringtone

1. Press  and tap  >  > **Songs**.
2. Touch and hold a song you'd like to use as your new ringtone. This action reveals an onscreen popup menu.
3. Tap **Use as phone ringtone** to store the selected song as your new default ringtone.
4. Confirm the song has been successfully assigned by navigating to your Phone ringtone menu.
 - Press  >  and tap  > **Sound** > **Phone ringtone**.
5. Confirm the new song is selected.

YouTube

YouTube™ is a video sharing website on which users can upload and share videos. YouTube™ displays a wide variety of user-generated video content, including movie clips, TV clips, and music videos, as well as video content such as video blogging, informational shorts and other original videos.

Note: YouTube is a data-intensive feature. Boost Mobile recommends that you upgrade to an unlimited data plan to avoid additional data charges.

1. Press  >  and tap  (**YouTube**).
2. Read the Terms of Service and press **Accept**.
3. Tap  to search for specific videos.
4. Touch a preview thumbnail or title link to view a video.
5. Press  to return to the previous page.

Note: It is not necessary to sign in to the YouTube site to view content. You can sign in to access other options, just sign in through the browser and tap **Sign in**.

3D. GPS Navigation

- ◆ GPS Services (page 176)
- ◆ Google Maps (page 177)
- ◆ TeleNav GPS Navigator (page 178)
- ◆ Navigation (page 182)

GPS Services

Your device's built-in GPS capability gives you access to a number of location-based services, including **Maps**, and **Navigation**.

Tip: Try avoiding the following conditions to receive better GPS signals:

- Inside or between buildings
- In a tunnel or underground passage
- In poor weather
- Around high-voltage or electromagnetic fields
- In a vehicle with tinted windows

Activating Location Mode

Before using any of the location-based services, you must turn on your device's location mode.

- Press  >  and tap  > **Location & security** > **Use GPS satellites**.

Note: Enabling GPS will drain your battery faster.

Activating Using Wireless Networks

This additional location feature uses open Wi-Fi and mobile network connections to assist in providing additional location accuracy.

1. Press  >  and tap  > **Location & security** > **Use wireless networks**.
 - Since this feature is based on Google's location service, you will need to agree to allow Google to collect anonymous information.
2. Tap **Agree** to accept the terms of service.

Google Maps

Use this application to find directions, location information, business addresses, etc., all right from your Samsung Transform™ Ultra. Determine your current location with or without GPS, get driving and transit directions, and get phone numbers and addresses for local businesses.

Before you begin using this feature you must activate your GPS hardware and agree to share location information with Google.

To enable your device's GPS Location feature:

1. Press  >  and tap  > **Location & security**.
2. Tap **Use GPS satellites**. A checkmark indicates the GPS location feature is enabled. (For additional location information, see "Location Settings" on page 69.)
 -  displays in the Notification area when the GPS is active.
 -  displays in the Notification area when the GPS is communicating.

To launch the Google™ Maps application:

- ▶ Press  and tap  >  (**Maps**).

To find your location:


1. Press  and tap  >  (**Maps**).
2. Press  and tap **My Location**.

To use Google™ Maps:

1. Press  and tap  >  (**Maps**).
 - If prompted, read the "What's new" message and tap **OK**.
2. Tap the magnification icons to zoom in or out of the current map view.
– or –

Press  for other Google Map features.

- Choose from: **Search**, **Directions**, **Starred Places**, **Clear Map**, **Join Latitude**, and **More (Labs, Sign In,**

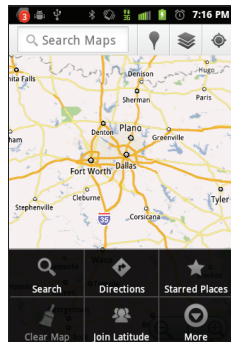

Cache Settings, Help, Terms, Privacy & Notices, and About).

To search for a keyword:

1. Press  and tap  >  (**Maps**).
2. Press  and tap **Search**.
3. Tap the search field (at the top of the screen), enter a keyword, and tap .
 - This keyword can be a category name (such as pizza, steak, burger), a business name (Samsung, Boost Mobile), or a Google friend who is sharing their location.
4. Tap  (bottom left) to reveal a detailed list of information corresponding to those matches now displayed on your screen with lettered pins.

TeleNav GPS Navigator

TeleNav GPS Navigator gives you turn-by-turn directions onscreen and over speakerphone. In order to use this application, you must first turn on the Enable GPS Satellites setting.

Note: Some features may be available only with a subscription to TeleNav GPS Navigator Premium.

Getting Started with TeleNav GPS Navigator

Before you can use TeleNav GPS Navigator, you must first install the Boost ID Pack.

- ▶ Press  and tap . On the **Choose your ID** screen tap **Get New**. Follow the onscreen prompts to install the **Boost ID** Pack.

Using TeleNav GPS Navigator

1. Press  and tap  > .
2. Read the disclaimer and touch **Accept** to acknowledge the terms of use.
3. Select an option and follow the onscreen instructions to take advantage of TeleNav's full suite of features.
 - **Drive To** lets you get driving directions from wherever you are to wherever you're going. Choices include:

- **Set Up Home:** default starting location for all driving directions.
 - **My Favorites:** user-defined favorite locations.
 - **Recent Places:** recently entered locations.
 - **Address:** manually entered street addresses.
 - **Contacts:** contacts listed in your phone's address book.
 - **Places:** locations by names or category.
 - **Airports:** local airports based on current GPS location.
- **Places** lets you search for locations from dozens of names or category options such as **Food/Coffee, Gas Stations, Gas by Price, Banks/ATMs, Wi-Fi, Parking Lots, Hotels & Motels, Movie Theaters**, etc.
- **Maps & Traffic** provides access to a 2D map of your current location, access to real-time traffic information, and other additional features.
- **Local Apps** allow you to search for **Movies** by title, location and time.

Getting Driving Directions

The built-in GPS hardware (when enabled) allows you to get driving directions to selected locations or establishments based on your current location.

Using a Physical Address

1. Press  and tap  >  > **Drive To** > **Address**.
2. Manually enter the new address and receive driving directions from the GPS network.
– or –
Tap  where you can speak the desired address. This is similar to calling 411 for directory assistance. (A fee may be incurred.)
3. Tap **Address** and then enter information (Address, City, State/ZIP, and Country) into any of the address fields.
4. Tap **Enter** or  to initiate your search. If prompted to select from a list of matches, tap the correct address.
5. Follow both the onscreen and audio directions.

After you enter the location and receive driving directions, you can alter the information being displayed by using one of three other driving options: **Traffic**, **Summary**, and **Search**.

To view the Summary of a route:

1. Press  and tap  >  > **Drive To** > **Address**.
2. Enter the physical address information, and tap **Done**.
3. Tap on Directions at the bottom of the screen.

To search nearby locations based on type:

1. Press  and tap  >  > **Drive To** > **Address**.
2. Enter the physical address information, and tap **Done**.
3. Tap on Places at the bottom of the screen to search for a location based on a category such as Food/Coffee, etc.

Using a Local Business Category

The Samsung Transform™ Ultra can also cross-reference your current location with local business and points of interest, such as Grocery Stores, Gas Stations, Wi-F, Malls, Hospitals, etc.

1. Press  and tap  >  > **Drive To** > **Places**.
2. Enter the physical address information, and tap **Done**.
3. Tap the **Category** field and then choose from one of the available category entries by touching an onscreen entry such as: **Food/Coffee**, **Gas Stations**, **Gas by Price**, **Banks/ATMs**, **WiFi**, **Hospitals**, etc..
– or –

Enter a keyword into the text field at the top to begin retrieving matches. Once you see a matching business name, touch the entry.

- Entries with more than one available category (a subcategory) appear with an adjacent gray arrow. These entries can be expanded and then closed.

4. Tap **Search** to store your information and begin the search.
5. Tap a matching entry based on star ratings and distances.

To search for the nearest gas station in your area:

1. Press  and tap  >  > **Drive To** > **Places** > **Category** > **Gas**.
2. Tap **Search** to begin the search.
3. Select a Price by Gas type.
4. Tap an entry from the list to display a new route to the selected gas station.

Creating a My Favorites Location

Once you have begun using TeleNav GPS Navigator to find your destination, you can then either recall those locations and add them to your list of favorite destinations or create a new entry from one of the available location categories (Address, Business, Airport, or Contacts).

To create a My Favorites location from a Recent Place:

1. Press  and tap  >  > **Drive To** > **Recent Places**.
2. Press and hold on the address you want to set as a Favorite. This displays a pop-up menu.
3. Select **Save** in the pop-up menu.
4. Edit the Address, Category and Label of the Favorite in the Create Favorite screen.
5. Select **Save** to save a Favorite.

Configuring Your Navigation Preferences

1. Press  and tap  >  > press  and tap **Settings**.
2. Touch an entry to change its current setting:
 - **Profile:** allows you to add personal information registered with the service.
 - **Phone:** contains your device phone number by default and cannot be altered.
 - **First Name/Last Name:** allows you to alter the current first and last name registered with the service.

- **Email:** allows you to create an associated email account for this application.
- **General:** allows change general settings, including:
 - **Language:** allows you to assign a current language. Default is **English (US)**.
 - **Distance Units:** allows you to alter the descriptions used for distances: **Km/Meters** or **Miles/Feet**.
- **Navigation:** lets you change navigation settings, including:
 - **Route Style:** allows you to choose the method which is used to provide you directions from Point A to Point B. The default is **Fastest**.
 - **Map Color:** allows you to alter the appearance of the onscreen map: **Auto**, **Daytime**, or **Nighttime**.
 - **Avoid:** allows you to setup obstacles that should be avoided when determining travel routes: **HOV Lanes**, **Tolls**, and **Traffic Delays**. Tap **Done** to set these parameters.

- **Map Styles** allows you to setup a preferred traffic display view: 2D Moving Maps or 3D Moving Maps (default).
- **BackLight:** allows you to assign the backlight settings: Always **On**, **On at Turns**, or **Device Default**.
- **Audio:** lets you change the audio read out given during your navigation session:
 - **Audio Guidance:** allows you to setup the level of detail used for the directions when spoken: **With Street Names**, **Without Street Names**, or **No Audio**.

Navigation

Another Google™ Maps navigation application is available on your device. It uses your current location (provided by GPS communication to your device) to provide various location-based services.

1. Press  and tap  >  (**Navigation**).
2. Read the onscreen disclaimer and tap **Accept**.
3. Choose from the following onscreen options:

- **Speak Destination** to use the recognition feature to search for matching locations in your area.
- **Type Destination** to manually enter a destination address (via either QWERTY or onscreen keyboard).
- **Contacts** to receive turn-by-turn directions to the address stored for a selected Contacts entry.
- **Starred Places** to obtain directions to locations that have been starred within Google™ Maps (maps.google.com).

Section 4

***Safety and Warranty
Information***



4A. Important Safety Information

- ◆ General Precautions (page 185)
- ◆ Maintaining Safe Use of and Access to Your Phone (page 186)
- ◆ Using Your Phone With a Hearing Aid Device (page 187)
- ◆ Caring for the Battery (page 189)
- ◆ Radio Frequency (RF) Energy (page 190)
- ◆ Samsung Mobile Products and Recycling (page 192)
- ◆ Owner's Record (page 193)
- ◆ User Guide Proprietary Notice (page 193)

This phone guide contains important operational and safety information that will help you safely use your phone. Failure to read and follow the information provided in this phone guide may result in serious bodily injury, death, or property damage.

General Precautions

There are several simple guidelines to operating your phone properly and maintaining safe, satisfactory service.

- To maximize performance, do not touch the bottom portion of your phone where the internal antenna is located while using the phone.
- Speak directly into the mouthpiece.
- Avoid exposing your phone and accessories to rain or liquid spills. If your phone does get wet, immediately turn the power off and remove the battery.
- Do not expose your phone to direct sunlight for extended periods of time (such as on the dashboard of a car).
- Although your phone is quite sturdy, it is a complex piece of equipment and can be broken. Avoid dropping, hitting, bending, or sitting on it.
- Any changes or modifications to your phone not expressly approved in this document could void your warranty for this equipment and void your authority to operate this equipment.

Note: For the best care of your phone, only authorized personnel should service your phone and accessories. Failure to do so may be dangerous and void your warranty.

Maintaining Safe Use of and Access to Your Phone

Do Not Rely on Your Phone for Emergency Calls

Mobile phones operate using radio signals, which cannot guarantee connection in all conditions. Therefore you should never rely solely upon any mobile phone for essential communication (e.g., medical emergencies). Emergency calls may not be possible on all cellular networks or when certain network services or mobile phone features are in use. Check with your local service provider for details.

Using Your Phone While Driving

Talking on your phone while driving (or operating the phone without a hands-free device) is prohibited in some jurisdictions. Laws vary as to specific restrictions. Remember that safety always comes first.

Tip: To purchase accessories, visit www.boostmobile.com/accessories.

Following Safety Guidelines

To operate your phone safely and efficiently, always follow any special regulations in a given area. Turn your phone off in areas where use is forbidden or when it may cause interference or danger.

Using Your Phone Near Other Electronic Devices

Most modern electronic equipment is shielded from radio frequency (RF) signals. However, RF signals from wireless phones may affect inadequately shielded electronic equipment.

RF signals may affect improperly installed or inadequately shielded electronic operating systems or entertainment systems in motor vehicles. Check with the manufacturer or their representative to determine if these systems are adequately shielded from external RF signals. Also check with the manufacturer regarding any equipment that has been added to your vehicle.

Consult the manufacturer of any personal medical devices, such as pacemakers and hearing aids, to determine if they are adequately shielded from external RF signals.

Note: Always turn off the phone in healthcare facilities, and request permission before using the phone near medical equipment.

Turning Off Your Phone Before Flying

Turn off your phone before boarding any aircraft. To prevent possible interference with aircraft systems, the U.S. Federal Aviation Administration (FAA) regulations require you to have permission from a crew member to use your phone while the plane is on the ground. To prevent any risk of interference, FCC regulations prohibit using your phone while the plane is in the air.

Turning Off Your Phone in Dangerous Areas

To avoid interfering with blasting operations, turn your phone off when in a blasting area or in other areas with signs indicating two-way radios should be turned off. Construction crews often use remote-control RF devices to set off explosives.

Turn your phone off when you're in any area that has a potentially explosive atmosphere. Although it's rare, your phone and accessories could generate sparks. Sparks can cause an explosion or fire, resulting in bodily injury or even death. These areas are often, but not always, clearly marked. They include:

- Fueling areas such as gas stations.
- Below deck on boats.
- Fuel or chemical transfer or storage facilities.
- Areas where the air contains chemicals or particles such as grain, dust, or metal powders.
- Any other area where you would normally be advised to turn off your vehicle's engine.

Note: Never transport or store flammable gas, flammable liquids, or explosives in the compartment of your vehicle that contains your phone or accessories.

Restricting Children's Access to Your Phone

Your phone is not a toy. Do not allow children to play with it as they could hurt themselves and others, damage the phone or make calls that increase your Boost invoice.

Please Note the Following Information When Using Your Handset

1. WARNING REGARDING DISPLAY

- The display on your handset is made of glass or acrylic and could break if your handset is dropped or if it receives significant impact. Do not use if screen is broken or cracked as this could cause injury to you.

2. WARRANTY DISCLAIMER: PROPER USE OF A TOUCH SCREEN HANDSET

- If your handset has a touchscreen display, please note that a touchscreen responds best to a light touch from the pad of your finger. Using excessive force or a metallic object when pressing on the touchscreen may damage the tempered glass surface and void the warranty. For more information, please refer to the "4B. Manufacturer's Warranty" on page 161.

Using Your Phone With a Hearing Aid Device

A number of Boost phones have been tested for hearing aid device compatibility. When some wireless phones are used with certain hearing devices (including hearing aids and cochlear implants), users may detect a noise which can interfere with the effectiveness of the hearing device.

Some hearing devices are more immune than others to this interference noise, and phones also vary in the amount of interference noise they may generate. ANSI standard C63.19 was developed to provide a standardized means of measuring both wireless phone and hearing devices to determine usability rating categories for both.

Ratings have been developed for mobile phones to assist hearing device users find phones that may be compatible with their hearing device. Not all phones have been rated for compatibility with hearing devices. Phones that have been rated have a label located on the box. **Your SPH-M930 has an M4 rating.**

These ratings are not guarantees. Results will vary depending on the user's hearing device and individual type and degree of hearing loss. If a hearing device is particularly vulnerable to interference noise; even a phone with a higher rating may still cause unacceptable noise levels in the hearing device. Trying out the phone with your hearing device is the best way to evaluate it for your personal needs.

M-Ratings: Phones rated M3 or M4 meet FCC requirements for hearing aid compatibility and are likely to generate less interference to hearing devices than unrated phones. (M4 is the better/higher of the two ratings.)

T-Ratings: Phones rated T3 or T4 meet FCC requirements and are likely to be more usable with a hearing device's telecoil ("T Switch" or "Telephone Switch") than unrated phones. (T4 is the

better/higher of the two ratings. Note that not all hearing devices have telecoils in them.)

Note: This phone has been tested and rated for use with hearing aids for some of the wireless technologies that it uses. However, there may be some newer wireless technologies used in this phone that have not been tested yet for use with hearing aids. It is important to try the different features of this phone thoroughly and in different locations, using your hearing aid or cochlear implant, to determine if you hear any interfering noise. Consult your service provider or the manufacturer of this phone for information on hearing aid compatibility. If you have questions about return or exchange policies, consult your service provider or phone retailer.

Hearing aid devices may also be measured for immunity to interference noise from wireless phones and should have ratings similar to phones. Ask your hearing healthcare professional for the rating of your hearing aid. Add the rating of your hearing aid and your phone to determine probable usability:

- Any combined rating equal to or greater than six offers excellent use.
- Any combined rating equal to five is considered normal use.
- Any combined rating equal to four is considered usable.

Thus, if you pair an M3 hearing aid with an M3 phone, you will have a combined rating of six for "excellent use." This is synonymous for T ratings.

Boost further suggests you experiment with multiple phones (even those not labeled M3/T3 or M4/T4) while in the store to find the one that works best with your hearing aid device. Should you experience interference or find the quality of service unsatisfactory after purchasing your phone, promptly return it to the store within 30 days of purchase. (A restocking fee may be applied to exchanges. More information about hearing aid compatibility may be found at: www.fcc.gov, www.fda.gov, and www.accesswireless.org.

Getting the Best Hearing Device Experience With Your Phone

To further minimize interference:

- Set the phone's display and keyboard backlight settings to ensure the minimum time intervals.
 1. Press  >  and tap **Settings > Display > Brightness** or **Screen timeout**.
 2. Tap the minimum time interval setting.
- Position the phone so the internal antenna is farthest from your hearing aid.
- Move the phone around to find the point with least interference.

Caring for the Battery

Protecting Your Battery

The guidelines listed below help you get the most out of your battery's performance.

- Recently there have been some public reports of wireless phone batteries overheating, catching fire, or exploding. It appears that many, if not all, of these reports involve counterfeit or inexpensive, aftermarket-brand batteries with unknown or questionable manufacturing standards. Boost is not aware of similar problems with Boost phones resulting from the proper use of batteries and accessories approved by Boost or the manufacturer of your phone. Use only manufacturer-approved batteries and accessories found at Boost Stores or they're also available at www.boostmobile.com/accessories. Buying the right batteries and accessories is the best way to ensure they're genuine and safe.
- In order to avoid damage, charge the battery only in temperatures that range from 32° F to 113° F (0° C to 45° C).
- Don't use the battery charger in direct sunlight or in high humidity areas, such as the bathroom.
- Never dispose of the battery by incineration.
- Keep the metal contacts on top of the battery clean.
- Don't attempt to disassemble or short-circuit the battery.
- The battery may need recharging if it has not been used for a long period of time.

- It's best to replace the battery when it no longer provides acceptable performance. It can be recharged hundreds of times before it needs replacing.
- Don't store the battery in high temperature areas for long periods of time. It's best to follow these storage rules:
 - Less than one month:
-4° F to 140° F (-20° C to 60° C)
 - More than one month:
-4° F to 113° F (-20° C to 45° C)

Disposal of Lithium Ion (Li-Ion) Batteries

Do not handle a damaged or leaking Li-Ion battery as you can be burned.

Special Note: Be sure to dispose of your battery properly. In some areas, the disposal of batteries in household or business trash may be prohibited.

Radio Frequency (RF) Energy

Understanding How Your Phone Operates

Your phone is basically a radio transmitter and receiver. When it's turned on, it receives and transmits radio frequency (RF) signals. When you use your phone, the system handling your call controls the power level. This power can range from 0.006 watt to 0.2 watt in digital mode.

Knowing Radio Frequency Safety

The design of your phone complies with updated NCRP standards described below.

In 1991–92, the Institute of Electrical and Electronics Engineers (IEEE) and the American National Standards Institute (ANSI) joined in updating ANSI's 1982 standard for safety levels with respect to human exposure to RF signals. More than 120 scientists, engineers and physicians from universities, government health agencies and industries developed this updated standard after reviewing the available body of research. In 1993, the Federal Communications Commission (FCC) adopted this updated standard in a regulation. In August 1996, the FCC adopted hybrid standard consisting of the existing ANSI/IEEE standard and the guidelines published by the National Council of Radiation Protection and Measurements (NCRP).

Body-Worn Operation

To maintain compliance with FCC RF exposure guidelines, if you wear a handset on your body, use a Samsung-supplied or Samsung-approved carrying case, holster or other body-worn accessory. If you do not use a body-worn accessory, ensure the antenna is at least **7/16 inch (1.5 centimeters)** from your body when transmitting. Use of non-Samsung-approved accessories may violate FCC RF exposure guidelines.

For more information about RF exposure, visit the FCC website at www.fcc.gov.

Specific Absorption Rates (SAR) for Wireless Phones

The SAR value corresponds to the relative amount of RF energy absorbed into the head of a user of a wireless handset.

The SAR value of a phone is the result of an extensive testing, measuring and calculation process. It does not represent how much RF the phone emits. All phone models are tested at their highest value in strict laboratory settings. But when in operation, the SAR of a phone can be substantially less than the level reported to the FCC. This is because of a variety of factors including its proximity to a base station antenna, phone design and other factors. What is important to remember is that each phone meets strict federal guidelines. Variations in SARs do not represent a variation in safety.

All phones must meet the federal standard, which incorporates a substantial margin of safety. As stated above, variations in SAR values between different model phones do not mean variations in safety. SAR values at or below the federal standard of 1.6 W/kg are considered safe for use by the public.

The highest reported SAR values of the SPH-M930 are:

Cellular/PCS CDMA

Head: 0.62 W/kg
Body-worn accessory: 0.89 W/kg
Product Specific Use: 0.95 W/kg

WLAN

Head: 0.05 W/kg
Body-worn accessory: 0.15 W/kg
Product Specific Use: 0.11 W/kg

FCC Radio Frequency Emission

This phone meets the FCC Radio Frequency Emission Guidelines.

FCC ID number: A3LSPHM930.

More information on the phone's SAR can be found from the following FCC website: <http://www.fcc.gov/oet/ea/>.

FCC Notice

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.

However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient the direction of the internal antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Samsung Mobile Products and Recycling

Samsung cares for the environment and encourages its customers to recycle Samsung mobile devices and genuine Samsung accessories, and other unwanted electronics, in accordance with local regulations and through an approved recycler. Proper disposal of your mobile device and its battery is not only important for safety, it benefits the environment. Batteries must be recycled or disposed of properly.

For more information about recycling your GALAXY, go to:

<http://mobile.samsungusa.com/recycling/index.jsp> or call **1-800-822-8837** for more information.

To find the nearest recycling location, go to:

www.samsung.com/recyclingdirect or call, **1-877-278-0799**.

WARNING: Never dispose of batteries in a fire because they may explode.

Owner's Record

The model, regulatory, and serial number are located on a nameplate inside the battery compartment. Record the serial number in the space provided below. This is helpful if you need to contact us about your phone in the future.

Model: Samsung M930

Serial No.:

User Guide Proprietary Notice

Nuance®, VSuite™, T9® Text Input, and the Nuance logo are trademarks or registered trademarks of Nuance Communications, Inc., or its affiliates in the United States and/or other countries.

User Guide template version 9a_FM (April 2009)

4B. Manufacturer's Warranty

◆ Standard Limited Warranty (page 194)

Your phone has been designed to provide you with reliable, worry-free service. If for any reason you have a problem with your equipment, please refer to the manufacturer's warranty in this section.

For information regarding the terms and conditions of service for your phone, please visit www.boostmobile.com or call Boost Mobile Customer Care at 1-800-BOOST-4U.

Standard Limited Warranty

What is Covered and For How Long?

SAMSUNG TELECOMMUNICATIONS AMERICA, LLC ("SAMSUNG") warrants that SAMSUNG's handsets and accessories ("Products") are free from defects in material and workmanship under normal use and service for the period commencing upon the date of purchase by the first consumer purchaser and continuing for the following specified period of time after that date:

Phone	1 Year
Batteries	1 Year
Case/Pouch/Holster	90 Days
Other Phone Accessories	1 Year

What is Not Covered?

This Limited Warranty is conditioned upon proper use of the Product. This Limited Warranty does not cover: (a) defects or damage resulting from accident, misuse, abnormal use, abnormal conditions, improper storage, exposure to liquid, moisture, dampness, sand or dirt, neglect, or unusual physical, electrical or electromechanical stress; (b) scratches, dents and cosmetic damage, unless caused by SAMSUNG; (c) defects or damage resulting from excessive force or use of a metallic object when pressing on a touch screen; (d) equipment that has the serial number or the enhancement data code removed, defaced, damaged, altered or made illegible; (e) ordinary wear and tear; (f) defects or damage resulting from the use of Product in conjunction or connection with accessories, products, or ancillary/peripheral equipment not furnished or approved by SAMSUNG; (g) defects or damage resulting from improper testing, operation, maintenance, installation, service, or adjustment not furnished or approved by SAMSUNG; (h) defects or damage resulting from external causes such as

collision with an object, fire, flooding, dirt, windstorm, lightning, earthquake, exposure to weather conditions, theft, blown fuse, or improper use of any electrical source; (i) defects or damage resulting from cellular signal reception or transmission, or viruses or other software problems introduced into the Product; or (j) Product used or purchased outside the United States. This Limited Warranty covers batteries only if battery capacity falls below 80% of rated capacity or the battery leaks, and this Limited Warranty does not cover any battery if (i) the battery has been charged by a battery charger not specified or approved by SAMSUNG for charging the battery; (ii) any of the seals on the battery are broken or show evidence of tampering; or (iii) the battery has been used in equipment other than the SAMSUNG phone for which it is specified.

What are SAMSUNG's Obligations?

During the applicable warranty period, provided the Product is returned in accordance with the terms of this Limited Warranty, SAMSUNG will repair or replace the Product, at SAMSUNG'S sole option, without charge. SAMSUNG may, at SAMSUNG's sole option, use rebuilt, reconditioned, or new parts or components when repairing any Product, or may replace the Product with a rebuilt, reconditioned or new Product. Repaired/replaced cases, pouches and holsters will be warranted for a period of ninety (90) days. All other repaired/replaced Products will be warranted for a period equal to the remainder of the original Limited Warranty on the original Product or for ninety (90) days, whichever is longer. All replaced Products, parts, components, boards and equipment shall become the

property of SAMSUNG. Except to any extent expressly allowed by applicable law, transfer or assignment of this Limited Warranty is prohibited.

What must you do to obtain warranty service?

To obtain service under this Limited Warranty, you must return the Product to an authorized phone service facility in an adequate container for shipping, accompanied by the sales receipt or comparable proof of sale showing the original date of purchase, the serial number of the Product and the seller's name and address. To obtain assistance on where to deliver the Product, please call SAMSUNG Customer Care at 1-888-987-4357. If SAMSUNG determines that any Product is not covered by this Limited Warranty, you must pay all parts, shipping, and labor charges for the repair or return of such Product.

You should keep a separate backup copy of any contents of the Product before delivering the Product to SAMSUNG for warranty service, as some or all of the contents may be deleted or reformatted during the course of warranty service.

What Are The Limits On SAMSUNG's liability?

THIS LIMITED WARRANTY SETS OUT THE FULL EXTENT OF SAMSUNG'S RESPONSIBILITIES, AND THE EXCLUSIVE REMEDY REGARDING THE PRODUCTS. ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION, IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL SAMSUNG

BE LIABLE FOR DAMAGES IN EXCESS OF THE PURCHASE PRICE OF THE PRODUCT OR FOR, WITHOUT LIMITATION, COMMERCIAL LOSS OF ANY SORT; LOSS OF USE, TIME, DATA, REPUTATION, OPPORTUNITY, GOODWILL, PROFITS OR SAVINGS; INCONVENIENCE; INCIDENTAL, SPECIAL, CONSEQUENTIAL OR PUNITIVE DAMAGES; OR DAMAGES ARISING FROM THE USE OR INABILITY TO USE THE PRODUCT. SOME STATES AND JURISDICTIONS DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, OR THE DISCLAIMER OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS AND DISCLAIMERS MAY NOT APPLY TO YOU.

SAMSUNG MAKES NO WARRANTIES OR REPRESENTATIONS, EXPRESS OR IMPLIED, STATUTORY OR OTHERWISE, AS TO THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE OR SUITABILITY OF ANY THIRD-PARTY SOFTWARE OR EQUIPMENT USED IN CONJUNCTION WITH THE PRODUCT, OR THE ABILITY TO INTEGRATE ANY SUCH SOFTWARE OR EQUIPMENT WITH THE PRODUCT, WHETHER SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT IS INCLUDED WITH THE PRODUCT DISTRIBUTED BY SAMSUNG OR OTHERWISE. RESPONSIBILITY FOR THE QUALITY, CAPABILITIES, OPERATIONS, PERFORMANCE AND SUITABILITY OF ANY SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT RESTS SOLELY WITH THE USER AND THE DIRECT VENDOR, OWNER

OR SUPPLIER OF SUCH THIRD-PARTY SOFTWARE OR EQUIPMENT.

Nothing in the Product instructions or information shall be construed to create an express warranty of any kind with respect to the Products. No agent, employee, dealer, representative or reseller is authorized to modify or extend this Limited Warranty or to make binding representations or claims, whether in advertising, presentations or otherwise, on behalf of SAMSUNG regarding the Products or this Limited Warranty.

This Limited Warranty gives you specific legal rights, and you may also have other rights that vary from state to state.

What is the procedure for resolving disputes?

ALL DISPUTES WITH SAMSUNG ARISING IN ANY WAY FROM THIS LIMITED WARRANTY OR THE SALE, CONDITION OR PERFORMANCE OF THE PRODUCTS SHALL BE RESOLVED EXCLUSIVELY THROUGH FINAL AND BINDING ARBITRATION, AND NOT BY A COURT OR JURY. Any such dispute shall not be combined or consolidated with a dispute involving any other person's or entity's Product or claim, and specifically, without limitation of the foregoing, shall not under any circumstances proceed as part of a class action. The arbitration shall be conducted before a single arbitrator, whose award may not exceed, in form or amount, the relief allowed by the applicable law. The arbitration shall be conducted according to the American Arbitration Association (AAA) Commercial Arbitration Rules applicable to consumer disputes. This arbitration provision is entered pursuant to the Federal

Arbitration Act. The laws of the State of Texas, without reference to its choice of laws principles, shall govern the interpretation of the Limited Warranty and all disputes that are subject to this arbitration provision. The arbitrator shall decide all issues of interpretation and application of this arbitration provision and the Limited Warranty.

For any arbitration in which your total damage claims, exclusive of attorney fees and expert witness fees, are \$5,000.00 or less ("Small Claim"), the arbitrator may, if you prevail, award your reasonable attorney fees, expert witness fees and costs as part of any award, but may not grant SAMSUNG its attorney fees, expert witness fees or costs unless it is determined that the claim was brought in bad faith. In a Small Claim case, you shall be required to pay no more than half of the total administrative, facility and arbitrator fees, or \$50.00 of such fees, whichever is less, and SAMSUNG shall pay the remainder of such fees. Administrative, facility and arbitrator fees for arbitrations in which your total damage claims, exclusive of attorney fees and expert witness fees, exceed \$5,000.00 ("Large Claim") shall be determined according to AAA rules. In a Large Claim case, the arbitrator may grant to the prevailing party, or apportion among the parties, reasonable attorney fees, expert witness fees and costs. Judgment may be entered on the arbitrator's award in any court of competent jurisdiction.

This arbitration provision also applies to claims against SAMSUNG'S employees, representatives and affiliates if any such claim arises from the Product's sale, condition or performance.

You may opt out of this dispute resolution procedure by providing notice to SAMSUNG no later than 30 calendar days from the date of the first consumer purchaser's purchase of the Product. To opt out, you must send notice by e-mail to optout@sta.samsung.com, with the subject line: "Arbitration Opt Out." You must include in the opt out e-mail (a) your name and address; (b) the date on which the Product was purchased; (c) the Product model name or model number; and (d) the IMEI or MEID or Serial Number, as applicable, if you have it (the IMEI or MEID or Serial Number can be found (i) on the Product box; (ii) on the Product information screen, which can be found under "Settings;" (iii) on a label on the back of the Product beneath the battery, if the battery is removable; and (iv) on the outside of the Product if the battery is not removable). Alternatively, you may opt out by calling 1-888-987-4357 no later than 30 calendar days from the date of the first consumer purchaser's purchase of the Product and providing the same information. These are the only two forms of notice that will be effective to opt out of this dispute resolution procedure. Opting out of this dispute resolution procedure will not affect the coverage of the Limited Warranty in any way, and you will continue to enjoy the benefits of the Limited Warranty.

Severability

If any portion of this Limited Warranty is held to be illegal or unenforceable, such partial illegality or unenforceability shall not affect the enforceability of the remainder of the Limited Warranty.

Samsung Telecommunications America, LLC
1301 E. Lookout Drive
Richardson, Texas 75082
Phone: 1-800-SAMSUNG
Phone: 1-888-987-HELP (4357)

©2011 Samsung Telecommunications America, LLC. All rights reserved.

No reproduction in whole or in part allowed without prior written approval.

Specifications and availability subject to change without notice.
[060111]

End User License Agreement for Software

IMPORTANT. READ CAREFULLY: This End User License Agreement ("EULA") is a legal agreement between you (either an individual or a single entity) and Samsung Electronics Co., Ltd. for software owned by Samsung Electronics Co., Ltd. and its affiliated companies and its third party suppliers and licensors that accompanies this EULA, which includes computer software and may include associated media, printed materials, "online" or electronic documentation ("Software"). BY CLICKING THE "I ACCEPT" BUTTON (OR IF YOU BYPASS OR OTHERWISE DISABLE THE "I ACCEPT", AND STILL INSTALL, COPY, DOWNLOAD, ACCESS OR OTHERWISE USE THE SOFTWARE), YOU AGREE TO BE BOUND BY THE TERMS OF THIS EULA. IF YOU DO NOT ACCEPT THE TERMS

IN THIS EULA, YOU MUST CLICK THE "DECLINE" BUTTON, AND DISCONTINUE USE OF THE SOFTWARE.

1. GRANT OF LICENSE. Samsung grants you the following rights provided that you comply with all terms and conditions of this EULA: You may install, use, access, display and run one copy of the Software on the local hard disk(s) or other permanent storage media of one computer and use the Software on a single computer or a mobile device at a time, and you may not make the Software available over a network where it could be used by multiple computers at the same time. You may make one copy of the Software in machine-readable form for backup purposes only; provided that the backup copy must include all copyright or other proprietary notices contained on the original.

2. RESERVATION OF RIGHTS AND OWNERSHIP. Samsung reserves all rights not expressly granted to you in this EULA. The Software is protected by copyright and other intellectual property laws and treaties. Samsung or its suppliers own the title, copyright and other intellectual property rights in the Software. The Software is licensed, not sold.

3. LIMITATIONS ON END USER RIGHTS. You may not reverse engineer, decompile, disassemble, or otherwise attempt to discover the source code or algorithms of, the Software (except and only to the extent that such activity is expressly permitted by applicable law notwithstanding this limitation), or modify, or disable any features of, the Software, or create derivative works based on the Software. You may not rent, lease, lend,

sublicense or provide commercial hosting services with the Software.

4. **CONSENT TO USE OF DATA.** You agree that Samsung and its affiliates may collect and use technical information gathered as part of the product support services related to the Software provided to you, if any, related to the Software. Samsung may use this information solely to improve its products or to provide customized services or technologies to you and will not disclose this information in a form that personally identifies you.

5. **UPGRADES.** This EULA applies to updates, supplements and add-on components (if any) of the Software that Samsung may provide to you or make available to you after the date you obtain your initial copy of the Software, unless we provide other terms along with such upgrade. To use Software identified as an upgrade, you must first be licensed for the Software identified by Samsung as eligible for the upgrade. After upgrading, you may no longer use the Software that formed the basis for your upgrade eligibility.

6. **SOFTWARE TRANSFER.** You may not transfer this EULA or the rights to the Software granted herein to any third party unless it is in connection with the sale of the mobile device which the Software accompanied. In such event, the transfer must include all of the Software (including all component parts, the media and printed materials, any upgrades, this EULA) and you may not retain any copies of the Software. The transfer may not be an indirect transfer, such as a consignment. Prior to the transfer, the end user receiving the Software must agree to all the EULA terms.

7. **EXPORT RESTRICTIONS.** You acknowledge that the Software is subject to export restrictions of various countries. You agree to comply with all applicable international and national laws that apply to the Software, including the U.S. Export Administration Regulations, as well as end user, end use, and destination restrictions issued by U.S. and other governments.

8. **TERMINATION.** This EULA is effective until terminated. Your rights under this License will terminate automatically without notice from Samsung if you fail to comply with any of the terms and conditions of this EULA. Upon termination of this EULA, you must cease all use of the Software and destroy all copies, full or partial, of the Software.

9. **THIRD-PARTY APPLICATIONS.** Certain third-party applications may be included with, or downloaded to this mobile device. SAMSUNG makes no representations whatsoever about any of these applications. Since SAMSUNG has no control over such applications, Purchaser acknowledges and agrees that SAMSUNG is not responsible for the availability of such applications and is not responsible or liable for any content, advertising, products, services, or other materials on or available from such applications. Purchaser expressly acknowledges and agrees that use of third-party applications is at Purchaser's sole risk and that the entire risk of unsatisfactory quality, performance, accuracy and effort is with Purchaser. It is up to Purchaser to take precautions to ensure that whatever Purchaser selects to use is free of such items as viruses, worms, Trojan horses, and other items of a destructive nature. References on this mobile device to any names, marks,

products, or services of any third-parties are provided solely as a convenience to Purchaser, and do not constitute or imply an endorsement, sponsorship, or recommendation of, or affiliation with the third-party or its products and services. Purchaser agrees that SAMSUNG shall not be responsible or liable, directly or indirectly, for any damage or loss caused or alleged to be caused by, or in connection with, use of or reliance on any such third-party content, products, or services available on or through any such application. Purchaser acknowledges and agrees that your use of any third-party application is governed by such third-party application provider's Terms of Use, License Agreement, Privacy Policy, or other such agreement and that any information or personal data you provide, whether knowingly or unknowingly, to such third-party application provider, will be subject to such third-party application provider's privacy policy, if such a policy exists. SAMSUNG DISCLAIMS ANY RESPONSIBILITY FOR ANY DISCLOSURE OF INFORMATION OR ANY OTHER PRACTICES OF ANY THIRD-PARTY APPLICATION PROVIDER.

10. Disclaimer of Warranty Regarding Third-Party Applications. SAMSUNG DOES NOT WARRANT OR MAKE ANY REPRESENTATIONS REGARDING THE AVAILABILITY, USE, TIMELINESS, SECURITY, VALIDITY, ACCURACY, OR RELIABILITY OF, OR THE RESULTS OF THE USE OF, OR OTHERWISE RESPECTING, THE CONTENT OF ANY THIRD-PARTY APPLICATION WHETHER SUCH THIRD-PARTY APPLICATION IS INCLUDED WITH THE PRODUCT DISTRIBUTED BY SAMSUNG, IS DOWNLOADED, OR

OTHERWISE OBTAINED. USE OF ANY THIRD-PARTY APPLICATION IS DONE AT PURCHASER'S OWN DISCRETION AND RISK AND PURCHASER IS SOLELY RESPONSIBLE FOR ANY DAMAGE TO YOUR MOBILE DEVICE OR LOSS OF DATA THAT RESULTS FROM THE DOWNLOADING OR USE OF SUCH THIRD-PARTY APPLICATIONS. SAMSUNG EXPRESSLY DISCLAIMS ANY WARRANTY REGARDING WHETHER PURCHASER'S PERSONAL INFORMATION IS CAPTURED BY ANY THIRD-PARTY APPLICATION PROVIDER OR THE USE TO WHICH SUCH PERSONAL INFORMATION MAY BE PUT BY SUCH THIRD-PARTY APPLICATION PROVIDER. ANY THIRD-PARTY APPLICATIONS PROVIDED WITH THIS MOBILE DEVICE ARE PROVIDED "AS IS" AND ON AN "AS AVAILABLE" BASIS, WITHOUT WARRANTIES OF ANY KIND FROM SAMSUNG, EITHER EXPRESS OR IMPLIED. TO THE FULLEST EXTENT POSSIBLE PURSUANT TO APPLICABLE LAW, SAMSUNG DISCLAIMS ALL WARRANTIES EXPRESS, IMPLIED, OR STATUTORY, INCLUDING, BUT NOT LIMITED TO, IMPLIED WARRANTIES OF MERCHANTABILITY, SATISFACTORY QUALITY OR WORKMANLIKE EFFORT, FITNESS FOR A PARTICULAR PURPOSE, RELIABILITY OR AVAILABILITY, ACCURACY, LACK OF VIRUSES, QUIET ENJOYMENT, NON-INFRINGEMENT OF THIRD PARTY RIGHTS OR OTHER VIOLATION OF RIGHTS. SAMSUNG DOES NOT WARRANT AGAINST INTERFERENCE WITH YOUR ENJOYMENT OF THE THIRD-PARTY APPLICATION, THAT THE FUNCTIONS CONTAINED IN THE THIRD-PARTY APPLICATION WILL MEET PURCHASER'S REQUIREMENTS, THAT THE OPERATION OF THE THIRD-PARTY APPLICATION WILL BE UNINTERRUPTED

OR ERROR-FREE, OR THAT DEFECTS IN THE THIRD-PARTY APPLICATION WILL BE CORRECTED. PURCHASER ASSUMES THE ENTIRE COST OF ALL NECESSARY SERVICING, REPAIR, OR CORRECTION. SOME JURISDICTIONS DO NOT ALLOW EXCLUSIONS OR LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS, SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU. NO ADVICE OR INFORMATION, WHETHER ORAL OR WRITTEN, OBTAINED BY PURCHASER FROM SAMSUNG SHALL BE DEEMED TO ALTER THIS DISCLAIMER OF WARRANTY REGARDING THIRD-PARTY APPLICATIONS, OR TO CREATE ANY WARRANTY.

11. **Limitation of Liability.** SAMSUNG WILL NOT BE LIABLE FOR ANY DAMAGES OF ANY KIND ARISING OUT OF OR RELATING TO THE USE OR THE INABILITY TO USE ANY THIRD-PARTY APPLICATION, ITS CONTENT OR FUNCTIONALITY, INCLUDING BUT NOT LIMITED TO DAMAGES CAUSED BY OR RELATED TO ERRORS, OMISSIONS, INTERRUPTIONS, DEFECTS, DELAY IN OPERATION OR TRANSMISSION, COMPUTER VIRUS, FAILURE TO CONNECT, NETWORK CHARGES, AND ALL OTHER DIRECT, INDIRECT, SPECIAL, INCIDENTAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES EVEN IF SAMSUNG HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. SOME JURISDICTIONS DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU. NOTWITHSTANDING

THE FOREGOING, SAMSUNG'S TOTAL LIABILITY TO PURCHASER FOR ALL LOSSES, DAMAGES, CAUSES OF ACTION, INCLUDING BUT NOT LIMITED TO THOSE BASED ON CONTRACT, TORT, OR OTHERWISE, ARISING OUT OF PURCHASER'S USE OF THIRD-PARTY APPLICATIONS ON THIS MOBILE DEVICE, OR ANY OTHER PROVISION OF THIS EULA, SHALL NOT EXCEED THE AMOUNT PURCHASER PAID SPECIFICALLY FOR ANY SUCH THIRD-PARTY APPLICATION THAT WAS INCLUDED WITH THIS MOBILE DEVICE. THE FOREGOING LIMITATIONS, EXCLUSIONS, AND DISCLAIMERS (INCLUDING SECTIONS 9, 10, AND 11) SHALL APPLY TO THE MAXIMUM EXTENT PERMITTED BY APPLICABLE LAW, EVEN IF ANY REMEDY FAILS ITS ESSENTIAL PURPOSE.

12. **U.S. GOVERNMENT END USERS.** The Software is licensed only with "restricted rights" and as "commercial items" consisting of "commercial software" and "commercial software documentation" with only those rights as are granted to all other end users pursuant to the terms and conditions herein.

13. **APPLICABLE LAW.** This EULA is governed by the laws of TEXAS, without regard to conflicts of laws principles. This EULA shall not be governed by the UN Convention on Contracts for the International Sale of Goods, the application of which is expressly excluded. If a dispute, controversy or difference is not amicably settled, it shall be finally resolved by arbitration in Seoul, Korea in accordance with the Arbitration Rules of the Korean Commercial Arbitration Board. The award of arbitration shall be final and binding upon the parties.

14. ENTIRE AGREEMENT; SEVERABILITY. This EULA is the entire agreement between you and Samsung relating to the Software and supersedes all prior or contemporaneous oral or written communications, proposals and representations with respect to the Software or any other subject matter covered by this EULA. If any provision of this EULA is held to be void, invalid, unenforceable or illegal, the other provisions shall continue in full force and effect.

Precautions for Transfer and Disposal

If data stored on this device is deleted or reformatted using the standard methods, the data only appears to be removed on a superficial level, and it may be possible for someone to retrieve and reuse the data by means of special software.

To avoid unintended information leaks and other problems of this sort, it is recommended that the device be returned to Samsung's Customer Care Center for an Extended File System (EFS) Clear which will eliminate all user memory and return all settings to default settings. Please contact the **Samsung Customer Care Center** for details.

Please provide warranty information (proof of purchase) to Samsung's Customer Care Center in order to provide this service at no charge. If the warranty has expired on the device, charges may apply.

Customer Care Center:
1000 Klein Rd.
Plano, TX 75074
Toll Free Tel: 1.888.987.HELP (4357)

Samsung Telecommunications America, LLC:
1301 East Lookout Drive
Richardson, Texas 75082
Phone: 1-800-SAMSUNG (726-7864)

If you are using a handset other than a standard numeric keypad, dial the numbers listed in brackets.

Phone: 1-888-987-HELP (4357)

©2011 Samsung Telecommunications America. All rights reserved.

No reproduction in whole or in part allowed without prior written approval. Specifications and availability subject to change without notice.

Index

Numerics

3G Data

Enabling/Disabling 145

3-Way Call 144

A

Accessibility

settings 81

Accessories

purchasing 8

Activation 5

Adapter

microSD Card 115

Add 2 Sec Pause 53

Add Account 79

Add to Home screen 33

Add Wait 53

Airplane Mode 62

Activating 62

Deactivating 62

Alarm 65

Creating an Alarm 102

Delete an Existing Alarm 104

Disable an Existing Alarm
104

Alarm Clock 102

Creating a New Alarm 102

Amount to Synchronize 79, 167

Android Development

activate Stay awake 77

Allow mock locations 77

USB debugging 77

Android Keyboard

ABC mode 41

entering numbers and
symbols 41

overview 40

Android Market 170

Accessing 170

Installing a Google
Application 170

Launching a Google

Application 171

My Downloads 171

Reinstalling a Google
Application 171

Selecting a Google
Application 170

Animation 66

Answering Calls 53

Applications 29

Boost 172

Applications Tab

Using 28

Assigning Pictures 125

Audible Touch Notifications 64

Audible selection 64

Audible touch tones 64

Haptic feedback 64

Screen lock sounds 64

Auto Brightness 67

Auto-Rotate Feature 36

Auto-Rotate Screen 66

- Auto-rotate Screen 36
- Auto-sync 169
 - Enabling 77

B

- Back Key 21
- Backing Up Text Messages 106
- Backlight 67
 - Keyboard 67
- Backup Your Data 106
- Battery 17–20
 - Capacity 17
 - Charging 18
 - Disposal 190
 - Extending Battery Life 19
 - Installing 18
- Bluetooth 129
 - Accessing the Paired Device's Settings 132
 - Changing Your Bluetooth Name 131
 - Device Name 131

- Disconnecting Paired Devices 132
- Discoverable 131
- Making Your Device Visible 131
- Pairing 131
- Scan for Devices 131
- Scanning for Bluetooth Devices 131
- Sending Items 132
- Settings 130
- Turning Off 129
- Turning On 129
- Boost Accessories 8
- Boost ID
 - download the Boost ID Pack 172
- Boost Service
 - Activation 5
 - Boost 411 8
- Brightness 67
- Browser

- Adding Bookmarks to Home Screen 154
- Clear cache 151
- Clear history 151
- Cookies 151
- Creating Bookmarks 153
- Creating Bookmarks from other Tabs 153
- Creating Website Settings 152
- Default zoom 150
- Enable JavaScript 151
- Enable Plug-ins 151
- Home Page 152
- Landscape-Only Display 150
- Page Settings 150
- Passwords 152
- Pop-up Windows 150
- Privacy Settings 151
- Resetting to Default 152
- Search Engine 153
- Security Settings 152

- Select Text 149
- Selecting Onscreen Text 150
- Text Size 150
- Browser Menu 148–154
- C**
 - Calculator 105
 - Calendar 96–101
 - Adding Events 96
 - Event Reminders 100
 - Call Forwarding 145
 - Call Log 83–87
 - Altering a Number 86
 - Erasing 87
 - Making a Call 86
 - Options 84
 - Saving a Number 86
 - Call Waiting 143
 - Caller ID 143
 - Calling in Lock Mode 73
 - Camcorder
 - Flash Mode 127
 - Gallery 127
 - Settings 126
 - Share 127
 - Video Quality 126, 127
 - White Balance 126
- Camera 120–128
 - see also Pictures
 - Gallery 122
 - Image Settings 123
 - Settings 121
 - Share 123
 - Store location in pictures 122
 - Switch to Camera 127
 - Taking Pictures 120
- Cannot install this Hardware 117
- Clear Cache 76
- Clear Defaults 76
- Clock 102
- Collecting Personal Data
 - accessibility settings 81
- Contact Icon 124
- Contacts 88
 - Adding a Number 93
 - Adding an Entry 88
 - Adding Entries to Your Favorites 95
 - Assigning a Picture 94
 - Assigning a Picture from Device 94
 - Assigning a Picture from online Gmail 95
 - Contact Menu Options 91
 - Deleting Entries 95
 - Dialing From 57
 - Editing 92
 - Editing a Number 93
 - Entry Options 92
 - Sending Via Bluetooth 132
 - Sending via Bluetooth 94
 - Sending via Gmail 94
- Context Menus 38
- Corporate Email 164
 - Account Settings 167
 - Backup 106

- Celendar Event
 - Synchronization 96
- Creation 164
- Deleting 167
- Email Signature 164
- Opening 166
- Replying 166
- Signature 81, 168
- Credential Storage
 - clear storage 74
 - set password 74

D

- Data Services 146
 - see also Web
 - Launching the Web 146
- Data Synchronization
 - Configuring 169
- Date & Time 68
 - Automatic 68
- Device (illus.) 10
- Device Administration 61, 74

- Device Administrators
 - selecting 61, 74
- Device Basics
 - Android keyboard overview 40
 - entering text using Swype 45
 - Swype keyboard overview 48
- Device Settings 60–77
 - Airplane Mode 62
 - Display Settings 66–69
 - Location Settings 69
 - Sound Settings 63–66
 - TTY Use 62
- Device Updates 105, 107, 108
- Dialing Options 52
- Disconnecting a Bluetooth
 - Device 132
- Display Screen 14, 68
- DivX 104
- Downloads 171

E

- Edit Sync Groups
 - Assigning a Picture to Device 95
- Email 157
 - Account Settings 163
 - Add Signature 80, 164, 168
 - Composing 162
 - Creation 161
 - Icons/Shortcuts 158
 - Notifications 158
 - Opening 162
- Email Check Frequency 163
- Emergency call 73
- Emergency Numbers 54
- Emoticons 43
- End-of-Call Options 56
- Enhanced 911 (E911) 55
- Entering Text 39–45
 - Additional QWERTY Text Options 43
 - Android Keyboard 39

- Emoticons 45
- Numbers 44
- QWERTY Keyboard 42
- Selecting Mode 39
- Smileys 44, 45
- Symbols 44
 - using Swype 45
- Erasing Device Content 76
- Event Reminders 100
- Events
 - Erasing a Day's 101
 - Erasing All Events 101
- Exchange Mail
 - Backup 106
- Exchange Server Email
 - ActiveSync Settings 167
 - Composing 166
 - Configuration 167
 - Configuring Settings 167
 - Creating a Signature 169
- Exchange Server Email (Outlook) 164

F

- Factory data reset 76
- Favorites 58, 95
 - Assigning 58
- FCC Notice 191
- File Viewer
 - Accessing 104
- Folders
 - Creating and Managing 34
- Forgot My Unlock Pattern 72

G

- Gallery 122
- Gmail 91
 - Accessing Email Messages 160
 - Account Settings 160
 - Assigning a Contacts Image 95
 - Backup 106
 - Create and Send 159
 - Creation 159
 - Deleting 160

- Opening 159
- Refresh 159
- Replying 160
- Signature 160
- Viewing a New Email 160
- Google
 - Account Management
 - Settings 78
 - Account Signin 50
 - Account Synchronization 78
 - Adding a Sync Account 78
 - Creating an Account 50
 - Synchronizing an Account 77
- Google Applications
 - Backup 106
- Google Search 26, 82
 - Using Text 22, 23
- Google Talk 30
- Google™ Maps 177
 - Enabling the GPS 177
 - Find My Location 177

Searching 178
Where Am I? 177

GPS Satellites

Usage 69

GPS Services 176

H

Haptic Feedback 65

History 83

Home Key 21

Home Screen 26

Adding Web Bookmarks
154

Customizing 31

Extended Screens 26

Overview 25

Homepage

Creating 153

I

ID Pack

Installation of First Pack 5

Installing Your First ID Pack 5

Mobile ID 5

Switching Packs 6

ID wallpapers 68

In-Call Options 55

Insert Smiley 45

International Dialing 61

International Dialing Code

Changing 61

Internet

see Web

Internet Email

Adding Additional Accounts
163

K

Key Functions 11

Keyboard

Swype 48

Keyboard Backlight 67

Keyboard timeout 67

L

Language

Settings 69

Location Mode

Activating 176

Location Settings 69

Lock Mode

Calling 73

Locking Device 71

Setup Screen Lock 70

Locking Your Device Screen
71

M

Making Calls 52

Market

Downloads 171

Media 65

Memory

Clearing Application Cache
76

Internal phone storage 74,
75

Management 74

SD card 75

- Uninstalling Third-Party Applications 76
- Menu i
 - Navigation 24
- Menu Key 20
 - Add 20
 - Mobile ID 21
 - Notifications 21
 - Search 21
 - Settings 21
 - Wallpaper 20
- Menu Navigation 36
 - selecting menu items 37
 - Using your Keyboard 37
- Message
 - Settings 142
- Message Threads
 - Deleting 142
- Messaging
 - Email 157
 - Multimedia Messaging 138
- Text Messaging 137
- microSD 113, 114
 - Available space 75
 - Before You Begin 115
 - Total space 75
 - Troubleshooting Connection 116
- microSD Card 113–119
 - Adapter 115
 - Formatting 118
 - My Files 104
 - Re-insertion 114
 - Removal 113
 - Viewing Memory 118
 - Write Protection 115
- Microsoft Exchange
 - ActiveSync 164
- Microsoft Exchange
 - ActiveSync Email
 - Account Management Settings 79
- Microsoft® Outlook®
 - Account Management Settings 79
- Missed Calls 54
- MMS Text Messaging 138
- Mock Locations
 - allowing for development 77
- Multimedia Messaging 138
 - Composing 139
 - Opening 141
 - Replying to 141
 - Settings 142
- Music 173–174
 - Assigning a New Ringtone 174
 - Creating a Playlist 174
 - Getting Started 173
 - Player 173
 - Playlist 174
 - Using a Song as a Ringtone 174

My Files 104

N

Navigating the Menus 24

Navigating the Web 147

Navigation 182

Non-Market Installations 70

North American Dialing 60

Notification Volume 65

O

Outlook

Synchronizing 79

Outlook Email 164

Owner's Record 193

P

Page Navigation 27

Pairing Bluetooth Devices 131

Phone Book

see Contacts

Phone Number

Displaying 39

Finding 57

Saving 56

Phone vibrate 65

Picasa 124

Pico TTS 111

Picture ID 125

Pictures

Sending Via Bluetooth 132

Taking Pictures 120

Plus Code Dialing 59, 60

Profile Updates

Downloading 107

Q

Quick Screen Access 27

R

Recently-Used Applications

Accessing 35

Resetting Your Device 76

Ringers

Silent Model 66

Vibrate 65

Ringtone 65

Ringtones

Setting for Messages 64

Setting for Notifications 64

Setting for Voice Calls 63

Types 63

Running Services

Managing 75

S

Safety Information 185–193

Samsung Software 108

Saving a Phone Number 56

Screen Lock Settings

disabling 73

Screen Orientation 66

Screen Timeout 67

Search Key 21

Searching

Using Text 23

Using Voice 23

Secure Credentials

install from SD card 74

Security 70–73

Menu 70

- Security Settings
 - device administration 61, 74
- Select Language 69
- Set Wallpaper 68
- Setting the Language
 - English 69
 - Español 69
- Settings 60–77
 - accessibility 81
- Share
 - AllShare 123
 - Bluetooth 123
 - Email 124
 - Gmail 124
 - Messaging (MMS) 124
- Shortcuts
 - Adding via Home screen 33
 - Creating 31
 - Deleting 33
 - Via Applications Tab 32
- Signature 81, 160, 164, 168, 169

- Silent Mode 66
- Silent mode 66
- Smileys 43
- SMS Text Messaging 137
- Software Updates
 - Downloading 105
 - Firmware 105
- Speed Dialing 58
- Favorites 58
- Standard Limited
 - Warranty 194
- Status bar 25
- Stay awake
 - Android development use 77
- Swipe
 - ABC mode 49
 - configuring 45
 - enabling 45
 - entering numbers and symbols 49
 - entering text using 45

- keyboard overview 48
- selecting a text input
 - mode 47
- Synchronizing Accounts 77
- System Update 107

T

- Taking Pictures 120
- Talk 30
- TeleNav GPS Navigator
 - Configuring Preferences 181
 - Creating a My Favorites
 - Location 181
 - Getting Driving
 - Directions 179
 - Loading 178
 - Overview 178
 - Search for Nearest Gas
 - Station 181
 - Using 178
 - Using a Local Business
 - Category 180

- Using a Physical Address 179
- Text
 - Selecting on Web Page 150
- Text Entry
 - see Entering Text 42
- Text Input Mode
 - selecting in Swype 47
- Text Message
 - Backup 106
- Text Messaging 137
 - Settings 142
- Text-to-Speech 111
 - Language 112
 - Settings 111
- Third-Party Applications
 - Uninstalling 76
- Three-Way Calling 144
- TTY Use 62
- Turning Your Device On and Off 17

U

- Unknown 70
- Unknown Installations 70
- Unlock Pattern 71
 - Changing the Pattern 73
 - Configuring Settings 72
 - Creating 71
 - Forgotten Your Pattern 72
 - Use visible pattern 72
- Unlocking Your Device
 - Screen 71
- Update Firmware 105
- Updates
 - Downloading 108
- Updating Firmware
 - OTA 107
- Updating Your Device
 - Firmware 105
- Updating Your Profile 107
- Updating Your Samsung Software 108

V

- USB debugging
 - Android development use 77
- Use GPS satellites 177
- Use Wireless Networks 69
 - Activating 176
- Using Favorites 58
- Vibrate 65
 - Haptic Feedback 65
- Video
 - Encoding Settings 104
- Videos
 - Recording 125
 - Settings 127
- Visible Passwords 73
 - Disable 73
- Voice Dialer 109
 - Activation 109
 - Calling a Number 110
 - Making a Call 110
- Voice Dialing 110
- Voice Input 39

Voice Search 11, 22, 23
 Additional Functions 24

Voicemail
 Notification 136
 Retrieving 137
 Setting Up 7, 136

Volume
 Alarm volume 65
 Media 65
 Media volume 65
 Notification volume 65
 Ringer 65
 Ringtone volume 65

W

Wallpaper 124
 Home screen 125

Wallpapers 68

Web 146–154
 see also Data Services
 Browser Menu 148–154
 Email 157

Going to a Webpage 148
Launching 146
Navigating 147

Wi-Fi

Connecting to a Network
 154

Direct Settings 156

Manually Scanning 155

Settings 155, 156

Status Indicators 155

Turning Off 154

Turning On 154

Window Animation 66

Wireless Networks 69

Write Protection 115

Y

YouTube 175